



## WARNING



**THE POWERMAX800 IS A MULTI-VOLTAGE, MULTI-PHASE POWER UNIT. POWER AND PHASE SETTINGS IN THE POWERMAX800 MAY NEED TO BE CHANGED TO ACCOMMODATE YOUR INPUT POWER REQUIREMENTS:**

<b>U.S.:</b> 208/240/480V, 1 $\phi$ /3 $\phi$	<b>Factory Setting:</b> 240V, 1 $\phi$
<b>International:</b> 200/230/400V, 1 $\phi$ /3 $\phi$	<b>Factory Setting:</b> 400V, 3 $\phi$
<b>CE Certified:</b> 400V, 3 $\phi$	<b>Not adjustable</b>

**PRIOR TO INSTALLATION OF THE POWER SUPPLY, A CERTIFIED ELECTRICIAN SHOULD DETERMINE THE INPUT VOLTAGE AND PHASE. THE POWERMAX800 SHOULD THEN BE SET ACCORDINGLY, IF NECESSARY. REFER TO SECTION 3, SETUP, IN THE OPERATOR MANUAL TO CHANGE VOLTAGE AND PHASE SETTINGS.**

**WEAK PERFORMANCE BY THE POWERMAX800 MAY INDICATE THAT THE INPUT VOLTAGE IS A STEP LOWER THAN THE POWER SUPPLY'S SETTING. THE PROPER POWER SUPPLY SETTING WILL ENSURE OPTIMAL PERFORMANCE.**