

HySpeed **HT2000LHF®**

Plasma Arc Cutting System

Product Configuration Manual
803050 – Revision 3

Hypertherm®
*The world leader in
plasma cutting technology*

HySpeed HT2000LHF

Product Configuration Manual

(P/N 803050)

Revision 3 – March, 2003

**Hypertherm, Inc.
Hanover, NH USA**

www.hypertherm.com

© Copyright 2003 Hypertherm, Inc.
All Rights Reserved

Hypertherm, HT, LongLife, and HySpeed are trademarks of Hypertherm, Inc.
and may be registered in the United States and/or other countries

Hypertherm, Inc.

*Etna Road, P.O. Box 5010
Hanover, NH 03755 USA
603-643-3441 Tel (Main Office)
603-643-5352 Fax (All Departments)
800-643-9878 Tel (Technical Service)
800-737-2978 Tel (Customer Service)*

Hypertherm Automation, LLC

*5 Technology Drive
West Lebanon, NH 03755 USA
603-298-7970 Tel
603-298-7977 Fax*

Hypertherm Plasmatechnik, GmbH

*Technologiepark Hanau
Rodenbacher Chaussee 6
63457 Hanau-Wolfgang, Deutschland
49 6181 58 2100 Tel
49 6181 58 2134 Fax
49 6181 58 2123 (Technical Service)*

Hypertherm (S) Pte Ltd

*No. 19 Kaki Bukit Road 2
K.B. Warehouse Complex
Singapore 417847, Republic of Singapore
65 6 841 2489 Tel
65 6 841 2490 Fax
65 6 841 2489 (Technical Service)*

Japan

*1952-14 Yata-Natsumegi
Mishima City, Shizuoka Pref.
411-0801 Japan
81 0 559 75 7387 Tel
81 0 559 75 7376 Fax*

Hypertherm UK, Ltd

*9 Berkeley Court, Manor Park
Runcorn, Cheshire, England WA7 1TQ
44 1928 579 074 Tel
44 1928 579 604 Fax*

France

*15 Impasse des Rosiers
95610 Eragny, France
00 800 3324 9737 Tel
00 800 4973 7329 Fax*

Hypertherm S.r.l.

*Via Torino 2
20123 Milano, Italia
39 02 725 46 312 Tel
39 02 725 46 400 Fax
39 02 725 46 314 (Technical Service)*

Hypertherm Europe B.V.

*Vaartveld 9
4704 SE Roosendaal, Nederland
31 165 596908 Tel
31 165 596901 Fax
Technical Service:
00 800 49 73 7843 – toll-free in Europe
31 165 596900 Tel*

Hypertherm Brasil Ltda.

*Rua Visconde de Santa Isabel, 20 – Sala 611
Vila Isabel, RJ
Brasil CEP 20560-120
55 21 2278 6162 Tel
55 21 2578 0947 Fax*

TABLE OF CONTENTS

Section 1 SPECIFICATIONS.....	1-1
System Components	1-1
LHF Power Supply	1-1
LHF Machine Torch.....	1-1
LHF Gas Console.....	1-1
Argon-Hydrogen Manifold – Optional	1-1
Digital Remote Voltage & Current Control Console	1-1
Programmable Remote Voltage & Current Control Console.....	1-1
Remote Current Control Console.....	1-1
Initial Height Sensing – Optional	1-2
Timer/Counter – Optional.....	1-2
Water Muffler – Optional	1-2
CommandTHC – Optional.....	1-2
Specifications.....	1-2
System Requirements	1-2
LHF Power Supply	1-3
LHF Machine Torch.....	1-3
LHF Gas Console.....	1-4
Argon-Hydrogen Manifold – Optional	1-4
Digital Remote Voltage & Current Control Console	1-5
Programmable Remote Voltage & Current Control Console.....	1-5
Remote Current Control Console.....	1-5
Initial Height Sensing – Optional	1-6
Timer/Counter – Optional.....	1-6
Water Muffler – Optional	1-6
CommandTHC – Optional.....	1-6
Section 2 ORDERING PROCEDURE	2-1

TABLE OF CONTENTS

Section 1**SPECIFICATIONS**

System Components**LHF Power Supply**

The LHF power supply houses two 100-amp, 15 kHz choppers, the torch's high-frequency starting circuit and an optional internal Torch Height Control (THC).

LHF Machine Torch

The LHF machine torch is liquid-cooled and capable of cutting most metals from gauge to 2-inch (50 mm) thickness and from gauge to 1-inch (25 mm) thickness for production cutting. **To achieve consumable long life, all cuts must begin and end on the plate surface.**

LHF Gas Console

This unit houses metering and solenoid valves for shield and plasma gases, flow meters, pressure gauges for plasma gases, and a pressure gauge for the shield gas supply.

Argon-Hydrogen Manifold – Optional

This unit houses a flowmeter for argon-hydrogen, a metering valve, a plasma gas outlet switch and a plasma-off valve.

Digital Remote Voltage & Current Control Console

This unit includes LED displays that indicate the setpoints for volts and amperes prior to starting the arc. The displays then automatically display the actual values of the voltage and current while cutting. The digital remote has potentiometers to set and adjust the voltage and current.

Programmable Remote Voltage & Current Control Console

This unit includes LED displays that indicate the setpoints for volts and amperes prior to starting the arc. The displays then automatically display the actual values of the voltage and current while cutting. The programmable remote functions are controlled by the CNC.

Remote Current Control Console

This unit contains a manually adjustable thumbwheel to set arc current only.

SPECIFICATIONS

Initial Height Sensing – Optional

This unit, used with 2 inductive probes, is designed to automatically detect the workpiece surface and move the torch to the pierce position. This system can be used for underwater cutting, cutting at the water line, or cutting above water.

Timer/Counter – Optional

The timer/counter allows the operator to monitor the number of arc starts and the cumulative time that the arc is on in hours. The arc starts can be reset.

Water Muffler – Optional

The water muffler for the LHF system is an option which greatly improves cutting safety and pollution control capabilities. The water muffler can be used to cut above, below and at the water line. Refer to the Water Muffler instruction manual 802050 for more detailed information. The water muffler cannot be used with the stainless steel torch.

CommandTHC – Optional

The CommandTHC is an external torch height control and initial height sensing system designed for plasma cutting applications on an x-y cutting table. Refer to the CommandTHC instruction manual 802780 for more detailed information. Refer to the CommandTHC Product Configuration Manual 802600 to order a CommandTHC system.

Specifications

System Requirements

Power Requirements:

Refer to power supply specifications below:

Gas Requirements:

Plasma Gas Types	Oxygen, Nitrogen, Air, Argon-Hydrogen (H35 = 35% Hydrogen/ 65% Argon)
Shield Gas Types	Air, Nitrogen, Carbon Dioxide

Gas Quality:

Oxygen	99.5% pure (liquid gas recommended)
Nitrogen	99.995% pure (liquid gas recommended)
Air	Clean, dry, oil-free (compressed or liquid gas recommended)
Carbon Dioxide	99.5% pure (compressed or liquid gas recommended)

Plasma Gas Inlet Pressures and Flow Rates:

Air	90 psi +/- 10 psi (6.2 bar +/- 0.7 bar) at 82 scfh (2322 l/h)
Oxygen	120 psi +/- 10 psi (8.3 bar +/- 0.7 bar) at 90 scfh (2549 l/h)
Nitrogen	120 psi +/- 10 psi (8.3 bar +/- 0.7 bar) at 80 scfh (2265 l/h)
Argon-Hydrogen	120 psi +/- 10 psi (8.3 bar +/- 0.7 bar) at 105 scfh (2973 l/h)

Shield Gas Inlet Pressures and Flow Rates:

Air	90 psi +/- 10 psi (6.2 bar +/- 0.7 bar) at 280 scfh (7929 l/h)
Carbon Dioxide	90 psi +/- 10 psi (6.2 bar +/- 0.7 bar) at 220 scfh (6230 l/h)
Nitrogen	90 psi +/- 10 psi (6.2 bar +/- 0.7 bar) at 275 scfh (7787 l/h)

LHF Power Supply

Maximum OCV (U_0)	280 VDC
Output Current (I_2).....	40 – 200 amps
Output Voltage (U_2)	150 VDC
Duty Cycle Rating (X)	100% up to 30 kW. Beyond 30 kW, Duty Cycle (X) = $(30 \text{ kW}/\text{Actual Power})^2$ Eg: If Actual Power = 32 kW, then Duty Cycle (X)= $(30 \text{ kW}/32 \text{ kW})^2 = 88\%$
Ambient Temperatures/Duty Cycle	Power supplies will operate between +14° and 104° F (-10° and +40° C). Power supplies operated in an ambient temperature above 86° F (30° C) may show some decrease in duty cycle.
Power Factor ($\cos\varphi$).....	0.86

Input Power (Input Voltage (U_1) x Input Current (I_1)):

073227 with THC; 073228 without THC.....	200 VAC, 3PH, 50 Hz, 108 amps
073229 with THC; 073230 without THC.....	208 VAC, 3PH, 60 Hz, 104 amps
073231 with THC; 073232 without THC.....	240 VAC, 3PH, 60 Hz, 90 amps
073235 with THC; 073236 without THC.....	400 VAC, CE, 3PH, 50 Hz, 56 amps
073262 with THC; 073263 without THC.....	440 VAC, 3PH, 50-60 Hz, 49 amps
073233 with THC; 073234 without THC.....	480 VAC, 3PH, 60 Hz, 45 amps
073237 with THC; 073238 without THC.....	600 VAC, 3PH, 60 Hz, 36 amps

Dimensions and Weight:

Width	28-1/4" (710 mm)
Height.....	35-1/2" (900 mm); 40-3/4" (1035 mm) on CE units
Depth.....	41-1/4" (1045 mm)
Weight	780 lbs (351 kg); 800 lbs (363 kg) on CE units
Cooling	Forced Air (Class F)
Coolant Tank Capacity.....	2.9 gallons (11 liters)

LHF Machine Torch

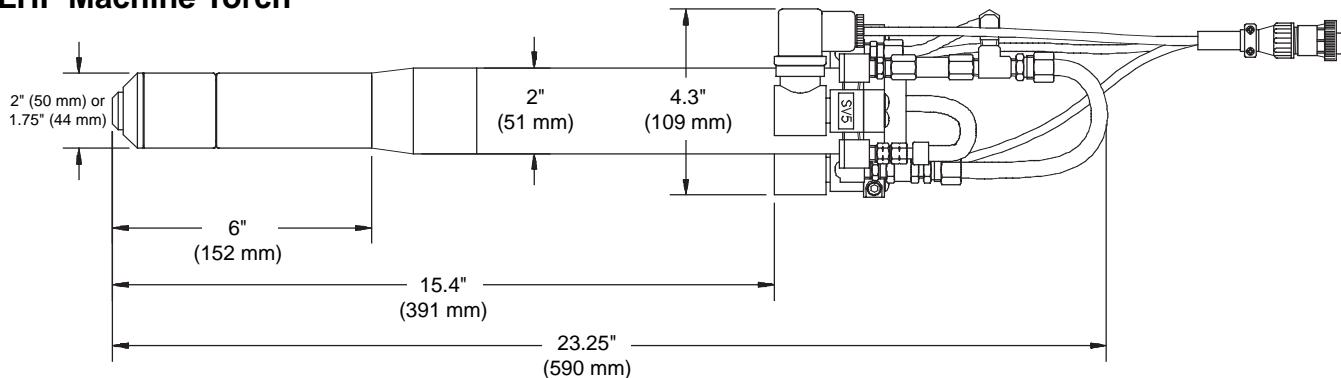


Figure 1-1 LHF Machine Torch (standard torch shown.)

Maximum cutting thickness 2" (50 mm)

Maximum current at 100% duty cycle 200 amps

Plasma and Shield Gas Flow Refer to the *Cut Charts* in the **Operation** section of instruction manual 803020 for specific gas requirements.

Water coolant flow rate 0.8 gpm (3.0 l/min)

Weight 3 lbs (1.36 kg)

SPECIFICATIONS

LHF Gas Console

Dimensions and Weight:

Width	11.5" (290 mm)
Height.....	14.5" (370 mm)
Depth.....	4" (100 mm)
Weight	23 lbs (10.4 kg)

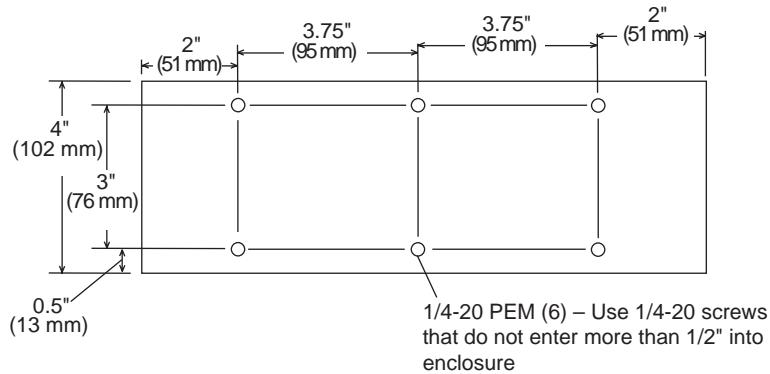


Figure 1-2 Mounting Dimensions – Gas Console

Argon-Hydrogen Manifold - Optional

Dimensions and Weight:

Width	5" (127 mm)
Height.....	10" (254 mm)
Depth.....	5" (127 mm)
Weight	5.75 lbs (2.6 kg)

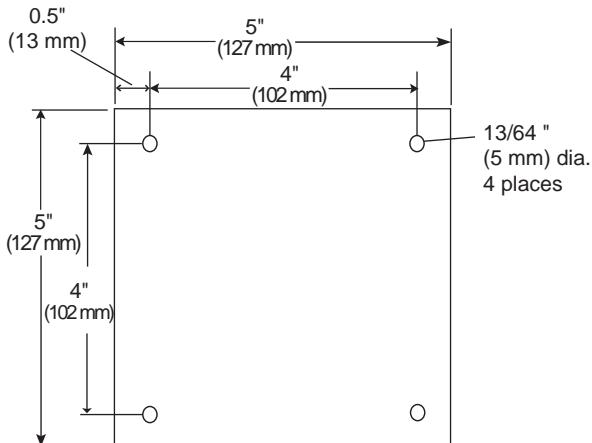


Figure 1-3 Mounting Dimensions – Argon-Hydrogen Manifold

Digital Remote Voltage & Current Control Console

Controls.....Voltage adjust potentiometer: Adjusts arc cutting voltage and displays value on LEDs.
 Current adjust potentiometer: Adjusts arc current and displays value on LEDs.
 Control rangeCurrent: 40-200 amps/Voltage:
 100-200 volts
 Control resolution.....Current: 10 amps/ Voltage: 5 volts

Dimensions and Weight:

Width.....11.5" (292 mm)
 Height.....3" (76 mm)
 Depth13.4" (340 mm)
 Weight.....5.3 lbs (2.4 kg)

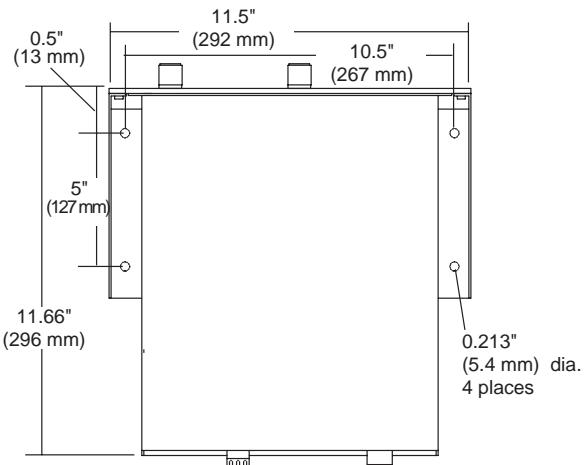


Figure 1-4 Mounting Dimensions – Digital Remote Voltage and Current Control Console

Programmable Remote Voltage and Current Control Console

Controls.....None. Controlled through guidance CNC.
 Control rangeCurrent: 40-200 amps/Voltage:
 100-200 volts
 Control resolution.....Current: 10 amps/ Voltage: 5 volts

Dimensions and Weight:

Width.....11.5" (292 mm)
 Height.....3" (76 mm)
 Depth12.5" (318 mm)
 Weight.....5.3 lbs (2.4 kg)

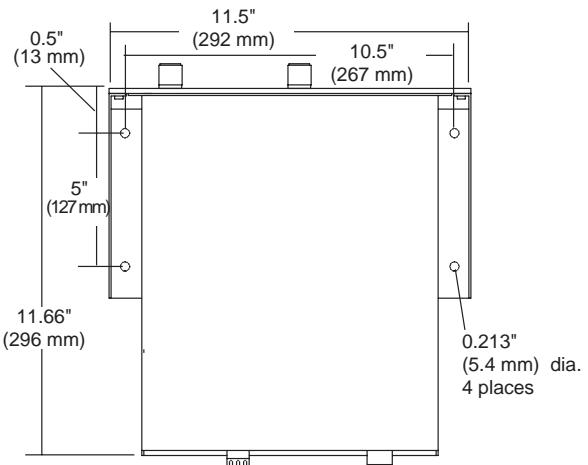


Figure 1-5 Mounting Dimensions – Programmable Remote Voltage and Current Control Console

Remote Current Control Console

Dimensions and Weight:

Width.....6-1/2" (165 mm)
 Height.....2-1/2" (64 mm)
 Depth8-1/2" (216 mm)
 Weight.....3 lbs (1 kg)

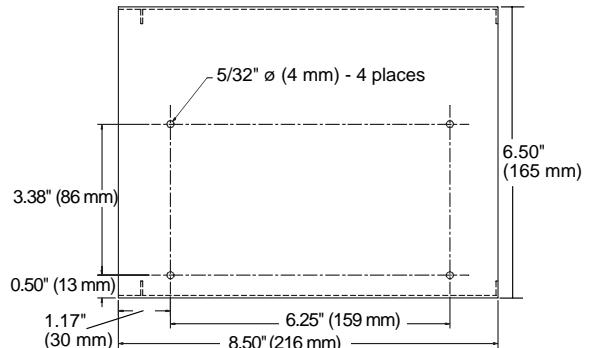


Figure 1-6 Mounting Dimensions – Remote Current Control Console

SPECIFICATIONS

Initial Height Sensing (IHS) – Optional

Input power 120VAC from power supply
Air pressure 20 psi (1.4 bar) regulated shop air input to solenoid

Dimensions and Weight:

Width 9" (229 mm)
Height 4.5" (114 mm)
Depth 11.5" (292 mm)
Weight 13 lbs (6 kg)

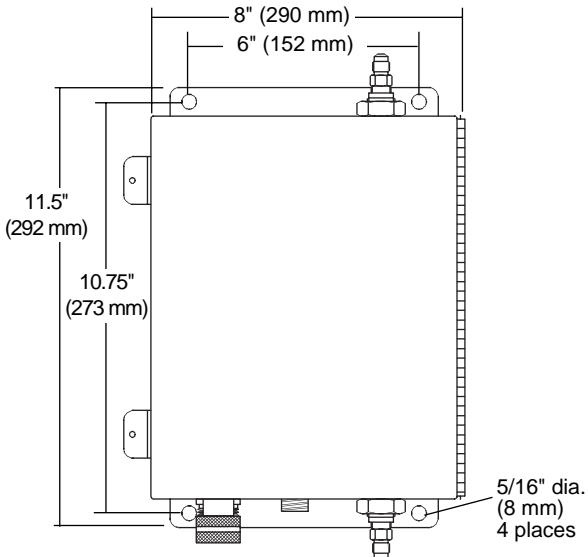


Figure 1-7 Mounting Dimensions – IHS

Timer/Counter – Optional

Dimensions and Weight:

Width 6-1/2" (165 mm)
Height 2-1/2" (64 mm)
Depth 8-1/2" (216 mm)
Weight 3 lbs (1 kg)

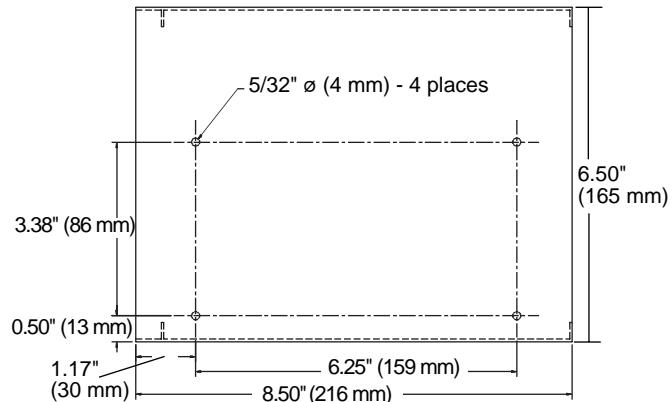


Figure 1-8 Mounting Dimensions – Timer/Counter

Water Muffler – Optional

Refer to the Water Muffler Instruction Manual 802050. The water muffler cannot be used with the stainless steel torch.

CommandTHC – Optional

Refer to the CommandTHC Product Configuration Manual 802600 to order a CommandTHC system. CommandTHC Instruction Manual is 802780.

Section 2**ORDERING PROCEDURE**

When configuring the LHF system, keep these points in mind:

- The diagram on the following page represents all components and options offered by Hypertherm for the LHF system.
- Ordering a system can be a complex procedure. Some external modules work only with power supplies with THC, and others work only with power supplies without THC – see table below.

	Options				
	IHS System (20)	Digital Remote V/C (10)	Programmable Remote V/C (9) with Machine V/C Cable (15)	Remote Current Control (11)	Command THC*
Power Supply with THC	Yes	Yes	Yes	No	No
Power Supply without THC	No	No	No	Yes	Yes


- In addition, there are a variety of options for current control (essential) and voltage control for systems with a torch-height control.

	Current Control and Voltage Control Options			
	Digital Remote V/C (10) and cable (13)	Programmable Remote V/C (9) and cables (12) with Machine V/C Cable (15)	Remote Current Control (11) and cable (14)	Command THC*
Current control	Yes	Yes	Yes	No
Voltage control	Yes	Yes	No	Yes
Displays	Voltage and Current	Voltage and Current	Current Only (Thumbwheel)	Voltage Only

- Use these tables as a guide when configuring a system.

* Refer to the CommandTHC Product Configuration Manual 802600 to order a CommandTHC system.

ORDERING PROCEDURE

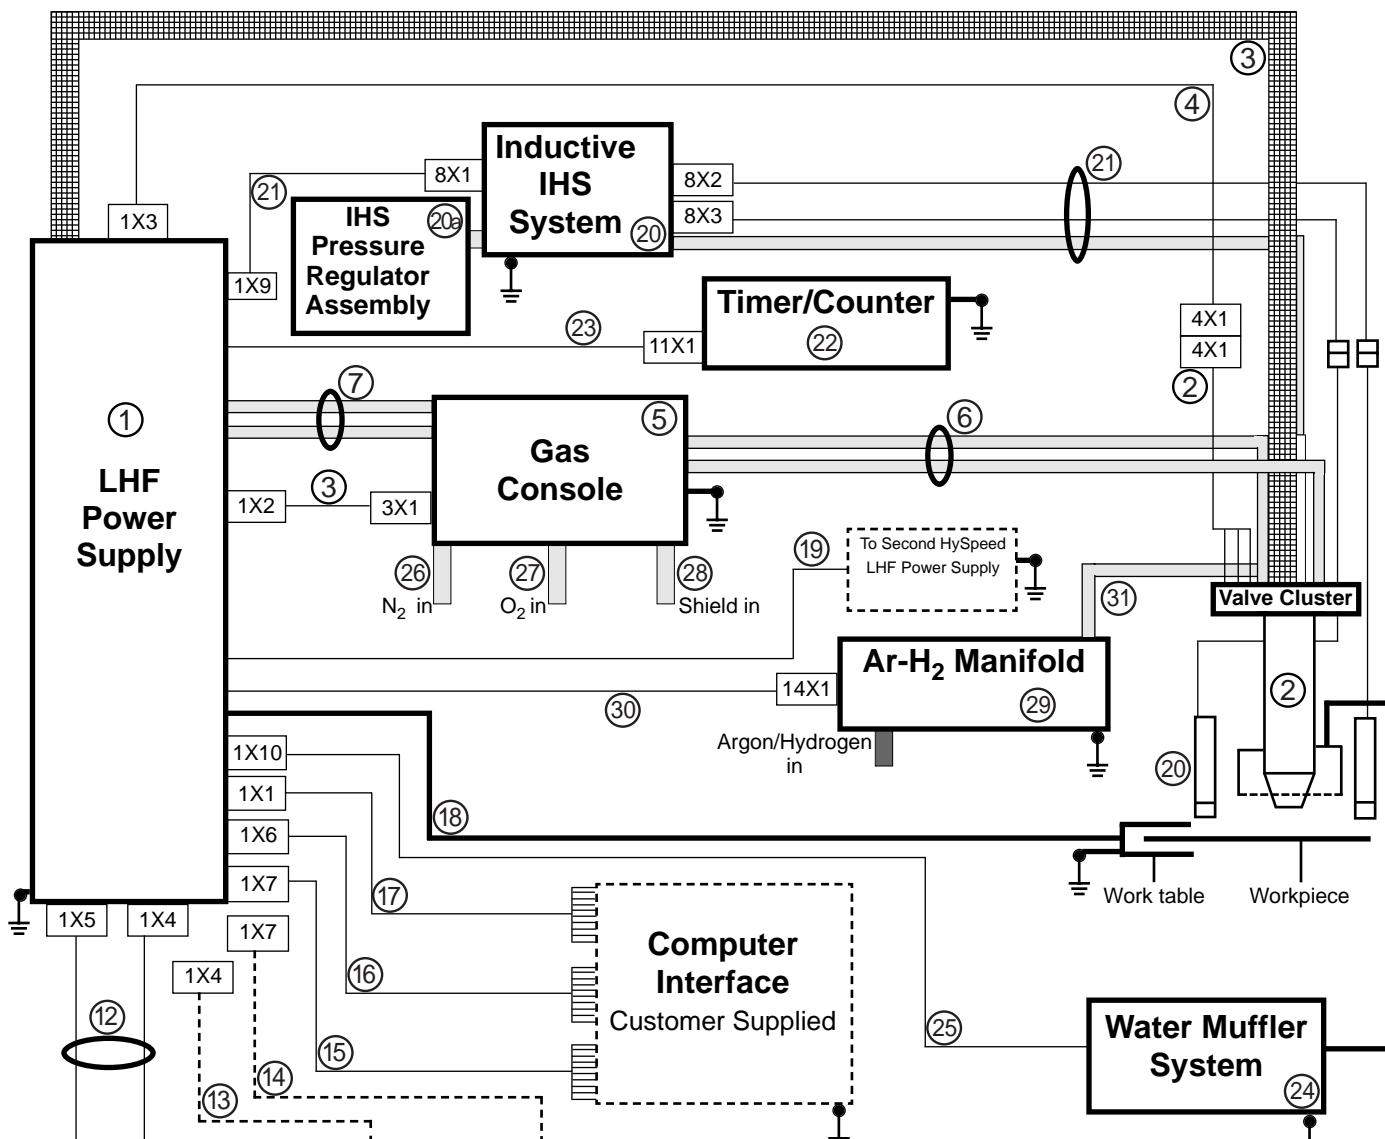

- | | | | |
|----|--|-----|--|
| 1 | LHF Power Supply (PS) | 17 | Cable Between PS and Remote Control Panel Interface |
| 2 | Torch Assembly with Valve Cluster | 18 | Cable Between PS and Work Table |
| 3 | Shielded Leads Between Power Supply and Torch | 19 | Hold Cable Between Power Supplies in Multi-Torch Systems |
| 4 | Cable Between Power Supply and Torch Valve Cluster | 20 | Inductive IHS System |
| 5 | Gas Console | 20a | IHS Pressure Regulator Assembly |
| 6 | Leads Between Gas Console and Torch | 21 | Inductive IHS Lead Set |
| 7 | Shield Gas Hose Set Between Gas Console and Power Supply | 22 | Timer/Counter |
| 8 | Cable Between Gas Console and Power Supply | 23 | Cable Between Timer/Counter and Power Supply |
| 9 | Programmable Remote Voltage & Current Control Console | 24 | Water Muffler System |
| 10 | Digital Remote Voltage & Current Control Console | 25 | Cable Between Water Muffler Pump and Power Supply |
| 11 | Remote Current Control Console | 26 | Hose Between Nitrogen Supply and Gas Console |
| 12 | Cables Between PS and Programmable Remote | 27 | Hose Between Oxygen Supply and Gas Console |
| 13 | Cable Between PS and Digital Remote | 28 | Hose Between Shield Gas Supply and Gas Console |
| 14 | Cable Between PS and Remote Current | 29 | Argon-Hydrogen Manifold |
| 15 | Cable Between PS and Machine Computer V/C Interface | 30 | Cable Between Argon-Hydrogen Manifold and Power Supply |
| 16 | Cable Between PS and Machine Computer I/O Interface | 31 | Cable Between Argon-Hydrogen Manifold and Torch |

HT2000 LHF Block Diagram

Distributor Information:**HYPERTHERM**
HySpeed HT2000LHF Order Form**Customer Information:****① HySpeed HT2000LHF Power Supply**

- 073227 HySpeed HT2000LHF PS,200V,50-60 Hz,w/THC
 073229 HySpeed HT2000LHF PS,208V,60 Hz,w/THC
 073231 HySpeed HT2000LHF PS,240V,60 Hz,w/THC
 073235 HySpeed HT2000LHF PS,400V,CE,50 Hz,w/THC
 073262 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,w/THC
 073233 HySpeed HT2000LHF PS,480V,60 Hz,w/THC
 073237 HySpeed HT2000LHF PS,600V,60 Hz,w/THC
- 073228 HySpeed HT2000LHF PS,200V,50-60 Hz,wo/THC
 073230 HySpeed HT2000LHF PS,208V,60 Hz,wo/THC
 073232 HySpeed HT2000LHF PS,240V,60 Hz,wo/THC
 073236 HySpeed HT2000LHF PS,400V,CE,50 Hz,wo/THC
 073263 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,wo/THC
 073234 HySpeed HT2000LHF PS,480V,60 Hz,wo/THC
 073238 HySpeed HT2000LHF PS,600V,60 Hz,wo/THC

② Machine Torch Assembly with Valve Cluster

- 128255 With HySpeed consumables

② Stainless Steel Machine Torch Assembly with Valve Cluster

- 128369 With Standard consumables

②a Torch Mounting Bracket

- 020046

③ Shielded Leads Between Power Supply and Torch

- 028657 10 Ft 028662 40 Ft
 028658 15 F 028663 45 Ft
 028659 20 Ft 028547 50 Ft
 028546 25 Ft
 028660 30 Ft
 028661 35 Ft

④ Cable Between Power Supply and Torch Valve Cluster

- 123283 15 Ft 123287 35 Ft
 123284 20 Ft 123288 40 Ft
 123285 25 Ft 123289 50 Ft
 123286 30 Ft

⑤ Gas Console

- 073239

⑥ Leads Between Gas Console and Torch

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 028622 10 Ft | <input type="checkbox"/> 028774 45 Ft |
| <input type="checkbox"/> 028623 15 Ft | <input type="checkbox"/> 028654 50 Ft |
| <input type="checkbox"/> 028624 20 Ft | <input type="checkbox"/> 028852 61 Ft |
| <input type="checkbox"/> 028625 25 Ft | <input type="checkbox"/> 028655 75 Ft |
| <input type="checkbox"/> 028626 30 Ft | <input type="checkbox"/> 028656 100 Ft |
| <input type="checkbox"/> 028627 35 Ft | |

⑦ Shield Gas Hose Set Between Gas Console and PS

- | | |
|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 028683 10 Ft | <input type="checkbox"/> 028687 30 Ft |
| <input type="checkbox"/> 028684 15 Ft | <input type="checkbox"/> 028688 35 Ft |
| <input type="checkbox"/> 028685 20 Ft | <input type="checkbox"/> 028689 50 Ft |
| <input type="checkbox"/> 028686 25 Ft | <input type="checkbox"/> 128040 75 Ft |

⑧ Cable Between Gas Console and Power Supply

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023989 10 Ft | <input type="checkbox"/> 123077 85 Ft |
| <input type="checkbox"/> 023549 15 Ft | <input type="checkbox"/> 023608 100 Ft |
| <input type="checkbox"/> 023605 25 Ft | <input type="checkbox"/> 023963 115 Ft |
| <input type="checkbox"/> 023757 38 Ft | <input type="checkbox"/> 123147 120 Ft |
| <input type="checkbox"/> 023606 50 Ft | <input type="checkbox"/> 023743 125 Ft |
| <input type="checkbox"/> 123044 60 Ft | <input type="checkbox"/> 023609 150 Ft |
| <input type="checkbox"/> 023607 75 Ft | <input type="checkbox"/> 023953 200 Ft |

⑨ Programmable Remote Voltage & Current Control Console

- 055004

⑩ Digital Remote Voltage & Current Control Console

- 073007

⑪ Remote Current Control Console

- 073045

⑫ Cables Between PS and Programmable Remote

- | | |
|--|--|
| <input type="checkbox"/> 028831 15 Ft | <input type="checkbox"/> 028613 150 Ft |
| <input type="checkbox"/> 028609 25 Ft | <input type="checkbox"/> 028614 200 Ft |
| <input type="checkbox"/> 028610 50 Ft | <input type="checkbox"/> 028833 250 Ft |
| <input type="checkbox"/> 028611 75 Ft | <input type="checkbox"/> 028834 275 Ft |
| <input type="checkbox"/> 028612 100 Ft | <input type="checkbox"/> 028835 300 Ft |
| <input type="checkbox"/> 028832 125 Ft | |

⑬ Cable Between PS and Digital Remote

- | | |
|--|--|
| <input type="checkbox"/> 023990 7 Ft | <input type="checkbox"/> 123188 120 Ft |
| <input type="checkbox"/> 023911 15 Ft | <input type="checkbox"/> 023882 125 Ft |
| <input type="checkbox"/> 023878 25 Ft | <input type="checkbox"/> 023883 150 Ft |
| <input type="checkbox"/> 023879 50 Ft | <input type="checkbox"/> 023884 200 Ft |
| <input type="checkbox"/> 123040 60 Ft | <input type="checkbox"/> 023885 250 Ft |
| <input type="checkbox"/> 023880 75 Ft | <input type="checkbox"/> 023886 275 Ft |
| <input type="checkbox"/> 123073 85 Ft | <input type="checkbox"/> 023887 300 Ft |
| <input type="checkbox"/> 023881 100 Ft | |

⑭ Cables Between PS and Remote Current

- | | |
|--|--|
| <input type="checkbox"/> 123150 10 Ft | <input type="checkbox"/> 123068 110 Ft |
| <input type="checkbox"/> 023871 25 Ft | <input type="checkbox"/> 123277 120 Ft |
| <input type="checkbox"/> 023872 38 Ft | <input type="checkbox"/> 23088 125 Ft |
| <input type="checkbox"/> 023873 50 Ft | <input type="checkbox"/> 023876 150 Ft |
| <input type="checkbox"/> 023874 75 Ft | <input type="checkbox"/> 123032 170 Ft |
| <input type="checkbox"/> 023875 100 Ft | <input type="checkbox"/> 023877 200 Ft |

⑮ Cable Between PS and Machine Computer V/C Interface

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023902 6 Ft | <input type="checkbox"/> 023855 75 Ft |
| <input type="checkbox"/> 023851 15 Ft | <input type="checkbox"/> 023856 100 Ft |
| <input type="checkbox"/> 023852 25 Ft | <input type="checkbox"/> 023903 125 Ft |
| <input type="checkbox"/> 023853 35 Ft | <input type="checkbox"/> 023857 150 Ft |
| <input type="checkbox"/> 023854 50 Ft | <input type="checkbox"/> 023858 200 Ft |

(16) Cable Between Power Supply and Machine Computer I/O Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023841 | 6 Ft | <input type="checkbox"/> 123080 | 85 Ft |
| <input type="checkbox"/> 023842 | 15 Ft | <input type="checkbox"/> 023847 | 100 Ft |
| <input type="checkbox"/> 023843 | 25 Ft | <input type="checkbox"/> 023962 | 115 Ft |
| <input type="checkbox"/> 023844 | 35 Ft | <input type="checkbox"/> 123148 | 120 Ft |
| <input type="checkbox"/> 023845 | 50 Ft | <input type="checkbox"/> 023848 | 125 Ft |
| <input type="checkbox"/> 123047 | 60 Ft | <input type="checkbox"/> 023849 | 150 Ft |
| <input type="checkbox"/> 023846 | 75 Ft | <input type="checkbox"/> 023850 | 200 Ft |

(17) Cable Between Power Supply and Remote Control Panel Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 123294 | 6 Ft | <input type="checkbox"/> 123301 | 85 Ft |
| <input type="checkbox"/> 123295 | 15 Ft | <input type="checkbox"/> 123302 | 100 Ft |
| <input type="checkbox"/> 123296 | 25 Ft | <input type="checkbox"/> 123303 | 115 Ft |
| <input type="checkbox"/> 123297 | 35 Ft | <input type="checkbox"/> 123304 | 120 Ft |
| <input type="checkbox"/> 123298 | 50 Ft | <input type="checkbox"/> 123305 | 125 Ft |
| <input type="checkbox"/> 123299 | 60 Ft | <input type="checkbox"/> 123306 | 150 Ft |
| <input type="checkbox"/> 123300 | 75 Ft | <input type="checkbox"/> 123307 | 200 Ft |

(18) Cable Between Power Supply and Work Table

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 023755 | 4 Ft | <input type="checkbox"/> 023404 | 25 Ft |
| <input type="checkbox"/> 023920 | 8 Ft | <input type="checkbox"/> 023968 | 30 Ft |
| <input type="checkbox"/> 023508 | 10 Ft | <input type="checkbox"/> 023986 | 35 Ft |
| <input type="checkbox"/> 023403 | 15 Ft | <input type="checkbox"/> 023405 | 50 Ft |

(19) Hold Cable Between Power Supplies in Multi-Torch Systems

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023340 | 15 Ft | <input type="checkbox"/> 023343 | 100 Ft |
| <input type="checkbox"/> 023341 | 25 Ft | <input type="checkbox"/> 023344 | 150 Ft |
| <input type="checkbox"/> 023342 | 50 Ft | | |

(20) Inductive IHS System

- 028720

(20a) IHS Pressure Regulator Assembly

- 029758

(21) Inductive IHS Lead Set

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 028811 | 25 Ft | <input type="checkbox"/> 028814 | 100 Ft |
| <input type="checkbox"/> 028812 | 50 Ft | <input type="checkbox"/> 028815 | 150 Ft |
| <input type="checkbox"/> 028813 | 75 Ft | <input type="checkbox"/> 028816 | 200 Ft |

(22) Timer/Counter

- 073194

(23) Cable Between Timer/Counter and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023687 | 10 Ft | <input type="checkbox"/> 123079 | 85 Ft |
| <input type="checkbox"/> 023692 | 25 Ft | <input type="checkbox"/> 023695 | 100 Ft |
| <input type="checkbox"/> 023758 | 38 Ft | <input type="checkbox"/> 023993 | 115 Ft |
| <input type="checkbox"/> 023693 | 50 Ft | <input type="checkbox"/> 123189 | 120 Ft |
| <input type="checkbox"/> 123046 | 60 Ft | <input type="checkbox"/> 023696 | 150 Ft |
| <input type="checkbox"/> 023694 | 75 Ft | <input type="checkbox"/> 023954 | 200 Ft |

(24) Water Muffler System – with Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034096 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034100 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034098 | 600V, 3Ø, 60 Hz |

(24) Water Muffler System – without Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034097 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034101 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034099 | 600V, 3Ø, 60 Hz |

(24) Additional Length WM Hose, Specify Length (Ft)

- 034051 Add'l Length W-M Hose (Qty in Ft.)

(25) Cable Between WM Pump and Power Supply

- | | |
|---------------------------------|--------|
| <input type="checkbox"/> 023866 | 50 Ft |
| <input type="checkbox"/> 023867 | 75 Ft |
| <input type="checkbox"/> 023868 | 100 Ft |

(26) Hose Between Nitrogen Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024505 | 6 Ft | <input type="checkbox"/> 024116 | 100 Ft |
| <input type="checkbox"/> 024210 | 10 Ft | <input type="checkbox"/> 024482 | 110 Ft |
| <input type="checkbox"/> 024203 | 15 Ft | <input type="checkbox"/> 024451 | 115 Ft |
| <input type="checkbox"/> 024232 | 20 Ft | <input type="checkbox"/> 024517 | 120 Ft |
| <input type="checkbox"/> 024134 | 25 Ft | <input type="checkbox"/> 024491 | 125 Ft |
| <input type="checkbox"/> 024211 | 35 Ft | <input type="checkbox"/> 024120 | 150 Ft |
| <input type="checkbox"/> 024112 | 50 Ft | <input type="checkbox"/> 024185 | 180 Ft |
| <input type="checkbox"/> 024148 | 75 Ft | <input type="checkbox"/> 024124 | 200 Ft |
| <input type="checkbox"/> 024488 | 85 Ft | | |

(27) Hose Between Oxygen Supply and Gas Console

- | | | | |
|---------------------------------|--------|---------------------------------|--------|
| <input type="checkbox"/> 024204 | 15 Ft | <input type="checkbox"/> 024450 | 115 Ft |
| <input type="checkbox"/> 024205 | 25 Ft | <input type="checkbox"/> 024516 | 120 Ft |
| <input type="checkbox"/> 024155 | 50 Ft | <input type="checkbox"/> 024490 | 125 Ft |
| <input type="checkbox"/> 024398 | 75 Ft | <input type="checkbox"/> 024159 | 150 Ft |
| <input type="checkbox"/> 024487 | 85 Ft | <input type="checkbox"/> 024470 | 180 Ft |
| <input type="checkbox"/> 024206 | 100 Ft | <input type="checkbox"/> 024333 | 200 Ft |
| <input type="checkbox"/> 024481 | 110 Ft | | |

(28) Hose Between Shield Gas Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024043 | 4 Ft | <input type="checkbox"/> 024486 | 85 Ft |
| <input type="checkbox"/> 024341 | 10 Ft | <input type="checkbox"/> 024115 | 100 Ft |
| <input type="checkbox"/> 024200 | 15 Ft | <input type="checkbox"/> 024452 | 110 Ft |
| <input type="checkbox"/> 024342 | 20 Ft | <input type="checkbox"/> 024449 | 115 Ft |
| <input type="checkbox"/> 024133 | 25 Ft | <input type="checkbox"/> 024515 | 120 Ft |
| <input type="checkbox"/> 024448 | 35 Ft | <input type="checkbox"/> 024395 | 125 Ft |
| <input type="checkbox"/> 024407 | 45 Ft | <input type="checkbox"/> 024119 | 150 Ft |
| <input type="checkbox"/> 024012 | 50 Ft | <input type="checkbox"/> 024480 | 170 Ft |
| <input type="checkbox"/> 024472 | 60 Ft | <input type="checkbox"/> 024184 | 180 Ft |
| <input type="checkbox"/> 024147 | 75 Ft | <input type="checkbox"/> 024123 | 200 Ft |

(29) Argon-Hydrogen Manifold

- 073109

(30) Cable Between Argon-Hydrogen Manifold and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023660 | 15 Ft | <input type="checkbox"/> 023663 | 75 Ft |
| <input type="checkbox"/> 023661 | 25 Ft | <input type="checkbox"/> 023664 | 100 Ft |
| <input type="checkbox"/> 023662 | 50 Ft | <input type="checkbox"/> 023665 | 150 Ft |

(31) Hose Between Argon-Hydrogen Manifold and Torch

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 024354 | 10 Ft | <input type="checkbox"/> 024370 | 40 Ft |
| <input type="checkbox"/> 024355 | 12 Ft | <input type="checkbox"/> 024443 | 50 Ft |
| <input type="checkbox"/> 024368 | 20 Ft | <input type="checkbox"/> 024467 | 75 Ft |
| <input type="checkbox"/> 024369 | 30 Ft | | |

Consumable Parts Kit

- | | |
|---------------------------------|---------------------------|
| <input type="checkbox"/> 128825 | Kit: HySpeed consumables |
| <input type="checkbox"/> 028602 | Kit: Standard consumables |

Distributor Information:**HYPERTHERM**
HySpeed HT2000LHF Order Form**Customer Information:****① HySpeed HT2000LHF Power Supply**

- 073227 HySpeed HT2000LHF PS,200V,50-60 Hz,w/THC
 073229 HySpeed HT2000LHF PS,208V,60 Hz,w/THC
 073231 HySpeed HT2000LHF PS,240V,60 Hz,w/THC
 073235 HySpeed HT2000LHF PS,400V,CE,50 Hz,w/THC
 073262 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,w/THC
 073233 HySpeed HT2000LHF PS,480V,60 Hz,w/THC
 073237 HySpeed HT2000LHF PS,600V,60 Hz,w/THC
- 073228 HySpeed HT2000LHF PS,200V,50-60 Hz,wo/THC
 073230 HySpeed HT2000LHF PS,208V,60 Hz,wo/THC
 073232 HySpeed HT2000LHF PS,240V,60 Hz,wo/THC
 073236 HySpeed HT2000LHF PS,400V,CE,50 Hz,wo/THC
 073263 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,wo/THC
 073234 HySpeed HT2000LHF PS,480V,60 Hz,wo/THC
 073238 HySpeed HT2000LHF PS,600V,60 Hz,wo/THC

② Machine Torch Assembly with Valve Cluster

- 128255 With HySpeed consumables

② Stainless Steel Machine Torch Assembly with Valve Cluster

- 128369 With Standard consumables

②a Torch Mounting Bracket

- 020046

③ Shielded Leads Between Power Supply and Torch

- 028657 10 Ft 028662 40 Ft
 028658 15 F 028663 45 Ft
 028659 20 Ft 028547 50 Ft
 028546 25 Ft
 028660 30 Ft
 028661 35 Ft

④ Cable Between Power Supply and Torch Valve Cluster

- 123283 15 Ft 123287 35 Ft
 123284 20 Ft 123288 40 Ft
 123285 25 Ft 123289 50 Ft
 123286 30 Ft

⑤ Gas Console

- 073239

⑥ Leads Between Gas Console and Torch

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 028622 10 Ft | <input type="checkbox"/> 028774 45 Ft |
| <input type="checkbox"/> 028623 15 Ft | <input type="checkbox"/> 028654 50 Ft |
| <input type="checkbox"/> 028624 20 Ft | <input type="checkbox"/> 028852 61 Ft |
| <input type="checkbox"/> 028625 25 Ft | <input type="checkbox"/> 028655 75 Ft |
| <input type="checkbox"/> 028626 30 Ft | <input type="checkbox"/> 028656 100 Ft |
| <input type="checkbox"/> 028627 35 Ft | |

⑦ Shield Gas Hose Set Between Gas Console and PS

- | | |
|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 028683 10 Ft | <input type="checkbox"/> 028687 30 Ft |
| <input type="checkbox"/> 028684 15 Ft | <input type="checkbox"/> 028688 35 Ft |
| <input type="checkbox"/> 028685 20 Ft | <input type="checkbox"/> 028689 50 Ft |
| <input type="checkbox"/> 028686 25 Ft | <input type="checkbox"/> 128040 75 Ft |

⑧ Cable Between Gas Console and Power Supply

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023989 10 Ft | <input type="checkbox"/> 123077 85 Ft |
| <input type="checkbox"/> 023549 15 Ft | <input type="checkbox"/> 023608 100 Ft |
| <input type="checkbox"/> 023605 25 Ft | <input type="checkbox"/> 023963 115 Ft |
| <input type="checkbox"/> 023757 38 Ft | <input type="checkbox"/> 123147 120 Ft |
| <input type="checkbox"/> 023606 50 Ft | <input type="checkbox"/> 023743 125 Ft |
| <input type="checkbox"/> 123044 60 Ft | <input type="checkbox"/> 023609 150 Ft |
| <input type="checkbox"/> 023607 75 Ft | <input type="checkbox"/> 023953 200 Ft |

⑨ Programmable Remote Voltage & Current Control Console

- 055004

⑩ Digital Remote Voltage & Current Control Console

- 073007

⑪ Remote Current Control Console

- 073045

⑫ Cables Between PS and Programmable Remote

- | | |
|--|--|
| <input type="checkbox"/> 028831 15 Ft | <input type="checkbox"/> 028613 150 Ft |
| <input type="checkbox"/> 028609 25 Ft | <input type="checkbox"/> 028614 200 Ft |
| <input type="checkbox"/> 028610 50 Ft | <input type="checkbox"/> 028833 250 Ft |
| <input type="checkbox"/> 028611 75 Ft | <input type="checkbox"/> 028834 275 Ft |
| <input type="checkbox"/> 028612 100 Ft | <input type="checkbox"/> 028835 300 Ft |
| <input type="checkbox"/> 028832 125 Ft | |

⑬ Cable Between PS and Digital Remote

- | | |
|--|--|
| <input type="checkbox"/> 023990 7 Ft | <input type="checkbox"/> 123188 120 Ft |
| <input type="checkbox"/> 023911 15 Ft | <input type="checkbox"/> 023882 125 Ft |
| <input type="checkbox"/> 023878 25 Ft | <input type="checkbox"/> 023883 150 Ft |
| <input type="checkbox"/> 023879 50 Ft | <input type="checkbox"/> 023884 200 Ft |
| <input type="checkbox"/> 123040 60 Ft | <input type="checkbox"/> 023885 250 Ft |
| <input type="checkbox"/> 023880 75 Ft | <input type="checkbox"/> 023886 275 Ft |
| <input type="checkbox"/> 123073 85 Ft | <input type="checkbox"/> 023887 300 Ft |
| <input type="checkbox"/> 023881 100 Ft | |

⑭ Cables Between PS and Remote Current

- | | |
|--|--|
| <input type="checkbox"/> 123150 10 Ft | <input type="checkbox"/> 123068 110 Ft |
| <input type="checkbox"/> 023871 25 Ft | <input type="checkbox"/> 123277 120 Ft |
| <input type="checkbox"/> 023872 38 Ft | <input type="checkbox"/> 23088 125 Ft |
| <input type="checkbox"/> 023873 50 Ft | <input type="checkbox"/> 023876 150 Ft |
| <input type="checkbox"/> 023874 75 Ft | <input type="checkbox"/> 123032 170 Ft |
| <input type="checkbox"/> 023875 100 Ft | <input type="checkbox"/> 023877 200 Ft |

⑮ Cable Between PS and Machine Computer V/C Interface

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023902 6 Ft | <input type="checkbox"/> 023855 75 Ft |
| <input type="checkbox"/> 023851 15 Ft | <input type="checkbox"/> 023856 100 Ft |
| <input type="checkbox"/> 023852 25 Ft | <input type="checkbox"/> 023903 125 Ft |
| <input type="checkbox"/> 023853 35 Ft | <input type="checkbox"/> 023857 150 Ft |
| <input type="checkbox"/> 023854 50 Ft | <input type="checkbox"/> 023858 200 Ft |

(16) Cable Between Power Supply and Machine Computer I/O Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023841 | 6 Ft | <input type="checkbox"/> 123080 | 85 Ft |
| <input type="checkbox"/> 023842 | 15 Ft | <input type="checkbox"/> 023847 | 100 Ft |
| <input type="checkbox"/> 023843 | 25 Ft | <input type="checkbox"/> 023962 | 115 Ft |
| <input type="checkbox"/> 023844 | 35 Ft | <input type="checkbox"/> 123148 | 120 Ft |
| <input type="checkbox"/> 023845 | 50 Ft | <input type="checkbox"/> 023848 | 125 Ft |
| <input type="checkbox"/> 123047 | 60 Ft | <input type="checkbox"/> 023849 | 150 Ft |
| <input type="checkbox"/> 023846 | 75 Ft | <input type="checkbox"/> 023850 | 200 Ft |

(17) Cable Between Power Supply and Remote Control Panel Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 123294 | 6 Ft | <input type="checkbox"/> 123301 | 85 Ft |
| <input type="checkbox"/> 123295 | 15 Ft | <input type="checkbox"/> 123302 | 100 Ft |
| <input type="checkbox"/> 123296 | 25 Ft | <input type="checkbox"/> 123303 | 115 Ft |
| <input type="checkbox"/> 123297 | 35 Ft | <input type="checkbox"/> 123304 | 120 Ft |
| <input type="checkbox"/> 123298 | 50 Ft | <input type="checkbox"/> 123305 | 125 Ft |
| <input type="checkbox"/> 123299 | 60 Ft | <input type="checkbox"/> 123306 | 150 Ft |
| <input type="checkbox"/> 123300 | 75 Ft | <input type="checkbox"/> 123307 | 200 Ft |

(18) Cable Between Power Supply and Work Table

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 023755 | 4 Ft | <input type="checkbox"/> 023404 | 25 Ft |
| <input type="checkbox"/> 023920 | 8 Ft | <input type="checkbox"/> 023968 | 30 Ft |
| <input type="checkbox"/> 023508 | 10 Ft | <input type="checkbox"/> 023986 | 35 Ft |
| <input type="checkbox"/> 023403 | 15 Ft | <input type="checkbox"/> 023405 | 50 Ft |

(19) Hold Cable Between Power Supplies in Multi-Torch Systems

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023340 | 15 Ft | <input type="checkbox"/> 023343 | 100 Ft |
| <input type="checkbox"/> 023341 | 25 Ft | <input type="checkbox"/> 023344 | 150 Ft |
| <input type="checkbox"/> 023342 | 50 Ft | | |

(20) Inductive IHS System

- 028720

(20a) IHS Pressure Regulator Assembly

- 029758

(21) Inductive IHS Lead Set

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 028811 | 25 Ft | <input type="checkbox"/> 028814 | 100 Ft |
| <input type="checkbox"/> 028812 | 50 Ft | <input type="checkbox"/> 028815 | 150 Ft |
| <input type="checkbox"/> 028813 | 75 Ft | <input type="checkbox"/> 028816 | 200 Ft |

(22) Timer/Counter

- 073194

(23) Cable Between Timer/Counter and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023687 | 10 Ft | <input type="checkbox"/> 123079 | 85 Ft |
| <input type="checkbox"/> 023692 | 25 Ft | <input type="checkbox"/> 023695 | 100 Ft |
| <input type="checkbox"/> 023758 | 38 Ft | <input type="checkbox"/> 023993 | 115 Ft |
| <input type="checkbox"/> 023693 | 50 Ft | <input type="checkbox"/> 123189 | 120 Ft |
| <input type="checkbox"/> 123046 | 60 Ft | <input type="checkbox"/> 023696 | 150 Ft |
| <input type="checkbox"/> 023694 | 75 Ft | <input type="checkbox"/> 023954 | 200 Ft |

(24) Water Muffler System – with Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034096 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034100 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034098 | 600V, 3Ø, 60 Hz |

(24) Water Muffler System – without Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034097 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034101 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034099 | 600V, 3Ø, 60 Hz |

(24) Additional Length WM Hose, Specify Length (Ft)

- 034051 Add'l Length W-M Hose (Qty in Ft.)

(25) Cable Between WM Pump and Power Supply

- | | |
|---------------------------------|--------|
| <input type="checkbox"/> 023866 | 50 Ft |
| <input type="checkbox"/> 023867 | 75 Ft |
| <input type="checkbox"/> 023868 | 100 Ft |

(26) Hose Between Nitrogen Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024505 | 6 Ft | <input type="checkbox"/> 024116 | 100 Ft |
| <input type="checkbox"/> 024210 | 10 Ft | <input type="checkbox"/> 024482 | 110 Ft |
| <input type="checkbox"/> 024203 | 15 Ft | <input type="checkbox"/> 024451 | 115 Ft |
| <input type="checkbox"/> 024232 | 20 Ft | <input type="checkbox"/> 024517 | 120 Ft |
| <input type="checkbox"/> 024134 | 25 Ft | <input type="checkbox"/> 024491 | 125 Ft |
| <input type="checkbox"/> 024211 | 35 Ft | <input type="checkbox"/> 024120 | 150 Ft |
| <input type="checkbox"/> 024112 | 50 Ft | <input type="checkbox"/> 024185 | 180 Ft |
| <input type="checkbox"/> 024148 | 75 Ft | <input type="checkbox"/> 024124 | 200 Ft |
| <input type="checkbox"/> 024488 | 85 Ft | | |

(27) Hose Between Oxygen Supply and Gas Console

- | | | | |
|---------------------------------|--------|---------------------------------|--------|
| <input type="checkbox"/> 024204 | 15 Ft | <input type="checkbox"/> 024450 | 115 Ft |
| <input type="checkbox"/> 024205 | 25 Ft | <input type="checkbox"/> 024516 | 120 Ft |
| <input type="checkbox"/> 024155 | 50 Ft | <input type="checkbox"/> 024490 | 125 Ft |
| <input type="checkbox"/> 024398 | 75 Ft | <input type="checkbox"/> 024159 | 150 Ft |
| <input type="checkbox"/> 024487 | 85 Ft | <input type="checkbox"/> 024470 | 180 Ft |
| <input type="checkbox"/> 024206 | 100 Ft | <input type="checkbox"/> 024333 | 200 Ft |
| <input type="checkbox"/> 024481 | 110 Ft | | |

(28) Hose Between Shield Gas Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024043 | 4 Ft | <input type="checkbox"/> 024486 | 85 Ft |
| <input type="checkbox"/> 024341 | 10 Ft | <input type="checkbox"/> 024115 | 100 Ft |
| <input type="checkbox"/> 024200 | 15 Ft | <input type="checkbox"/> 024452 | 110 Ft |
| <input type="checkbox"/> 024342 | 20 Ft | <input type="checkbox"/> 024449 | 115 Ft |
| <input type="checkbox"/> 024133 | 25 Ft | <input type="checkbox"/> 024515 | 120 Ft |
| <input type="checkbox"/> 024448 | 35 Ft | <input type="checkbox"/> 024395 | 125 Ft |
| <input type="checkbox"/> 024407 | 45 Ft | <input type="checkbox"/> 024119 | 150 Ft |
| <input type="checkbox"/> 024012 | 50 Ft | <input type="checkbox"/> 024480 | 170 Ft |
| <input type="checkbox"/> 024472 | 60 Ft | <input type="checkbox"/> 024184 | 180 Ft |
| <input type="checkbox"/> 024147 | 75 Ft | <input type="checkbox"/> 024123 | 200 Ft |

(29) Argon-Hydrogen Manifold

- 073109

(30) Cable Between Argon-Hydrogen Manifold and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023660 | 15 Ft | <input type="checkbox"/> 023663 | 75 Ft |
| <input type="checkbox"/> 023661 | 25 Ft | <input type="checkbox"/> 023664 | 100 Ft |
| <input type="checkbox"/> 023662 | 50 Ft | <input type="checkbox"/> 023665 | 150 Ft |

(31) Hose Between Argon-Hydrogen Manifold and Torch

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 024354 | 10 Ft | <input type="checkbox"/> 024370 | 40 Ft |
| <input type="checkbox"/> 024355 | 12 Ft | <input type="checkbox"/> 024443 | 50 Ft |
| <input type="checkbox"/> 024368 | 20 Ft | <input type="checkbox"/> 024467 | 75 Ft |
| <input type="checkbox"/> 024369 | 30 Ft | | |

Consumable Parts Kit

- | | |
|---------------------------------|---------------------------|
| <input type="checkbox"/> 128825 | Kit: HySpeed consumables |
| <input type="checkbox"/> 028602 | Kit: Standard consumables |

Distributor Information:**HYPERTHERM**
HySpeed HT2000LHF Order Form**Customer Information:****① HySpeed HT2000LHF Power Supply**

- 073227 HySpeed HT2000LHF PS,200V,50-60 Hz,w/THC
 073229 HySpeed HT2000LHF PS,208V,60 Hz,w/THC
 073231 HySpeed HT2000LHF PS,240V,60 Hz,w/THC
 073235 HySpeed HT2000LHF PS,400V,CE,50 Hz,w/THC
 073262 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,w/THC
 073233 HySpeed HT2000LHF PS,480V,60 Hz,w/THC
 073237 HySpeed HT2000LHF PS,600V,60 Hz,w/THC
- 073228 HySpeed HT2000LHF PS,200V,50-60 Hz,wo/THC
 073230 HySpeed HT2000LHF PS,208V,60 Hz,wo/THC
 073232 HySpeed HT2000LHF PS,240V,60 Hz,wo/THC
 073236 HySpeed HT2000LHF PS,400V,CE,50 Hz,wo/THC
 073263 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,wo/THC
 073234 HySpeed HT2000LHF PS,480V,60 Hz,wo/THC
 073238 HySpeed HT2000LHF PS,600V,60 Hz,wo/THC

② Machine Torch Assembly with Valve Cluster

- 128255 With HySpeed consumables

② Stainless Steel Machine Torch Assembly with Valve Cluster

- 128369 With Standard consumables

②a Torch Mounting Bracket

- 020046

③ Shielded Leads Between Power Supply and Torch

- 028657 10 Ft 028662 40 Ft
 028658 15 F 028663 45 Ft
 028659 20 Ft 028547 50 Ft
 028546 25 Ft
 028660 30 Ft
 028661 35 Ft

④ Cable Between Power Supply and Torch Valve Cluster

- 123283 15 Ft 123287 35 Ft
 123284 20 Ft 123288 40 Ft
 123285 25 Ft 123289 50 Ft
 123286 30 Ft

⑤ Gas Console

- 073239

⑥ Leads Between Gas Console and Torch

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 028622 10 Ft | <input type="checkbox"/> 028774 45 Ft |
| <input type="checkbox"/> 028623 15 Ft | <input type="checkbox"/> 028654 50 Ft |
| <input type="checkbox"/> 028624 20 Ft | <input type="checkbox"/> 028852 61 Ft |
| <input type="checkbox"/> 028625 25 Ft | <input type="checkbox"/> 028655 75 Ft |
| <input type="checkbox"/> 028626 30 Ft | <input type="checkbox"/> 028656 100 Ft |
| <input type="checkbox"/> 028627 35 Ft | |

⑦ Shield Gas Hose Set Between Gas Console and PS

- | | |
|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 028683 10 Ft | <input type="checkbox"/> 028687 30 Ft |
| <input type="checkbox"/> 028684 15 Ft | <input type="checkbox"/> 028688 35 Ft |
| <input type="checkbox"/> 028685 20 Ft | <input type="checkbox"/> 028689 50 Ft |
| <input type="checkbox"/> 028686 25 Ft | <input type="checkbox"/> 128040 75 Ft |

⑧ Cable Between Gas Console and Power Supply

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023989 10 Ft | <input type="checkbox"/> 123077 85 Ft |
| <input type="checkbox"/> 023549 15 Ft | <input type="checkbox"/> 023608 100 Ft |
| <input type="checkbox"/> 023605 25 Ft | <input type="checkbox"/> 023963 115 Ft |
| <input type="checkbox"/> 023757 38 Ft | <input type="checkbox"/> 123147 120 Ft |
| <input type="checkbox"/> 023606 50 Ft | <input type="checkbox"/> 023743 125 Ft |
| <input type="checkbox"/> 123044 60 Ft | <input type="checkbox"/> 023609 150 Ft |
| <input type="checkbox"/> 023607 75 Ft | <input type="checkbox"/> 023953 200 Ft |

⑨ Programmable Remote Voltage & Current Control Console

- 055004

⑩ Digital Remote Voltage & Current Control Console

- 073007

⑪ Remote Current Control Console

- 073045

⑫ Cables Between PS and Programmable Remote

- | | |
|--|--|
| <input type="checkbox"/> 028831 15 Ft | <input type="checkbox"/> 028613 150 Ft |
| <input type="checkbox"/> 028609 25 Ft | <input type="checkbox"/> 028614 200 Ft |
| <input type="checkbox"/> 028610 50 Ft | <input type="checkbox"/> 028833 250 Ft |
| <input type="checkbox"/> 028611 75 Ft | <input type="checkbox"/> 028834 275 Ft |
| <input type="checkbox"/> 028612 100 Ft | <input type="checkbox"/> 028835 300 Ft |
| <input type="checkbox"/> 028832 125 Ft | |

⑬ Cable Between PS and Digital Remote

- | | |
|--|--|
| <input type="checkbox"/> 023990 7 Ft | <input type="checkbox"/> 123188 120 Ft |
| <input type="checkbox"/> 023911 15 Ft | <input type="checkbox"/> 023882 125 Ft |
| <input type="checkbox"/> 023878 25 Ft | <input type="checkbox"/> 023883 150 Ft |
| <input type="checkbox"/> 023879 50 Ft | <input type="checkbox"/> 023884 200 Ft |
| <input type="checkbox"/> 123040 60 Ft | <input type="checkbox"/> 023885 250 Ft |
| <input type="checkbox"/> 023880 75 Ft | <input type="checkbox"/> 023886 275 Ft |
| <input type="checkbox"/> 123073 85 Ft | <input type="checkbox"/> 023887 300 Ft |
| <input type="checkbox"/> 023881 100 Ft | |

⑭ Cables Between PS and Remote Current

- | | |
|--|--|
| <input type="checkbox"/> 123150 10 Ft | <input type="checkbox"/> 123068 110 Ft |
| <input type="checkbox"/> 023871 25 Ft | <input type="checkbox"/> 123277 120 Ft |
| <input type="checkbox"/> 023872 38 Ft | <input type="checkbox"/> 23088 125 Ft |
| <input type="checkbox"/> 023873 50 Ft | <input type="checkbox"/> 023876 150 Ft |
| <input type="checkbox"/> 023874 75 Ft | <input type="checkbox"/> 123032 170 Ft |
| <input type="checkbox"/> 023875 100 Ft | <input type="checkbox"/> 023877 200 Ft |

⑮ Cable Between PS and Machine Computer V/C Interface

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023902 6 Ft | <input type="checkbox"/> 023855 75 Ft |
| <input type="checkbox"/> 023851 15 Ft | <input type="checkbox"/> 023856 100 Ft |
| <input type="checkbox"/> 023852 25 Ft | <input type="checkbox"/> 023903 125 Ft |
| <input type="checkbox"/> 023853 35 Ft | <input type="checkbox"/> 023857 150 Ft |
| <input type="checkbox"/> 023854 50 Ft | <input type="checkbox"/> 023858 200 Ft |

(16) Cable Between Power Supply and Machine Computer I/O Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023841 | 6 Ft | <input type="checkbox"/> 123080 | 85 Ft |
| <input type="checkbox"/> 023842 | 15 Ft | <input type="checkbox"/> 023847 | 100 Ft |
| <input type="checkbox"/> 023843 | 25 Ft | <input type="checkbox"/> 023962 | 115 Ft |
| <input type="checkbox"/> 023844 | 35 Ft | <input type="checkbox"/> 123148 | 120 Ft |
| <input type="checkbox"/> 023845 | 50 Ft | <input type="checkbox"/> 023848 | 125 Ft |
| <input type="checkbox"/> 123047 | 60 Ft | <input type="checkbox"/> 023849 | 150 Ft |
| <input type="checkbox"/> 023846 | 75 Ft | <input type="checkbox"/> 023850 | 200 Ft |

(17) Cable Between Power Supply and Remote Control Panel Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 123294 | 6 Ft | <input type="checkbox"/> 123301 | 85 Ft |
| <input type="checkbox"/> 123295 | 15 Ft | <input type="checkbox"/> 123302 | 100 Ft |
| <input type="checkbox"/> 123296 | 25 Ft | <input type="checkbox"/> 123303 | 115 Ft |
| <input type="checkbox"/> 123297 | 35 Ft | <input type="checkbox"/> 123304 | 120 Ft |
| <input type="checkbox"/> 123298 | 50 Ft | <input type="checkbox"/> 123305 | 125 Ft |
| <input type="checkbox"/> 123299 | 60 Ft | <input type="checkbox"/> 123306 | 150 Ft |
| <input type="checkbox"/> 123300 | 75 Ft | <input type="checkbox"/> 123307 | 200 Ft |

(18) Cable Between Power Supply and Work Table

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 023755 | 4 Ft | <input type="checkbox"/> 023404 | 25 Ft |
| <input type="checkbox"/> 023920 | 8 Ft | <input type="checkbox"/> 023968 | 30 Ft |
| <input type="checkbox"/> 023508 | 10 Ft | <input type="checkbox"/> 023986 | 35 Ft |
| <input type="checkbox"/> 023403 | 15 Ft | <input type="checkbox"/> 023405 | 50 Ft |

(19) Hold Cable Between Power Supplies in Multi-Torch Systems

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023340 | 15 Ft | <input type="checkbox"/> 023343 | 100 Ft |
| <input type="checkbox"/> 023341 | 25 Ft | <input type="checkbox"/> 023344 | 150 Ft |
| <input type="checkbox"/> 023342 | 50 Ft | | |

(20) Inductive IHS System

- 028720

(20a) IHS Pressure Regulator Assembly

- 029758

(21) Inductive IHS Lead Set

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 028811 | 25 Ft | <input type="checkbox"/> 028814 | 100 Ft |
| <input type="checkbox"/> 028812 | 50 Ft | <input type="checkbox"/> 028815 | 150 Ft |
| <input type="checkbox"/> 028813 | 75 Ft | <input type="checkbox"/> 028816 | 200 Ft |

(22) Timer/Counter

- 073194

(23) Cable Between Timer/Counter and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023687 | 10 Ft | <input type="checkbox"/> 123079 | 85 Ft |
| <input type="checkbox"/> 023692 | 25 Ft | <input type="checkbox"/> 023695 | 100 Ft |
| <input type="checkbox"/> 023758 | 38 Ft | <input type="checkbox"/> 023993 | 115 Ft |
| <input type="checkbox"/> 023693 | 50 Ft | <input type="checkbox"/> 123189 | 120 Ft |
| <input type="checkbox"/> 123046 | 60 Ft | <input type="checkbox"/> 023696 | 150 Ft |
| <input type="checkbox"/> 023694 | 75 Ft | <input type="checkbox"/> 023954 | 200 Ft |

(24) Water Muffler System – with Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034096 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034100 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034098 | 600V, 3Ø, 60 Hz |

(24) Water Muffler System – without Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034097 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034101 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034099 | 600V, 3Ø, 60 Hz |

(24) Additional Length WM Hose, Specify Length (Ft)

- 034051 Add'l Length W-M Hose (Qty in Ft.)

(25) Cable Between WM Pump and Power Supply

- | | |
|---------------------------------|--------|
| <input type="checkbox"/> 023866 | 50 Ft |
| <input type="checkbox"/> 023867 | 75 Ft |
| <input type="checkbox"/> 023868 | 100 Ft |

(26) Hose Between Nitrogen Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024505 | 6 Ft | <input type="checkbox"/> 024116 | 100 Ft |
| <input type="checkbox"/> 024210 | 10 Ft | <input type="checkbox"/> 024482 | 110 Ft |
| <input type="checkbox"/> 024203 | 15 Ft | <input type="checkbox"/> 024451 | 115 Ft |
| <input type="checkbox"/> 024232 | 20 Ft | <input type="checkbox"/> 024517 | 120 Ft |
| <input type="checkbox"/> 024134 | 25 Ft | <input type="checkbox"/> 024491 | 125 Ft |
| <input type="checkbox"/> 024211 | 35 Ft | <input type="checkbox"/> 024120 | 150 Ft |
| <input type="checkbox"/> 024112 | 50 Ft | <input type="checkbox"/> 024185 | 180 Ft |
| <input type="checkbox"/> 024148 | 75 Ft | <input type="checkbox"/> 024124 | 200 Ft |
| <input type="checkbox"/> 024488 | 85 Ft | | |

(27) Hose Between Oxygen Supply and Gas Console

- | | | | |
|---------------------------------|--------|---------------------------------|--------|
| <input type="checkbox"/> 024204 | 15 Ft | <input type="checkbox"/> 024450 | 115 Ft |
| <input type="checkbox"/> 024205 | 25 Ft | <input type="checkbox"/> 024516 | 120 Ft |
| <input type="checkbox"/> 024155 | 50 Ft | <input type="checkbox"/> 024490 | 125 Ft |
| <input type="checkbox"/> 024398 | 75 Ft | <input type="checkbox"/> 024159 | 150 Ft |
| <input type="checkbox"/> 024487 | 85 Ft | <input type="checkbox"/> 024470 | 180 Ft |
| <input type="checkbox"/> 024206 | 100 Ft | <input type="checkbox"/> 024333 | 200 Ft |
| <input type="checkbox"/> 024481 | 110 Ft | | |

(28) Hose Between Shield Gas Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024043 | 4 Ft | <input type="checkbox"/> 024486 | 85 Ft |
| <input type="checkbox"/> 024341 | 10 Ft | <input type="checkbox"/> 024115 | 100 Ft |
| <input type="checkbox"/> 024200 | 15 Ft | <input type="checkbox"/> 024452 | 110 Ft |
| <input type="checkbox"/> 024342 | 20 Ft | <input type="checkbox"/> 024449 | 115 Ft |
| <input type="checkbox"/> 024133 | 25 Ft | <input type="checkbox"/> 024515 | 120 Ft |
| <input type="checkbox"/> 024448 | 35 Ft | <input type="checkbox"/> 024395 | 125 Ft |
| <input type="checkbox"/> 024407 | 45 Ft | <input type="checkbox"/> 024119 | 150 Ft |
| <input type="checkbox"/> 024012 | 50 Ft | <input type="checkbox"/> 024480 | 170 Ft |
| <input type="checkbox"/> 024472 | 60 Ft | <input type="checkbox"/> 024184 | 180 Ft |
| <input type="checkbox"/> 024147 | 75 Ft | <input type="checkbox"/> 024123 | 200 Ft |

(29) Argon-Hydrogen Manifold

- 073109

(30) Cable Between Argon-Hydrogen Manifold and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023660 | 15 Ft | <input type="checkbox"/> 023663 | 75 Ft |
| <input type="checkbox"/> 023661 | 25 Ft | <input type="checkbox"/> 023664 | 100 Ft |
| <input type="checkbox"/> 023662 | 50 Ft | <input type="checkbox"/> 023665 | 150 Ft |

(31) Hose Between Argon-Hydrogen Manifold and Torch

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 024354 | 10 Ft | <input type="checkbox"/> 024370 | 40 Ft |
| <input type="checkbox"/> 024355 | 12 Ft | <input type="checkbox"/> 024443 | 50 Ft |
| <input type="checkbox"/> 024368 | 20 Ft | <input type="checkbox"/> 024467 | 75 Ft |
| <input type="checkbox"/> 024369 | 30 Ft | | |

Consumable Parts Kit

- | | |
|---------------------------------|---------------------------|
| <input type="checkbox"/> 128825 | Kit: HySpeed consumables |
| <input type="checkbox"/> 028602 | Kit: Standard consumables |

Distributor Information:**HYPERTHERM**
HySpeed HT2000LHF Order Form**Customer Information:****① HySpeed HT2000LHF Power Supply**

- 073227 HySpeed HT2000LHF PS,200V,50-60 Hz,w/THC
 073229 HySpeed HT2000LHF PS,208V,60 Hz,w/THC
 073231 HySpeed HT2000LHF PS,240V,60 Hz,w/THC
 073235 HySpeed HT2000LHF PS,400V,CE,50 Hz,w/THC
 073262 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,w/THC
 073233 HySpeed HT2000LHF PS,480V,60 Hz,w/THC
 073237 HySpeed HT2000LHF PS,600V,60 Hz,w/THC
- 073228 HySpeed HT2000LHF PS,200V,50-60 Hz,wo/THC
 073230 HySpeed HT2000LHF PS,208V,60 Hz,wo/THC
 073232 HySpeed HT2000LHF PS,240V,60 Hz,wo/THC
 073236 HySpeed HT2000LHF PS,400V,CE,50 Hz,wo/THC
 073263 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,wo/THC
 073234 HySpeed HT2000LHF PS,480V,60 Hz,wo/THC
 073238 HySpeed HT2000LHF PS,600V,60 Hz,wo/THC

② Machine Torch Assembly with Valve Cluster

- 128255 With HySpeed consumables

② Stainless Steel Machine Torch Assembly with Valve Cluster

- 128369 With Standard consumables

②a Torch Mounting Bracket

- 020046

③ Shielded Leads Between Power Supply and Torch

- 028657 10 Ft 028662 40 Ft
 028658 15 F 028663 45 Ft
 028659 20 Ft 028547 50 Ft
 028546 25 Ft
 028660 30 Ft
 028661 35 Ft

④ Cable Between Power Supply and Torch Valve Cluster

- 123283 15 Ft 123287 35 Ft
 123284 20 Ft 123288 40 Ft
 123285 25 Ft 123289 50 Ft
 123286 30 Ft

⑤ Gas Console

- 073239

⑥ Leads Between Gas Console and Torch

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 028622 10 Ft | <input type="checkbox"/> 028774 45 Ft |
| <input type="checkbox"/> 028623 15 Ft | <input type="checkbox"/> 028654 50 Ft |
| <input type="checkbox"/> 028624 20 Ft | <input type="checkbox"/> 028852 61 Ft |
| <input type="checkbox"/> 028625 25 Ft | <input type="checkbox"/> 028655 75 Ft |
| <input type="checkbox"/> 028626 30 Ft | <input type="checkbox"/> 028656 100 Ft |
| <input type="checkbox"/> 028627 35 Ft | |

⑦ Shield Gas Hose Set Between Gas Console and PS

- | | |
|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 028683 10 Ft | <input type="checkbox"/> 028687 30 Ft |
| <input type="checkbox"/> 028684 15 Ft | <input type="checkbox"/> 028688 35 Ft |
| <input type="checkbox"/> 028685 20 Ft | <input type="checkbox"/> 028689 50 Ft |
| <input type="checkbox"/> 028686 25 Ft | <input type="checkbox"/> 128040 75 Ft |

⑧ Cable Between Gas Console and Power Supply

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023989 10 Ft | <input type="checkbox"/> 123077 85 Ft |
| <input type="checkbox"/> 023549 15 Ft | <input type="checkbox"/> 023608 100 Ft |
| <input type="checkbox"/> 023605 25 Ft | <input type="checkbox"/> 023963 115 Ft |
| <input type="checkbox"/> 023757 38 Ft | <input type="checkbox"/> 123147 120 Ft |
| <input type="checkbox"/> 023606 50 Ft | <input type="checkbox"/> 023743 125 Ft |
| <input type="checkbox"/> 123044 60 Ft | <input type="checkbox"/> 023609 150 Ft |
| <input type="checkbox"/> 023607 75 Ft | <input type="checkbox"/> 023953 200 Ft |

⑨ Programmable Remote Voltage & Current Control Console

- 055004

⑩ Digital Remote Voltage & Current Control Console

- 073007

⑪ Remote Current Control Console

- 073045

⑫ Cables Between PS and Programmable Remote

- | | |
|--|--|
| <input type="checkbox"/> 028831 15 Ft | <input type="checkbox"/> 028613 150 Ft |
| <input type="checkbox"/> 028609 25 Ft | <input type="checkbox"/> 028614 200 Ft |
| <input type="checkbox"/> 028610 50 Ft | <input type="checkbox"/> 028833 250 Ft |
| <input type="checkbox"/> 028611 75 Ft | <input type="checkbox"/> 028834 275 Ft |
| <input type="checkbox"/> 028612 100 Ft | <input type="checkbox"/> 028835 300 Ft |
| <input type="checkbox"/> 028832 125 Ft | |

⑬ Cable Between PS and Digital Remote

- | | |
|--|--|
| <input type="checkbox"/> 023990 7 Ft | <input type="checkbox"/> 123188 120 Ft |
| <input type="checkbox"/> 023911 15 Ft | <input type="checkbox"/> 023882 125 Ft |
| <input type="checkbox"/> 023878 25 Ft | <input type="checkbox"/> 023883 150 Ft |
| <input type="checkbox"/> 023879 50 Ft | <input type="checkbox"/> 023884 200 Ft |
| <input type="checkbox"/> 123040 60 Ft | <input type="checkbox"/> 023885 250 Ft |
| <input type="checkbox"/> 023880 75 Ft | <input type="checkbox"/> 023886 275 Ft |
| <input type="checkbox"/> 123073 85 Ft | <input type="checkbox"/> 023887 300 Ft |
| <input type="checkbox"/> 023881 100 Ft | |

⑭ Cables Between PS and Remote Current

- | | |
|--|--|
| <input type="checkbox"/> 123150 10 Ft | <input type="checkbox"/> 123068 110 Ft |
| <input type="checkbox"/> 023871 25 Ft | <input type="checkbox"/> 123277 120 Ft |
| <input type="checkbox"/> 023872 38 Ft | <input type="checkbox"/> 23088 125 Ft |
| <input type="checkbox"/> 023873 50 Ft | <input type="checkbox"/> 023876 150 Ft |
| <input type="checkbox"/> 023874 75 Ft | <input type="checkbox"/> 123032 170 Ft |
| <input type="checkbox"/> 023875 100 Ft | <input type="checkbox"/> 023877 200 Ft |

⑮ Cable Between PS and Machine Computer V/C Interface

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023902 6 Ft | <input type="checkbox"/> 023855 75 Ft |
| <input type="checkbox"/> 023851 15 Ft | <input type="checkbox"/> 023856 100 Ft |
| <input type="checkbox"/> 023852 25 Ft | <input type="checkbox"/> 023903 125 Ft |
| <input type="checkbox"/> 023853 35 Ft | <input type="checkbox"/> 023857 150 Ft |
| <input type="checkbox"/> 023854 50 Ft | <input type="checkbox"/> 023858 200 Ft |

(16) Cable Between Power Supply and Machine Computer I/O Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023841 | 6 Ft | <input type="checkbox"/> 123080 | 85 Ft |
| <input type="checkbox"/> 023842 | 15 Ft | <input type="checkbox"/> 023847 | 100 Ft |
| <input type="checkbox"/> 023843 | 25 Ft | <input type="checkbox"/> 023962 | 115 Ft |
| <input type="checkbox"/> 023844 | 35 Ft | <input type="checkbox"/> 123148 | 120 Ft |
| <input type="checkbox"/> 023845 | 50 Ft | <input type="checkbox"/> 023848 | 125 Ft |
| <input type="checkbox"/> 123047 | 60 Ft | <input type="checkbox"/> 023849 | 150 Ft |
| <input type="checkbox"/> 023846 | 75 Ft | <input type="checkbox"/> 023850 | 200 Ft |

(17) Cable Between Power Supply and Remote Control Panel Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 123294 | 6 Ft | <input type="checkbox"/> 123301 | 85 Ft |
| <input type="checkbox"/> 123295 | 15 Ft | <input type="checkbox"/> 123302 | 100 Ft |
| <input type="checkbox"/> 123296 | 25 Ft | <input type="checkbox"/> 123303 | 115 Ft |
| <input type="checkbox"/> 123297 | 35 Ft | <input type="checkbox"/> 123304 | 120 Ft |
| <input type="checkbox"/> 123298 | 50 Ft | <input type="checkbox"/> 123305 | 125 Ft |
| <input type="checkbox"/> 123299 | 60 Ft | <input type="checkbox"/> 123306 | 150 Ft |
| <input type="checkbox"/> 123300 | 75 Ft | <input type="checkbox"/> 123307 | 200 Ft |

(18) Cable Between Power Supply and Work Table

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 023755 | 4 Ft | <input type="checkbox"/> 023404 | 25 Ft |
| <input type="checkbox"/> 023920 | 8 Ft | <input type="checkbox"/> 023968 | 30 Ft |
| <input type="checkbox"/> 023508 | 10 Ft | <input type="checkbox"/> 023986 | 35 Ft |
| <input type="checkbox"/> 023403 | 15 Ft | <input type="checkbox"/> 023405 | 50 Ft |

(19) Hold Cable Between Power Supplies in Multi-Torch Systems

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023340 | 15 Ft | <input type="checkbox"/> 023343 | 100 Ft |
| <input type="checkbox"/> 023341 | 25 Ft | <input type="checkbox"/> 023344 | 150 Ft |
| <input type="checkbox"/> 023342 | 50 Ft | | |

(20) Inductive IHS System

- 028720

(20a) IHS Pressure Regulator Assembly

- 029758

(21) Inductive IHS Lead Set

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 028811 | 25 Ft | <input type="checkbox"/> 028814 | 100 Ft |
| <input type="checkbox"/> 028812 | 50 Ft | <input type="checkbox"/> 028815 | 150 Ft |
| <input type="checkbox"/> 028813 | 75 Ft | <input type="checkbox"/> 028816 | 200 Ft |

(22) Timer/Counter

- 073194

(23) Cable Between Timer/Counter and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023687 | 10 Ft | <input type="checkbox"/> 123079 | 85 Ft |
| <input type="checkbox"/> 023692 | 25 Ft | <input type="checkbox"/> 023695 | 100 Ft |
| <input type="checkbox"/> 023758 | 38 Ft | <input type="checkbox"/> 023993 | 115 Ft |
| <input type="checkbox"/> 023693 | 50 Ft | <input type="checkbox"/> 123189 | 120 Ft |
| <input type="checkbox"/> 123046 | 60 Ft | <input type="checkbox"/> 023696 | 150 Ft |
| <input type="checkbox"/> 023694 | 75 Ft | <input type="checkbox"/> 023954 | 200 Ft |

(24) Water Muffler System – with Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034096 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034100 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034098 | 600V, 3Ø, 60 Hz |

(24) Water Muffler System – without Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034097 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034101 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034099 | 600V, 3Ø, 60 Hz |

(24) Additional Length WM Hose, Specify Length (Ft)

- 034051 Add'l Length W-M Hose (Qty in Ft.)

(25) Cable Between WM Pump and Power Supply

- | | |
|---------------------------------|--------|
| <input type="checkbox"/> 023866 | 50 Ft |
| <input type="checkbox"/> 023867 | 75 Ft |
| <input type="checkbox"/> 023868 | 100 Ft |

(26) Hose Between Nitrogen Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024505 | 6 Ft | <input type="checkbox"/> 024116 | 100 Ft |
| <input type="checkbox"/> 024210 | 10 Ft | <input type="checkbox"/> 024482 | 110 Ft |
| <input type="checkbox"/> 024203 | 15 Ft | <input type="checkbox"/> 024451 | 115 Ft |
| <input type="checkbox"/> 024232 | 20 Ft | <input type="checkbox"/> 024517 | 120 Ft |
| <input type="checkbox"/> 024134 | 25 Ft | <input type="checkbox"/> 024491 | 125 Ft |
| <input type="checkbox"/> 024211 | 35 Ft | <input type="checkbox"/> 024120 | 150 Ft |
| <input type="checkbox"/> 024112 | 50 Ft | <input type="checkbox"/> 024185 | 180 Ft |
| <input type="checkbox"/> 024148 | 75 Ft | <input type="checkbox"/> 024124 | 200 Ft |
| <input type="checkbox"/> 024488 | 85 Ft | | |

(27) Hose Between Oxygen Supply and Gas Console

- | | | | |
|---------------------------------|--------|---------------------------------|--------|
| <input type="checkbox"/> 024204 | 15 Ft | <input type="checkbox"/> 024450 | 115 Ft |
| <input type="checkbox"/> 024205 | 25 Ft | <input type="checkbox"/> 024516 | 120 Ft |
| <input type="checkbox"/> 024155 | 50 Ft | <input type="checkbox"/> 024490 | 125 Ft |
| <input type="checkbox"/> 024398 | 75 Ft | <input type="checkbox"/> 024159 | 150 Ft |
| <input type="checkbox"/> 024487 | 85 Ft | <input type="checkbox"/> 024470 | 180 Ft |
| <input type="checkbox"/> 024206 | 100 Ft | <input type="checkbox"/> 024333 | 200 Ft |
| <input type="checkbox"/> 024481 | 110 Ft | | |

(28) Hose Between Shield Gas Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024043 | 4 Ft | <input type="checkbox"/> 024486 | 85 Ft |
| <input type="checkbox"/> 024341 | 10 Ft | <input type="checkbox"/> 024115 | 100 Ft |
| <input type="checkbox"/> 024200 | 15 Ft | <input type="checkbox"/> 024452 | 110 Ft |
| <input type="checkbox"/> 024342 | 20 Ft | <input type="checkbox"/> 024449 | 115 Ft |
| <input type="checkbox"/> 024133 | 25 Ft | <input type="checkbox"/> 024515 | 120 Ft |
| <input type="checkbox"/> 024448 | 35 Ft | <input type="checkbox"/> 024395 | 125 Ft |
| <input type="checkbox"/> 024407 | 45 Ft | <input type="checkbox"/> 024119 | 150 Ft |
| <input type="checkbox"/> 024012 | 50 Ft | <input type="checkbox"/> 024480 | 170 Ft |
| <input type="checkbox"/> 024472 | 60 Ft | <input type="checkbox"/> 024184 | 180 Ft |
| <input type="checkbox"/> 024147 | 75 Ft | <input type="checkbox"/> 024123 | 200 Ft |

(29) Argon-Hydrogen Manifold

- 073109

(30) Cable Between Argon-Hydrogen Manifold and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023660 | 15 Ft | <input type="checkbox"/> 023663 | 75 Ft |
| <input type="checkbox"/> 023661 | 25 Ft | <input type="checkbox"/> 023664 | 100 Ft |
| <input type="checkbox"/> 023662 | 50 Ft | <input type="checkbox"/> 023665 | 150 Ft |

(31) Hose Between Argon-Hydrogen Manifold and Torch

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 024354 | 10 Ft | <input type="checkbox"/> 024370 | 40 Ft |
| <input type="checkbox"/> 024355 | 12 Ft | <input type="checkbox"/> 024443 | 50 Ft |
| <input type="checkbox"/> 024368 | 20 Ft | <input type="checkbox"/> 024467 | 75 Ft |
| <input type="checkbox"/> 024369 | 30 Ft | | |

Consumable Parts Kit

- | | |
|---------------------------------|---------------------------|
| <input type="checkbox"/> 128825 | Kit: HySpeed consumables |
| <input type="checkbox"/> 028602 | Kit: Standard consumables |

Distributor Information:**HYPERTHERM**
HySpeed HT2000LHF Order Form**Customer Information:****① HySpeed HT2000LHF Power Supply**

- 073227 HySpeed HT2000LHF PS,200V,50-60 Hz,w/THC
 073229 HySpeed HT2000LHF PS,208V,60 Hz,w/THC
 073231 HySpeed HT2000LHF PS,240V,60 Hz,w/THC
 073235 HySpeed HT2000LHF PS,400V,CE,50 Hz,w/THC
 073262 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,w/THC
 073233 HySpeed HT2000LHF PS,480V,60 Hz,w/THC
 073237 HySpeed HT2000LHF PS,600V,60 Hz,w/THC
- 073228 HySpeed HT2000LHF PS,200V,50-60 Hz,wo/THC
 073230 HySpeed HT2000LHF PS,208V,60 Hz,wo/THC
 073232 HySpeed HT2000LHF PS,240V,60 Hz,wo/THC
 073236 HySpeed HT2000LHF PS,400V,CE,50 Hz,wo/THC
 073263 HySpeed HT2000LHF PS,440V,CE,50-60 Hz,wo/THC
 073234 HySpeed HT2000LHF PS,480V,60 Hz,wo/THC
 073238 HySpeed HT2000LHF PS,600V,60 Hz,wo/THC

② Machine Torch Assembly with Valve Cluster

- 128255 With HySpeed consumables

② Stainless Steel Machine Torch Assembly with Valve Cluster

- 128369 With Standard consumables

②a Torch Mounting Bracket

- 020046

③ Shielded Leads Between Power Supply and Torch

- 028657 10 Ft 028662 40 Ft
 028658 15 F 028663 45 Ft
 028659 20 Ft 028547 50 Ft
 028546 25 Ft
 028660 30 Ft
 028661 35 Ft

④ Cable Between Power Supply and Torch Valve Cluster

- 123283 15 Ft 123287 35 Ft
 123284 20 Ft 123288 40 Ft
 123285 25 Ft 123289 50 Ft
 123286 30 Ft

⑤ Gas Console

- 073239

⑥ Leads Between Gas Console and Torch

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 028622 10 Ft | <input type="checkbox"/> 028774 45 Ft |
| <input type="checkbox"/> 028623 15 Ft | <input type="checkbox"/> 028654 50 Ft |
| <input type="checkbox"/> 028624 20 Ft | <input type="checkbox"/> 028852 61 Ft |
| <input type="checkbox"/> 028625 25 Ft | <input type="checkbox"/> 028655 75 Ft |
| <input type="checkbox"/> 028626 30 Ft | <input type="checkbox"/> 028656 100 Ft |
| <input type="checkbox"/> 028627 35 Ft | |

⑦ Shield Gas Hose Set Between Gas Console and PS

- | | |
|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 028683 10 Ft | <input type="checkbox"/> 028687 30 Ft |
| <input type="checkbox"/> 028684 15 Ft | <input type="checkbox"/> 028688 35 Ft |
| <input type="checkbox"/> 028685 20 Ft | <input type="checkbox"/> 028689 50 Ft |
| <input type="checkbox"/> 028686 25 Ft | <input type="checkbox"/> 128040 75 Ft |

⑧ Cable Between Gas Console and Power Supply

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023989 10 Ft | <input type="checkbox"/> 123077 85 Ft |
| <input type="checkbox"/> 023549 15 Ft | <input type="checkbox"/> 023608 100 Ft |
| <input type="checkbox"/> 023605 25 Ft | <input type="checkbox"/> 023963 115 Ft |
| <input type="checkbox"/> 023757 38 Ft | <input type="checkbox"/> 123147 120 Ft |
| <input type="checkbox"/> 023606 50 Ft | <input type="checkbox"/> 023743 125 Ft |
| <input type="checkbox"/> 123044 60 Ft | <input type="checkbox"/> 023609 150 Ft |
| <input type="checkbox"/> 023607 75 Ft | <input type="checkbox"/> 023953 200 Ft |

⑨ Programmable Remote Voltage & Current Control Console

- 055004

⑩ Digital Remote Voltage & Current Control Console

- 073007

⑪ Remote Current Control Console

- 073045

⑫ Cables Between PS and Programmable Remote

- | | |
|--|--|
| <input type="checkbox"/> 028831 15 Ft | <input type="checkbox"/> 028613 150 Ft |
| <input type="checkbox"/> 028609 25 Ft | <input type="checkbox"/> 028614 200 Ft |
| <input type="checkbox"/> 028610 50 Ft | <input type="checkbox"/> 028833 250 Ft |
| <input type="checkbox"/> 028611 75 Ft | <input type="checkbox"/> 028834 275 Ft |
| <input type="checkbox"/> 028612 100 Ft | <input type="checkbox"/> 028835 300 Ft |
| <input type="checkbox"/> 028832 125 Ft | |

⑬ Cable Between PS and Digital Remote

- | | |
|--|--|
| <input type="checkbox"/> 023990 7 Ft | <input type="checkbox"/> 123188 120 Ft |
| <input type="checkbox"/> 023911 15 Ft | <input type="checkbox"/> 023882 125 Ft |
| <input type="checkbox"/> 023878 25 Ft | <input type="checkbox"/> 023883 150 Ft |
| <input type="checkbox"/> 023879 50 Ft | <input type="checkbox"/> 023884 200 Ft |
| <input type="checkbox"/> 123040 60 Ft | <input type="checkbox"/> 023885 250 Ft |
| <input type="checkbox"/> 023880 75 Ft | <input type="checkbox"/> 023886 275 Ft |
| <input type="checkbox"/> 123073 85 Ft | <input type="checkbox"/> 023887 300 Ft |
| <input type="checkbox"/> 023881 100 Ft | |

⑭ Cables Between PS and Remote Current

- | | |
|--|--|
| <input type="checkbox"/> 123150 10 Ft | <input type="checkbox"/> 123068 110 Ft |
| <input type="checkbox"/> 023871 25 Ft | <input type="checkbox"/> 123277 120 Ft |
| <input type="checkbox"/> 023872 38 Ft | <input type="checkbox"/> 23088 125 Ft |
| <input type="checkbox"/> 023873 50 Ft | <input type="checkbox"/> 023876 150 Ft |
| <input type="checkbox"/> 023874 75 Ft | <input type="checkbox"/> 123032 170 Ft |
| <input type="checkbox"/> 023875 100 Ft | <input type="checkbox"/> 023877 200 Ft |

⑮ Cable Between PS and Machine Computer V/C Interface

- | | |
|---------------------------------------|--|
| <input type="checkbox"/> 023902 6 Ft | <input type="checkbox"/> 023855 75 Ft |
| <input type="checkbox"/> 023851 15 Ft | <input type="checkbox"/> 023856 100 Ft |
| <input type="checkbox"/> 023852 25 Ft | <input type="checkbox"/> 023903 125 Ft |
| <input type="checkbox"/> 023853 35 Ft | <input type="checkbox"/> 023857 150 Ft |
| <input type="checkbox"/> 023854 50 Ft | <input type="checkbox"/> 023858 200 Ft |

(16) Cable Between Power Supply and Machine Computer I/O Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023841 | 6 Ft | <input type="checkbox"/> 123080 | 85 Ft |
| <input type="checkbox"/> 023842 | 15 Ft | <input type="checkbox"/> 023847 | 100 Ft |
| <input type="checkbox"/> 023843 | 25 Ft | <input type="checkbox"/> 023962 | 115 Ft |
| <input type="checkbox"/> 023844 | 35 Ft | <input type="checkbox"/> 123148 | 120 Ft |
| <input type="checkbox"/> 023845 | 50 Ft | <input type="checkbox"/> 023848 | 125 Ft |
| <input type="checkbox"/> 123047 | 60 Ft | <input type="checkbox"/> 023849 | 150 Ft |
| <input type="checkbox"/> 023846 | 75 Ft | <input type="checkbox"/> 023850 | 200 Ft |

(17) Cable Between Power Supply and Remote Control Panel Interface

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 123294 | 6 Ft | <input type="checkbox"/> 123301 | 85 Ft |
| <input type="checkbox"/> 123295 | 15 Ft | <input type="checkbox"/> 123302 | 100 Ft |
| <input type="checkbox"/> 123296 | 25 Ft | <input type="checkbox"/> 123303 | 115 Ft |
| <input type="checkbox"/> 123297 | 35 Ft | <input type="checkbox"/> 123304 | 120 Ft |
| <input type="checkbox"/> 123298 | 50 Ft | <input type="checkbox"/> 123305 | 125 Ft |
| <input type="checkbox"/> 123299 | 60 Ft | <input type="checkbox"/> 123306 | 150 Ft |
| <input type="checkbox"/> 123300 | 75 Ft | <input type="checkbox"/> 123307 | 200 Ft |

(18) Cable Between Power Supply and Work Table

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 023755 | 4 Ft | <input type="checkbox"/> 023404 | 25 Ft |
| <input type="checkbox"/> 023920 | 8 Ft | <input type="checkbox"/> 023968 | 30 Ft |
| <input type="checkbox"/> 023508 | 10 Ft | <input type="checkbox"/> 023986 | 35 Ft |
| <input type="checkbox"/> 023403 | 15 Ft | <input type="checkbox"/> 023405 | 50 Ft |

(19) Hold Cable Between Power Supplies in Multi-Torch Systems

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023340 | 15 Ft | <input type="checkbox"/> 023343 | 100 Ft |
| <input type="checkbox"/> 023341 | 25 Ft | <input type="checkbox"/> 023344 | 150 Ft |
| <input type="checkbox"/> 023342 | 50 Ft | | |

(20) Inductive IHS System

- 028720

(20a) IHS Pressure Regulator Assembly

- 029758

(21) Inductive IHS Lead Set

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 028811 | 25 Ft | <input type="checkbox"/> 028814 | 100 Ft |
| <input type="checkbox"/> 028812 | 50 Ft | <input type="checkbox"/> 028815 | 150 Ft |
| <input type="checkbox"/> 028813 | 75 Ft | <input type="checkbox"/> 028816 | 200 Ft |

(22) Timer/Counter

- 073194

(23) Cable Between Timer/Counter and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023687 | 10 Ft | <input type="checkbox"/> 123079 | 85 Ft |
| <input type="checkbox"/> 023692 | 25 Ft | <input type="checkbox"/> 023695 | 100 Ft |
| <input type="checkbox"/> 023758 | 38 Ft | <input type="checkbox"/> 023993 | 115 Ft |
| <input type="checkbox"/> 023693 | 50 Ft | <input type="checkbox"/> 123189 | 120 Ft |
| <input type="checkbox"/> 123046 | 60 Ft | <input type="checkbox"/> 023696 | 150 Ft |
| <input type="checkbox"/> 023694 | 75 Ft | <input type="checkbox"/> 023954 | 200 Ft |

(24) Water Muffler System – with Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034096 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034100 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034098 | 600V, 3Ø, 60 Hz |

(24) Water Muffler System – without Hoses (not used with the stnl. steel torch)

- | | |
|---------------------------------|---------------------|
| <input type="checkbox"/> 034097 | 240/480V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034101 | 380/415V, 3Ø, 60 Hz |
| <input type="checkbox"/> 034099 | 600V, 3Ø, 60 Hz |

(24) Additional Length WM Hose, Specify Length (Ft)

- 034051 Add'l Length W-M Hose (Qty in Ft.)

(25) Cable Between WM Pump and Power Supply

- | | |
|---------------------------------|--------|
| <input type="checkbox"/> 023866 | 50 Ft |
| <input type="checkbox"/> 023867 | 75 Ft |
| <input type="checkbox"/> 023868 | 100 Ft |

(26) Hose Between Nitrogen Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024505 | 6 Ft | <input type="checkbox"/> 024116 | 100 Ft |
| <input type="checkbox"/> 024210 | 10 Ft | <input type="checkbox"/> 024482 | 110 Ft |
| <input type="checkbox"/> 024203 | 15 Ft | <input type="checkbox"/> 024451 | 115 Ft |
| <input type="checkbox"/> 024232 | 20 Ft | <input type="checkbox"/> 024517 | 120 Ft |
| <input type="checkbox"/> 024134 | 25 Ft | <input type="checkbox"/> 024491 | 125 Ft |
| <input type="checkbox"/> 024211 | 35 Ft | <input type="checkbox"/> 024120 | 150 Ft |
| <input type="checkbox"/> 024112 | 50 Ft | <input type="checkbox"/> 024185 | 180 Ft |
| <input type="checkbox"/> 024148 | 75 Ft | <input type="checkbox"/> 024124 | 200 Ft |
| <input type="checkbox"/> 024488 | 85 Ft | | |

(27) Hose Between Oxygen Supply and Gas Console

- | | | | |
|---------------------------------|--------|---------------------------------|--------|
| <input type="checkbox"/> 024204 | 15 Ft | <input type="checkbox"/> 024450 | 115 Ft |
| <input type="checkbox"/> 024205 | 25 Ft | <input type="checkbox"/> 024516 | 120 Ft |
| <input type="checkbox"/> 024155 | 50 Ft | <input type="checkbox"/> 024490 | 125 Ft |
| <input type="checkbox"/> 024398 | 75 Ft | <input type="checkbox"/> 024159 | 150 Ft |
| <input type="checkbox"/> 024487 | 85 Ft | <input type="checkbox"/> 024470 | 180 Ft |
| <input type="checkbox"/> 024206 | 100 Ft | <input type="checkbox"/> 024333 | 200 Ft |
| <input type="checkbox"/> 024481 | 110 Ft | | |

(28) Hose Between Shield Gas Supply and Gas Console

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 024043 | 4 Ft | <input type="checkbox"/> 024486 | 85 Ft |
| <input type="checkbox"/> 024341 | 10 Ft | <input type="checkbox"/> 024115 | 100 Ft |
| <input type="checkbox"/> 024200 | 15 Ft | <input type="checkbox"/> 024452 | 110 Ft |
| <input type="checkbox"/> 024342 | 20 Ft | <input type="checkbox"/> 024449 | 115 Ft |
| <input type="checkbox"/> 024133 | 25 Ft | <input type="checkbox"/> 024515 | 120 Ft |
| <input type="checkbox"/> 024448 | 35 Ft | <input type="checkbox"/> 024395 | 125 Ft |
| <input type="checkbox"/> 024407 | 45 Ft | <input type="checkbox"/> 024119 | 150 Ft |
| <input type="checkbox"/> 024012 | 50 Ft | <input type="checkbox"/> 024480 | 170 Ft |
| <input type="checkbox"/> 024472 | 60 Ft | <input type="checkbox"/> 024184 | 180 Ft |
| <input type="checkbox"/> 024147 | 75 Ft | <input type="checkbox"/> 024123 | 200 Ft |

(29) Argon-Hydrogen Manifold

- 073109

(30) Cable Between Argon-Hydrogen Manifold and Power Supply

- | | | | |
|---------------------------------|-------|---------------------------------|--------|
| <input type="checkbox"/> 023660 | 15 Ft | <input type="checkbox"/> 023663 | 75 Ft |
| <input type="checkbox"/> 023661 | 25 Ft | <input type="checkbox"/> 023664 | 100 Ft |
| <input type="checkbox"/> 023662 | 50 Ft | <input type="checkbox"/> 023665 | 150 Ft |

(31) Hose Between Argon-Hydrogen Manifold and Torch

- | | | | |
|---------------------------------|-------|---------------------------------|-------|
| <input type="checkbox"/> 024354 | 10 Ft | <input type="checkbox"/> 024370 | 40 Ft |
| <input type="checkbox"/> 024355 | 12 Ft | <input type="checkbox"/> 024443 | 50 Ft |
| <input type="checkbox"/> 024368 | 20 Ft | <input type="checkbox"/> 024467 | 75 Ft |
| <input type="checkbox"/> 024369 | 30 Ft | | |

Consumable Parts Kit

- | | |
|---------------------------------|---------------------------|
| <input type="checkbox"/> 128825 | Kit: HySpeed consumables |
| <input type="checkbox"/> 028602 | Kit: Standard consumables |