



Attenuator guard

for 60-hp and 75-hp pumps with single intensifiers



Installation guide

809630 | Revision 1 | English

Attenuator guard

Installation guide

809630
Revision 1

English
Original Instructions

June 2016

Hypertherm Inc.
Hanover, NH 03755 USA
www.hypertherm.com

Hypertherm Inc.

Etna Road, P.O. Box 5010
Hanover, NH 03755 USA
603-643-3441 Tel (Main Office)
603-643-5352 Fax (All Departments)
info@hypertherm.com (Main Office Email)
800-643-9878 Tel (Technical Service)
technical.service@hypertherm.com (Technical Service Email)
800-737-2978 Tel (Customer Service)
customer.service@hypertherm.com (Customer Service Email)
866-643-7711 Tel (Return Materials Authorization)
877-371-2876 Fax (Return Materials Authorization)
return.materials@hypertherm.com (RMA email)

Hypertherm México, S.A. de C.V.

Avenida Toluca No. 444, Anexo 1,
Colonia Olivar de los Padres
Delegación Álvaro Obregón
México, D.F. C.P. 01780
52 55 5681 8109 Tel
52 55 5683 2127 Fax
Soporte.Tecnico@hypertherm.com (Technical Service Email)

Hypertherm Plasmatechnik GmbH

Sophie-Scholl-Platz 5
63452 Hanau
Germany
00 800 33 24 97 37 Tel
00 800 49 73 73 29 Fax
31 (0) 165 596900 Tel (Technical Service)
00 800 4973 7843 Tel (Technical Service)
technicalservice.emea@hypertherm.com (Technical Service Email)

Hypertherm (Singapore) Pte Ltd.

82 Genting Lane
Media Centre
Annexe Block #A01-01
Singapore 349567, Republic of Singapore
65 6841 2489 Tel
65 6841 2490 Fax
Marketing.asia@hypertherm.com (Marketing Email)
TechSupportAPAC@hypertherm.com (Technical Service Email)

Hypertherm Japan Ltd.

Level 9, Edobori Center Building
2-1-1 Edobori, Nishi-ku
Osaka 550-0002 Japan
81 6 6225 1183 Tel
81 6 6225 1184 Fax
HTJapan.info@hypertherm.com (Main Office Email)
TechSupportAPAC@hypertherm.com (Technical Service Email)

Hypertherm Europe B.V.

Vaartveld 9, 4704 SE
Roosendaal, Nederland
31 165 596907 Tel
31 165 596901 Fax
31 165 596908 Tel (Marketing)
31 (0) 165 596900 Tel (Technical Service)
00 800 4973 7843 Tel (Technical Service)
technicalservice.emea@hypertherm.com
(Technical Service Email)

Hypertherm (Shanghai) Trading Co., Ltd.

B301, 495 ShangZhong Road
Shanghai, 200231
PR China
86-21-80231122 Tel
86-21-80231120 Fax
86-21-80231128 Tel (Technical Service)
techsupport.china@hypertherm.com
(Technical Service Email)

South America & Central America: Hypertherm Brasil Ltda.

Rua Bras Cubas, 231 – Jardim Maia
Guarulhos, SP – Brasil
CEP 07115-030
55 11 2409 2636 Tel
tecnico.sa@hypertherm.com (Technical Service Email)

Hypertherm Korea Branch

#3904. APEC-ro 17. Heaundae-gu. Busan.
Korea 48060
82 (0)51 747 0358 Tel
82 (0)51 701 0358 Fax
Marketing.korea@hypertherm.com (Marketing Email)
TechSupportAPAC@hypertherm.com
(Technical Service Email)

Hypertherm Pty Limited












GPO Box 4836
Sydney NSW 2001, Australia
61 (0) 437 606 995 Tel
61 7 3219 9010 Fax
au.sales@Hypertherm.com (Main Office Email)
TechSupportAPAC@hypertherm.com
(Technical Service Email)

Hypertherm (India) Thermal Cutting Pvt. Ltd

A-18 / B-1 Extension,
Mohan Co-Operative Industrial Estate,
Mathura Road, New Delhi 110044, India
91-11-40521201/ 2/ 3 Tel
91-11 40521204 Fax
HTIndia.info@hypertherm.com (Main Office Email)
TechSupportAPAC@hypertherm.com
(Technical Service Email)

Information and hazard symbols

Some symbols in this table could be relevant to other products.

 DANGER	This symbol identifies an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
 DANGER	Dangerous voltage To reduce the risk of serious injuries or death, wear approved protection and follow safety recommendations when working with electricity.
 WARNING	This symbol identifies a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
 WARNING	Do not operate this equipment without the guard installed
 WARNING	Risk of explosion
 CAUTION	This symbol identifies a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury, or property damage.
	Refer to the instruction manual. Read and understand all of the safety guidelines in this manual.
	This symbol identifies a mandatory action.
	This symbol identifies a prohibited action.
	This symbol identifies tools or materials that are required or recommended for a procedure.
	This symbol identifies a note or helpful information.

Section 3

Product description

This guard is designed to be used on a 2-liter Hypertherm or AccuStream attenuator.

The attenuator guard is intended to keep personnel safe from studs or end caps, which can become projectiles if the attenuator fails.

Specifications

2-liter attenuator	181.44 kg (400 lb)
Attenuator guard	99.06 cm × 22.2 cm × 18.26 cm (39 in × 8-3/4 in × 7-3/16 in) 25.85 kg (57 lb)

Section 4

Installation






Hypertherm products are designed and manufactured with a commitment to continuous quality control and safety. Contact a Hypertherm Technical Service Associate for information and support regarding the installation and repair of this equipment.

These installation instructions are for 2-liter attenuators installed on:

- HyPrecision models 60S and 75S with single intensifiers
- AccuStream models AS-6060 and AS-6075 with single intensifiers

For other models, refer to 809640 *Attenuator guard installation guide for 100-hp, 125-hp, and 150-hp pumps and 60-hp and 75-hp pumps with redundant intensifiers*.

Safety

	Refer to the instruction manual. Read and understand all of the safety guidelines in this manual.
 DANGER	Dangerous voltage To reduce the risk of serious injuries or death, wear approved protection and follow safety recommendations when working with electricity.
 WARNING	Personal protective equipment is recommended. Failure to wear personal protective equipment can result in injuries or death.
 WARNING	A person who works on deenergized machinery may be seriously injured or killed if the machinery is reenergized without permission. All workers must respect lock-out and tag-out devices. Only the person who applies a hazardous energy control device should remove it. All workers in an area where energy-control procedures are used must receive training regarding the energy-control procedure and the prohibition against removing a lock out-tag out device.
	Keep the work area clean and free of fluid spills.

Unpack the guard

Make sure that these items are included:



- Attenuator guard
- Attenuator guard strap kit

 
The attenuator guard strap kit contains:

- ❑ 2 guard straps
- ❑ 4 adhesive-backed rubber pads
- ❑ 3/8-inch wrench
- ❑ Attenuator guard installation guide

Make sure that the equipment was not damaged during shipping. If the equipment is damaged, a claim must be filed with the carrier. Report shortages or damages to the OEM or to Hypertherm Waterjet within 10 days of receipt of the equipment.

Install the attenuator guard

 WARNING	Disconnect and lock out or tag out the electrical main and relieve all water and hydraulic pressure from the pump before installing this equipment.
 WARNING	This installation procedure requires 2 people for some tasks.

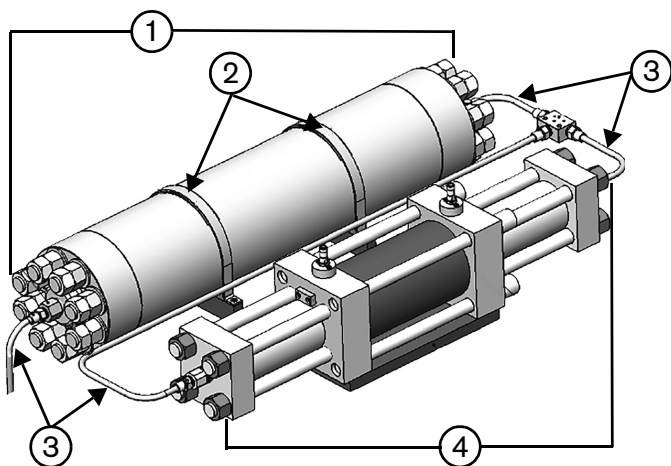

- 1 Attenuator
- 2 Attenuator straps

- 3 High-pressure tubing
- 4 Intensifier



 
Required parts, tools, and materials

Attenuator guard strap kit (included with the guard)


High-pressure antiseize lubricant such as Blue Goop or AccuGoop

13/16-inch open-ended wrench

1. Disconnect the high-pressure tubing from both ends of the attenuator. The tubing and connections are indicated in red.

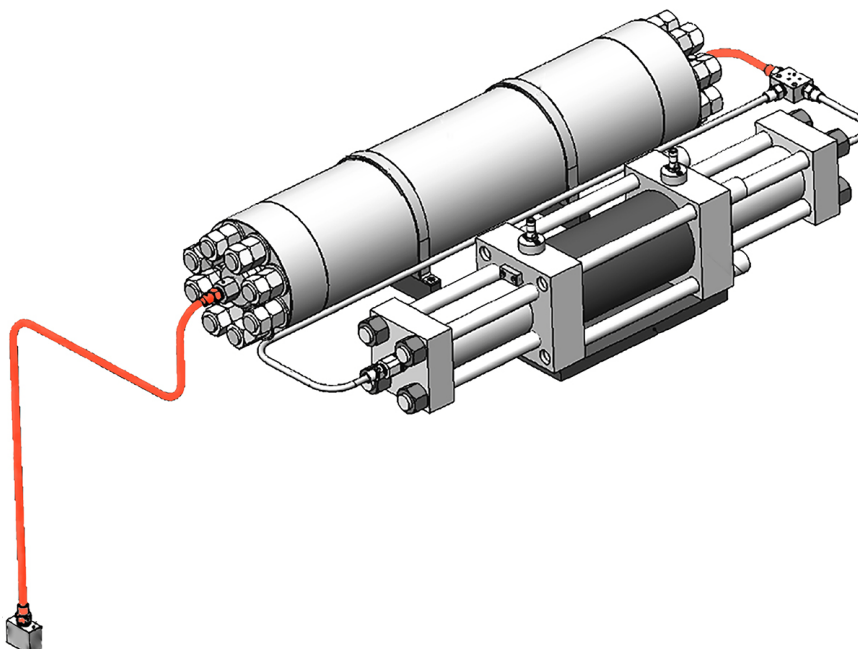

 2. Put the adhesive-backed rubber pads on the tabs on both ends of the attenuator guard.

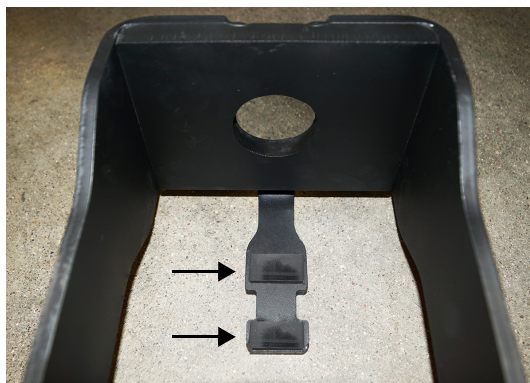

3. Use an assistant to help put the guard over the attenuator.



Installation

4. Put the guard straps inside the guard and around the attenuator.




5. Put the ends of the guard straps into the bolt drives.





6. Put the guard straps over the tabs on the top of the attenuator guard.



7. Turn the bolt drives clockwise to tighten the guard straps.
8. Connect the high-pressure tubing to the attenuator. Torque the connectors to 68 N·m (50 lbf·ft).

 Put high-pressure antiseize lubricant on the threads of the high-pressure connectors.

9. Turn ON the pump in cooling mode. Monitor for leaks. Identify the source of a leak and repair the problem.

 WARNING	Use a piece of cardboard or other solid material to find leaks when the pump is operating. Do not use hands, cloth, paper, or towels.
 WARNING	Do not repair a leak with high-pressure water in the system. Discharge all high-pressure water before working on this equipment.

Section 5

Parts lists

Genuine Hypertherm parts are the factory-recommended replacement parts for this pump. The Hypertherm warranty might not cover damage caused by using nongenuine Hypertherm parts.

To order parts, contact the original equipment manufacturer (OEM) or Hypertherm Inc. with the part numbers and quantities.

Hypertherm Waterjet
305 2nd Ave NW, Suite 115
New Brighton, MN 55112 USA
+1 866-566-7099
+1 651-294-8620 fax

Quantity refers to the number of units included with each part number.

16320 2-liter attenuator guard assembly kit

Part number	Description	Quantity
16308	Guard strap	2
16309	Adhesive-backed rubber pad	4
16322	3/8-inch wrench	1
809630	Attenuator guard installation guide for 60-hp and 75-hp pumps	1

Parts lists

Other parts

Lubricants

Part number	Description
11111	Blue Goop high-pressure antiseize lubricant
11448	AccuGoop food-grade high-pressure antiseize lubricant