


005644 Joystick
Original equipment in model number
090185 (18.5 in. touchscreen) ONLY
Replaced with joystick 005715


229727 I/O harness pinout

J6 pin	Wire color	Signal	Label
1A	Black (BLK)	Start sw com	START
1B	Green (GRN)	Start sw	
2A	Black (BLK)	Stop sw com	STOP
2B	Gray (GRY)	Stop sw	
3A	Black (BLK)	Joy up com	1
3B	White (WHT)	Joy up	
4A	Black (BLK)	Joy down com	3
4B	Brown (BRN)	Joy down	
5A	Black (BLK)	Joy left com	4
5B	Blue (BLU)	Joy left	
6A	Black (BLK)	Joy right com	2
6B	Violet (VIO)	Joy right	
7A	Black (BLK)	Lift switch com	CEN
7B	Orange (ORG)	Lift switch up	BOT
8B	White (WHT)	Lift switch down	TOP

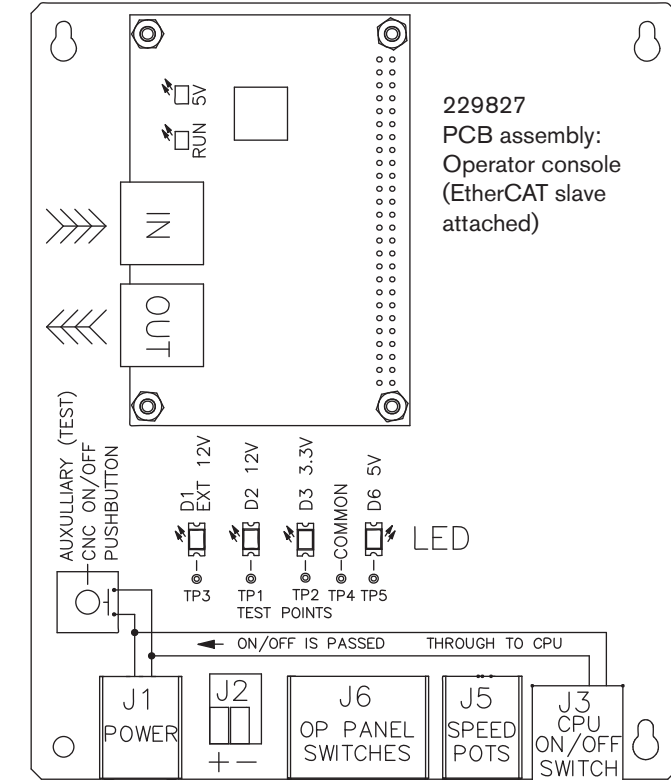

229827
PCB assembly:
Operator console
(EtherCAT slave
attached)

229727 Switch I/O harness

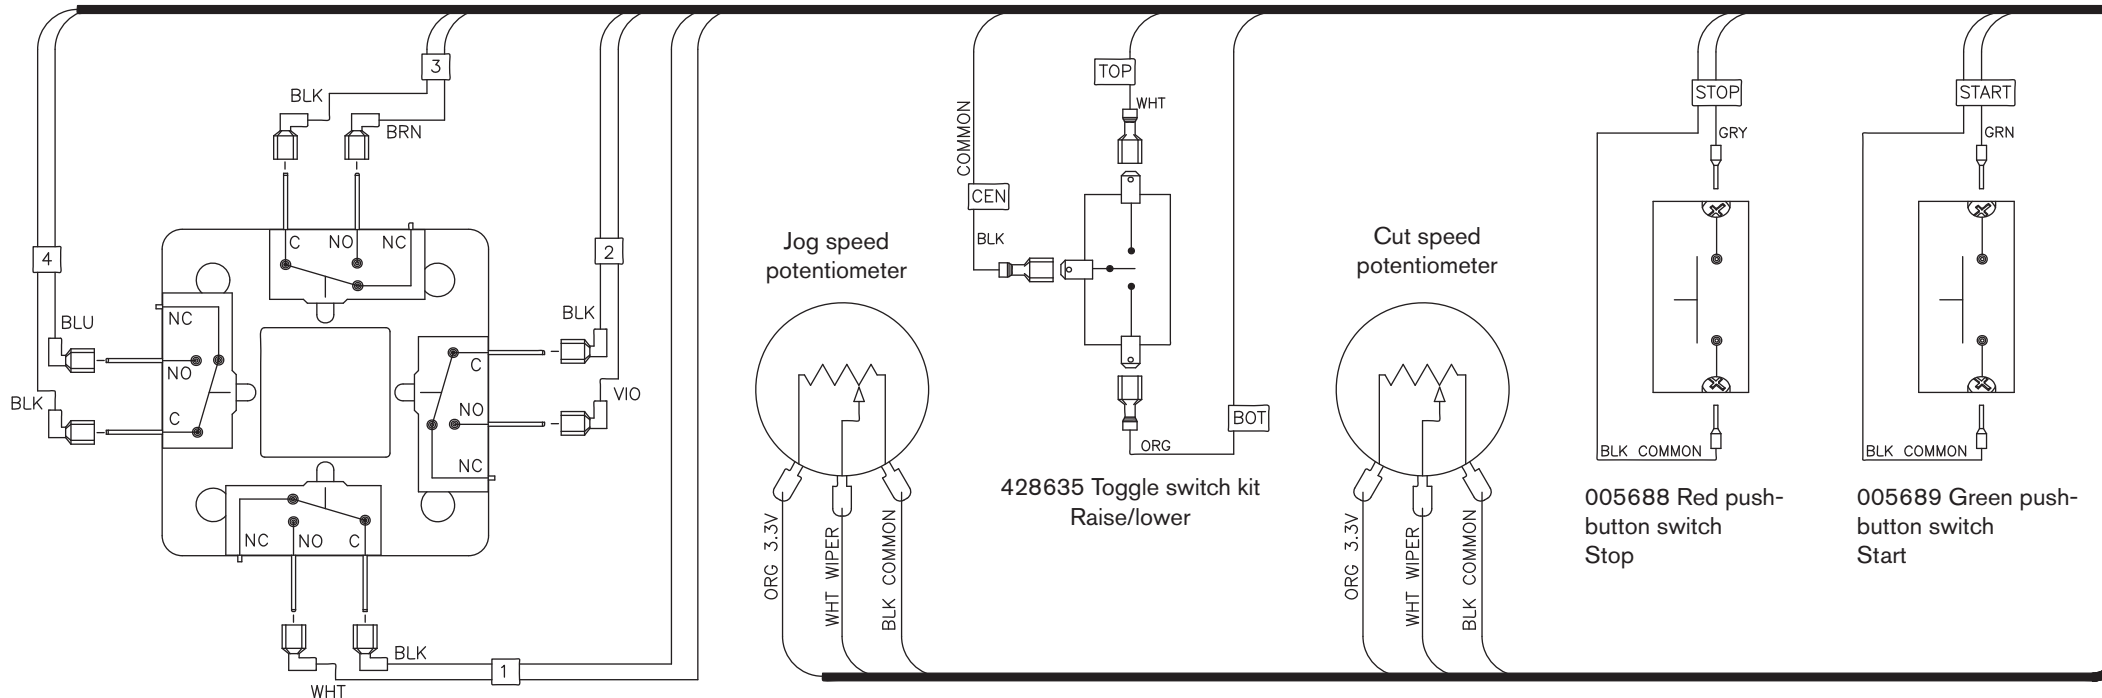

005715 Joystick

229729 Harness (includes speed potentiometers)

229729 Potentiometer harness pinout

J5 pin	Wire color	Signal	Destination
1A	Orange (ORG)	+3.3 V	POT1-3
2A	White (WHT)	Wiper	POT1-2
3A	Black (BLK)	Common	POT1-1
1B	Orange (ORG)	+3.3 V	POT2-3
2B	White (WHT)	Wiper	POT2-2
3B	Black (BLK)	Common	POT2-1