Hypertherm®

# XPR® Short Torch with Integrated Lead

## Instruction Manual




810640 – REVISION 0

ENGLISH



# Register your new Hypertherm system

### Benefits of registration

- ☑ **Safety:** Registration allows us to contact you in the unlikely event a safety or quality notification is required.
- ☑ **Education:** Registration gives you free access to online product training content via the Hypertherm Cutting Institute.
- ☑ **Confirmation of ownership:** Registration can serve as proof of purchase in case of an insurance loss.

Go to **www.hypertherm.com/registration** for easy and fast registration.

If you experience any problems with the product registration process, please contact registration@hypertherm.com.

### For your records

Serial number: _____

Purchase date: _____

Distributor: _____

_____

_____

Maintenance notes: _____

_____

_____

_____

_____

XPR, EasyConnect, TorchConnect, and Hypertherm are trademarks of Hypertherm, Inc. and may be registered in the United States and other countries. All other trademarks are the property of their respective holders.

Environmental stewardship is one of Hypertherm's core values. www.hypertherm.com/environment

100% Associate-owned

© 2020 Hypertherm, Inc.

# *XPR Short Torch with Integrated Lead*

## Instruction Manual

810640
REVISION 0

ENGLISH
Original instructions

August 2020

Hypertherm, Inc.
Hanover, NH 03755 USA
www.hypertherm.com

***Hypertherm, Inc.***
*Etna Road, P.O. Box 5010*
*Hanover, NH 03755 USA*
*603-643-3441 Tel (Main Office)*
*603-643-5352 Fax (All Departments)*
*info@hypertherm.com (Main Office Email)*
***800-643-9878 Tel (Technical Service)***
*technical.service@hypertherm.com (Technical Service Email)*
***800-737-2978 Tel (Customer Service)***
*customer.service@hypertherm.com (Customer Service Email)*
***866-643-7711 Tel (Return Materials Authorization)***
***877-371-2876 Fax (Return Materials Authorization)***
*return.materials@hypertherm.com (RMA email)*

***Hypertherm México, S.A. de C.V.***
*Avenida Toluca No. 444, Anexo 1,*
*Colonia Olivar de los Padres*
*Delegación Álvaro Obregón*
*México, D.F. C.P. 01780*
*52 55 5681 8109 Tel*
*52 55 5683 2127 Fax*
*Soporte.Tecnico@hypertherm.com (Technical Service Email)*

***Hypertherm Plasmatechnik GmbH***
*Sophie-Scholl-Platz 5*
*63452 Hanau*
*Germany*
*00 800 33 24 97 37 Tel*
*00 800 49 73 73 29 Fax*
***31 (0) 165 596900 Tel (Technical Service)***
***00 800 4973 7843 Tel (Technical Service)***
*technicalservice.emea@hypertherm.com (Technical Service Email)*

***Hypertherm (Singapore) Pte Ltd.***
*82 Genting Lane*
*Media Centre*
*Annexe Block #A01-01*
*Singapore 349567, Republic of Singapore*
*65 6841 2489 Tel*
*65 6841 2490 Fax*
*Marketing.asia@hypertherm.com (Marketing Email)*
*TechSupportAPAC@hypertherm.com (Technical Service Email)*

***Hypertherm Japan Ltd.***
*Level 9, Edobori Center Building*
*2-1-1 Edobori, Nishi-ku*
*Osaka 550-0002 Japan*
*81 6 6225 1183 Tel*
*81 6 6225 1184 Fax*
*HTJapan.info@hypertherm.com (Main Office Email)*
*TechSupportAPAC@hypertherm.com (Technical Service Email)*

***Hypertherm Europe B.V.***
*Vaartveld 9, 4704 SE*
*Roosendaal, Nederland*
*31 165 596907 Tel*
*31 165 596901 Fax*
*31 165 596908 Tel (Marketing)*
***31 (0) 165 596900 Tel (Technical Service)***
***00 800 4973 7843 Tel (Technical Service)***
*technicalservice.emea@hypertherm.com*
*(Technical Service Email)*

***Hypertherm (Shanghai) Trading Co., Ltd.***
*B301, 495 ShangZhong Road*
*Shanghai, 200231*
*PR China*
*86-21-80231122 Tel*
*86-21-80231120 Fax*
***86-21-80231128 Tel (Technical Service)***
*techsupport.china@hypertherm.com*
*(Technical Service Email)*

***South America & Central America: Hypertherm Brasil Ltda.***
*Rua Bras Cubas, 231 – Jardim Maia*
*Guarulhos, SP – Brasil*
*CEP 07115-030*
*55 11 2409 2636 Tel*
*tecnico.sa@hypertherm.com (Technical Service Email)*


***Hypertherm Korea Branch***
*#3904. APEC-ro 17. Heaundae-gu. Busan.*
*Korea 48060*
*82 (0)51 747 0358 Tel*
*82 (0)51 701 0358 Fax*
*Marketing.korea@hypertherm.com (Marketing Email)*
*TechSupportAPAC@hypertherm.com*
*(Technical Service Email)*

***Hypertherm Pty Limited***
*GPO Box 4836*
*Sydney NSW 2001, Australia*
*61 (0) 437 606 995 Tel*
*61 7 3219 9010 Fax*
*au.sales@Hypertherm.com (Main Office Email)*
*TechSupportAPAC@hypertherm.com*
*(Technical Service Email)*

***Hypertherm (India) Thermal Cutting Pvt. Ltd***
*A-18 / B-1 Extension,*
*Mohan Co-Operative Industrial Estate,*
*Mathura Road, New Delhi 110044, India*
*91-11-40521201/ 2/ 3 Tel*
*91-11 40521204 Fax*
*HTIndia.info@hypertherm.com (Main Office Email)*
*TechSupportAPAC@hypertherm.com*
*(Technical Service Email)*




For training and education resources, go to the Hypertherm Cutting Institute (HCI) online at www.hypertherm.com/hci.



## ENGLISH

WARNING! Before operating any Hypertherm equipment, read the safety instructions in your product's manual, the *Safety and Compliance Manual* (80669C), *Waterjet Safety and Compliance Manual* (80943C), and *Radio Frequency Warning Manual* (80945C). Failure to follow safety instructions can result in personal injury or in damage to equipment.

Copies of the manuals may accompany the product in electronic and printed formats. You can also obtain copies of the manuals, in all languages available for each manual, from the "Documents library" at www.hypertherm.com.

## BG (БЪЛГАРСКИ/BULGARIAN)

ПРЕДУПРЕЖДЕНИЕ! Преди да работите с което и да е оборудване Hypertherm, прочетете инструкциите за безопасност в ръководството на вашия продукт, „Инструкция за безопасност и съответствие" (80669C), „Инструкция за безопасност и съответствие на Waterjet" (80943C) и „Инструкция за предупреждение за радиочестота" (80945C).

Копия на ръководствата може да придружават продукта в електронен и в печатен формат. Можете да получите копия на ръководствата, предлагани на всички езици, от „Documents library" (Библиотека за документи) на адрес www.hypertherm.com.

## CS (ČESKY/CZECH)

VAROVÁNÍ! Před uvedením jakéhokoli zařízení Hypertherm do provozu si přečtěte bezpečnostní pokyny v příručce k produktu a v *Manuálu pro bezpečnost a dodržování předpisů* (80669C), *Manuálu pro bezpečnost a dodržování předpisů při řezání vodním paprskem* (80943C) a *Manuálu varování ohledně rádiových frekvencí* (80945C).

Kopie příruček a manuálů mohou být součástí dodávky produktu, a to v elektronické i tištěné formě. Kopie příruček a manuálů ve všech jazykových verzích, v nichž byly dané příručky a manuály vytvořeny, naleznete v „Knihovně dokumentů" na webových stránkách www.hypertherm.com.

## DA (DANSK/DANISH)

ADVARSEL! Inden Hypertherm udstyr tages i brug skal sikkerhedsinstruktionerne i produktets manual og i *Manual om sikkerhed og overholdelse af krav* (80669C), *Manual om sikkerhed og overholdelse af krav for vandstråleskæring* (80943C), og *Manual om radiofrekvensadvarsel* (80945C), gennemlæses.

Kopier af manualerne kan ledsage produktet i elektroniske og trykte formater. Du kan også få kopier af manualer, på alle sprog der er til rådighed for hver manuel, fra "Dokumentbiblioteket" på www.hypertherm.com.

## DE (DEUTSCH/GERMAN)

WARNUNG! Bevor Sie ein Hypertherm-Gerät in Betrieb nehmen, lesen Sie bitte die Sicherheitsanweisungen in Ihrer Bedienungsanleitung, das *Handbuch für Sicherheit und Übereinstimmung* (80669C), das *Handbuch für Sicherheit und Compliance bei Wasserstrahl-Schneidanlagen* (80943C) und das *Handbuch für Hochfrequenz-Warnung* (80945C).

Bedienungsanleitungen und Handbücher können dem Gerät in elektronischer Form oder als Druckversion beiliegen. Alle Handbücher und Anleitungen können in den jeweils verfügbaren Sprachen auch in der „Dokumente-Bibliothek" unter www.hypertherm.com heruntergeladen werden.

## ES (ESPAÑOL/SPANISH)

¡ADVERTENCIA! Antes de operar cualquier equipo Hypertherm, lea las instrucciones de seguridad del manual de su producto, del *Manual de seguridad y cumplimiento* (80669C), del *Manual de seguridad y cumplimiento en corte con chorro de agua* (80943C) y del *Manual de advertencias de radiofrecuencia* (80945C).

Pueden venir copias de los manuales en formato electrónico e impreso junto con el producto. También se pueden obtener copias de los manuales, en todos los idiomas disponibles para cada manual, de la "Biblioteca de documentos" en www.hypertherm.com.

## ET (EESTI/ESTONIAN)

HOIATUS! Enne Hyperthermi mis tahes seadme kasutamist lugege läbi toote kasutusjuhendis olevad ohutusjuhised ning *Ohutus- ja vastavusjuhend* (80669C), *Veejoa ohutuse ja vastavuse juhend* (80943C) ja *Raadiosageduse hoiatusjuhend* (80945C). Ohutusjuhiste eiramine võib põhjustada vigastusi ja kahjustada seadmeid.

Juhiste koopiad võivad olla tootega kaasas elektroonilises ja trükivormingus. Juhiste koopiaid kõigis iga käsiraamatu jaoks saadaolevas keeles saate hankida ka „Documents library (dokumentide raamatukogust)" lehel www.hypertherm.com.

## FI (SUOMI/FINNISH)

VAROITUS! Ennen minkään Hypertherm-laitteen käyttöä lue tuotteen käyttöoppaassa olevat turvallisuusohjeet, *turvallisuuden ja vaatimustenmukaisuuden käsikirja* (80669C), vesileikkauksen *turvallisuuden ja vaatimustenmukaisuuden käsikirja* (80943C) ja *radiotaajuusvaroitusten käsikirja* (80945C).

Käyttöoppaiden kopiot voivat olla tuotteen mukana elektronisessa ja tulostetussa muodossa. Voit saada käyttöoppaiden kopiot kaikilla kielillä "latauskirjastosta", joka on osoitteessa www.hypertherm.com.

## FR (FRANÇAIS/FRENCH)

AVERTISSEMENT! Avant d'utiliser tout équipement Hypertherm, lire les consignes de sécurité du manuel de votre produit, du *Manuel de sécurité et de conformité* (80669C), du *Manuel de sécurité et de conformité du jet d'eau* (80943C) et du *Manuel d'avertissement relatif aux radiofréquences* (80945C).

Des copies de ces manuels peuvent accompagner le produit en format électronique et papier. Vous pouvez également obtenir des copies de chaque manuel dans toutes les langues disponibles à partir de la « Bibliothèque de documents » sur www.hypertherm.com.

## GR (ΕΛΛΗΝΙΚΑ/GREEK)

ΠΡΟΕΙΔΟΠΟΙΗΣΗ! Πριν θέσετε σε λειτουργία οποιονδήποτε εξοπλισμό της Hypertherm, διαβάστε τις οδηγίες ασφαλείας στο εγχειρίδιο του προϊόντος και στο *εγχειρίδιο ασφάλειας και συμμόρφωσης* (80669C), στο *εγχειρίδιο ασφάλειας και συμμόρφωσης του waterjet* (80943C) και στο *εγχειρίδιο προειδοποιήσεων για τις ραδιοσυχνότητες* (80945C).

Αντίγραφα των εγχειριδίων μπορεί να συνοδεύουν το προϊόν σε ηλεκτρονική και έντυπη μορφή. Μπορείτε, επίσης, να λάβετε αντίγραφα των εγχειριδίων σε όλες τις γλώσσες που διατίθενται για κάθε εγχειρίδιο από την ψηφιακή βιβλιοθήκη εγγράφων (Documents library) στη διαδικτυακή τοποθεσία www.hypertherm.com.

## HU (MAGYAR/HUNGARIAN)

VIGYÁZAT! Mielőtt bármilyen Hypertherm berendezést üzemeltetne, olvassa el a biztonsági információkat a termék kézikönyvében, a *Biztonsági és szabálykövetési kézikönyvben* (80669C), a *Vízsugaras biztonsági és szabálykövetési kézikönyvben* (80943C) és a *Rádiófrekvenciás figyelmeztetéseket tartalmazó kézikönyvben* (80945C).

A termékhez a kézikönyv példányai elektronikus és nyomtatott formában is mellékelve lehetnek. A kézikönyvek példányai (minden nyelven) a www.hypertherm.com weboldalon a „Documents library" (Dokumentum könyvtár) részben is beszerezhetők.

## ID (BAHASA INDONESIA/INDONESIAN)

PERINGATAN! Sebelum mengoperasikan peralatan Hypertherm, bacalah petunjuk keselamatan dalam manual produk Anda, *Manual Keselamatan dan Kepatuhan* (80669C), *Manual Keselamatan dan Kepatuhan Jet Air* (80943C), dan *Manual Peringatan Frekuensi Radio* (80945C). Kegagalan mengikuti petunjuk keselamatan dapat menyebabkan cedera pribadi atau kerusakan pada peralatan.

Produk mungkin disertai salinan manual dalam format elektronik maupun cetak. Anda juga dapat memperoleh salinan manual, dalam semua bahasa yang tersedia untuk setiap manual, dari "Perpustakaan dokumen" di www.hypertherm.com.

**IT (ITALIANO/ITALIAN)**

AVVERTENZA! Prima di usare un'attrezzatura Hypertherm, leggere le istruzioni sulla sicurezza nel manuale del prodotto, nel *Manuale sulla sicurezza e la conformità* (80669C), nel *Manuale sulla sicurezza e la conformità Waterjet* (80943C) e nel *Manuale di avvertenze sulla radiofrequenza* (80945C).

Il prodotto può essere accompagnato da copie elettroniche e cartacee del manuale. È anche possibile ottenere copie del manuale, in tutte le lingue disponibili per ogni manuale, dall'"Archivio documenti" all'indirizzo www.hypertherm.com.

**JA (日 本語/JAPANESE)**

警告 ! Hypertherm 機器を操作する前に、この製品説明書にある安全情報、「安全とコンプライアンスマニュアル」(80669C) 、「ウォータージェットの安全とコンプライアンス」(80943C)、「高周波警告」(80945C) をお読みください。

説明書のコピーは、電子フォーマット、または印刷物として製品に同梱されています。各説明書は、www.hypertherm.com の「ドキュメントライブラリ」から各言語で入手できます。

**KO (한국어/KOREAN)**

경고! Hypertherm 장비를 사용하기 전에 제품 설명서와 안전 및 규정 준수 설명서(80669C), 워터젯 안전 및 규정 준수 설명서(80943C) 그리고 무선 주파수 경고 설명서(80945C)에 나와 있는 안전 지침을 읽으십시오.

전자 형식과 인쇄된 형식으로 설명서 사본이 제품과 함께 제공될 수 있습니다. www.hypertherm.com 의 'Documents library (문서 라이브러리)'에서도 모든 언어로 이용할 수 있는 설명서 사본을 얻을수 있습니다.

**NE (NEDERLANDS/DUTCH)**

WAARSCHUWING! Lees voordat u Hypertherm-apparatuur gebruikt de veiligheidsinstructies in de producthandleiding, in de *Veiligheids- en nalevingshandleiding* (80669C) in de *Veiligheids- en nalevingshandleiding voor waterstralen* (80943C) en in de *Waarschuwingshandleiding radiofrequentie* (80945C).

De handleidingen kunnen in elektronische en gedrukte vorm met het product worden meegeleverd. De handleidingen, elke handleiding beschikbaar in alle talen, zijn ook verkrijgbaar via de "Documentenbibliotheek" op www.hypertherm.com.

**NO (NORSK/NORWEGIAN)**

ADVARSEL! Før du bruker noe Hypertherm-utstyr, må du lese sikkerhetsinstruksjonene i produktets håndbok, *håndboken om sikkerhet og samsvar* (80669C), *håndboken om vannjet sikkerhet og samsvar* (80943C), og *håndboken om radiofrekvensadvarsler* (80945C).

Eksemplarer av håndbøkene kan medfølge produktet i elektroniske og trykte utgaver. Du kan også få eksemplarer av håndbøkene i alle tilgjengelige språk for hver håndbok fra dokumentbiblioteket på www.hypertherm.com.

**PL (POLSKI/POLISH)**

OSTRZEŻENIE! Przed rozpoczęciem obsługi jakiegokolwiek systemu firmy Hypertherm należy się zapoznać z instrukcjami bezpieczeństwa zamieszczonymi w podręczniku produktu, w p*odręczniku bezpieczeństwa i zgodności* (80669C), *podręczniku bezpieczeństwa i zgodności systemów strumienia wody* (80943C) oraz *podręczniku z ostrzeżeniem o częstotliwości radiowej* (80945C).

Do produktu mogą być dołączone kopie podręczników w formacie elektronicznym i drukowanym. Kopie podręczników, w każdym udostępnionym języku, można również znaleźć w „Bibliotece dokumentów" pod adresem www.hypertherm.com.

**PT (PORTUGUÊS/PORTUGUESE)**

ADVERTÊNCIA! Antes de operar qualquer equipamento Hypertherm, leia as instruções de segurança no manual do seu produto, no *Manual de Segurança e de Conformidade* (80669C), no *Manual de Segurança e de Conformidade do Waterjet* (80943C) e no *Manual de Advertência de radiofrequência* (80945C).

Cópias dos manuais podem acompanhar os produtos nos formatos eletrônico e impresso. Também é possível obter cópias dos manuais em todos os idiomas disponíveis para cada manual na "Biblioteca de documentos" em www.hypertherm.com.

**RO (ROMÂNĂ/ROMANIAN)**

AVERTIZARE! Înainte de utilizarea oricărui echipament Hypertherm, citiți instrucțiunile de siguranță din manualul produsului, *manualul de siguranță și conformitate* (80669C), *manualul de siguranță și conformitate Waterjet* (80943C) și din *manualul de avertizare privind radiofrecvența* (80945C).

Produsul poate fi însoțit de copii ale manualului în format tipărit și electronic. De asemenea, dumneavoastră puteți obține copii ale manualelor, în toate limbile disponibile pentru fiecare manual, din cadrul secțiunii „Bibliotecă documente" aflată pe site-ul www.hypertherm.com.

**RU (РУССКИЙ/RUSSIAN)**

БЕРЕГИСЬ! Перед работой с любым оборудованием Hypertherm ознакомьтесь с инструкциями по безопасности, представленными в руководстве, которое поставляется вместе с продуктом, в *Руководстве по безопасности и соответствию* (80669C), в *Руководстве по безопасности и соответствию для водоструйной резки* (80943C) и *Руководстве по предупреждению о радиочастотном излучении* (80945C).

Копии руководств, которые поставляются вместе с продуктом, могут быть представлены в электронном и бумажном виде. Копии руководств на всех языках, на которые переведено то или иное руководство, можно также загрузить в разделе «Библиотека документов» на веб-сайте www.hypertherm.com.

**SK (SLOVENČINA/SLOVAK)**

VÝSTRAHA! Pred použitím akéhokoľvek zariadenia od spoločnosti Hypertherm si prečítajte bezpečnostné pokyny v návode na obsluhu vášho zariadenia a v *Manuáli o bezpečnosti a súlade s normami* (80669C), *Manuáli o bezpečnosti a súlade s normami pre systém rezania vodou* (80943C) a v *Manuáli s informáciami o rádiofrekvencii* (80945C).

Kópia návodu, ktorá je dodávaná s produktom, môže mať elektronickú alebo tlačenú podobu. Kópie návodov, vo všetkých dostupných jazykoch, sú k dispozícii aj v sekcii z „knižnice Dokumenty" na www.hypertherm.com.

**SL (SLOVENŠČINA/SLOVENIAN)**

OPOZORILO! Pred uporabo katerekoli Hyperthermove opreme preberite varnostna navodila v priročniku vašega izdelka, v *Priročniku za varnost in skladnost* (80669C), v P*riročniku za varnost in skladnost sistemov rezanja z vodnim curkom* (80943C) in v *Priročniku Opozorilo o radijskih frekvencah* (80945C).

Izdelku so lahko priloženi izvodi priročnikov v elektronski ali tiskani obliki. Izvode priročnikov v vseh razpoložljivih jezikih si lahko prenesete tudi iz knjižnice dokumentov "Documents library" na naslovu www.hypertherm.com.

**SR (SRPSKI/SERBIAN)**

UPOZORENJE! Pre rukovanja bilo kojom Hyperthermovom opremom pročitajte uputstva o bezbednosti u svom priručniku za proizvod, *Priručniku o bezbednosti i usaglašenosti* (80669C), *Priručniku o bezbednosti i usaglašenosti Waterjet tehnologije* (80943C) i *Priručniku sa upozorenjem o radio-frekvenciji* (80945C).

Može se dogoditi da kopije priručnika prate proizvod u elektronskom i štampanom formatu. Takođe možete da pronađete kopije priručnika, na svim jezicima koji su dostupni za svaki od priručnika, u "Biblioteci dokumenata" ("Documents library") na www.hypertherm.com.

**SV (SVENSKA/SWEDISH)**

VARNING! Läs häftet säkerhetsinformationen i din produkts *säkerhets- och efterlevnadsmanual* (80669C), *säkerhets- och efterlevnadsmanualen för Waterjet* (80943C) och *varningsmanualen för radiofrekvenser* (80945C) för viktig säkerhetsinformation innan du använder eller underhåller Hypertherm-utrustning.

Kopior av manualen kan medfölja produkten i elektronisk och tryckform. Du hittar även kopior av manualerna i alla tillgängliga språk i dokumentbiblioteket (Documents library) på www.hypertherm.com.

## TH (ภาษาไทย/THAI)

คำเตือน! ก่อนการใช้งานอุปกรณ์ของ Hypertherm ทั้งหมด โปรดอ่านคำแนะนำด้านความปลอดภัยในคู่มือการใช้สินค้า คู่มือด้านความปลอดภัยและการปฏิบัติตาม (80669C), คู่มือด้านความปลอดภัยและการปฏิบัติตามสำหรับการใช้หัวตัดระบบวอเตอร์เจ็ต (80943C) และ คู่มือคำเตือนเกี่ยวกับความถี่วิทยุ (80945C) การไม่ปฏิบัติตามคำแนะนำด้านความปลอดภัยอาจส่งผลให้เกิดการบาดเจ็บหรือเกิดความเสียหายต่ออุปกรณ์

สินค้าอาจมีสำเนาคู่มือในรูปแบบอิเล็กทรอนิกส์และแบบสิ่งพิมพ์แนบมาด้วย นอกจากนี้ คุณสามารถขอรับสำเนาคู่มือแต่ละประเภทเป็นภาษาต่าง ๆ ที่มีให้ใช้งานได้ที่ “คลังเอกสาร” ในเว็บไซต์ www.hypertherm.com

## TR (TÜRKÇE/TURKISH)

UYARI! Bir Hypertherm ekipmanını çalıştırmadan önce, ürününüzün kullanım kılavuzunda, *Güvenlik ve Uyumluluk Kılavuzu'nda* (80669C), *Su Jeti Güvenlik ve Uyumluluk Kılavuzu'nda* (80943C) ve *Radyo Frekansı Uyarısı Kılavuzu'nda* (80945C) yer alan güvenlik talimatlarını okuyun.

Kılavuzların kopyaları, elektronik ve basılı formatta ürünle birlikte verilebilir. Her biri tüm dillerde yayınlanan kılavuzların kopyalarını www.hypertherm.com adresindeki “Documents library” (Dosyalar kitaplığı) başlığından da elde edebilirsiniz.

## VI (TIẾNG VIỆT/VIETNAMESE)

CẢNH BÁO! Trước khi vận hành bất kỳ thiết bị Hypertherm nào, hãy đọc các hướng dẫn an toàn trong hướng dẫn sử dụng sản phẩm của bạn, *Sổ tay An toàn và Tuân thủ* (80669C), *Sổ tay An toàn và Tuân thủ Tia nước* (80943C), và *Hướng dẫn Cảnh báo Tần số Vô tuyến* (80945C). Không tuân thủ các hướng dẫn an toàn có thể dẫn đến thương tích cá nhân hoặc hư hỏng thiết bị.

Bản sao của các hướng dẫn sử dụng có thể đi kèm sản phẩm ở định dạng điện tử và bản in. Bạn cũng có thể lấy bản sao của các hướng dẫn sử dụng, thuộc tất cả các ngôn ngữ hiện có cho từng hướng dẫn sử dụng, từ “Thư viện tài liệu” tại địa chỉ www.hypertherm.com.

## ZH-CN (简 体中文/CHINESE SIMPLIFIED)

警告！ 在操作任何海宝设备之前，请阅读产品手册、《安全和法规遵守手册》 (80669C)、《水射流安全和法规遵守手册》 (80943C) 以及《射频警告手册》 (80945C) 中的安全操作说明。

随产品提供的手册可能提供电子版和印刷版两种格式。您也可从 “Documents library” （文档资料库）中获取每本手册所有可用语言的副本，网址为 www.hypertherm.com.

## ZH-TW (繁 體中文/CHINESE TRADITIONAL)

警告！在操作任何 Hypertherm 設備前，請先閱讀您產品手冊內的安全指示，包括 《安全和法規遵從手冊》(80669C) 、《水刀安全和法規遵從手冊》( 80943C )，以及 《無線電頻率警示訊號手冊》( 80945C )。

手冊複本可能以電子和印刷格式隨附產品提供。您也可以在 www.hypertherm.com 的 「文檔資料庫」內獲取所有手冊的多語種複本。

# Contents


**Warranty ..... SC-11**

Attention ..... SC-11
General ..... SC-11
Patent indemnity ..... SC-11
Limitation of liability ..... SC-11
National and local codes ..... SC-11
Liability cap ..... SC-12
Insurance ..... SC-12
Transfer of rights ..... SC-12
Waterjet product warranty coverage ..... SC-12

**1 Introduction ..... 13**

Overview ..... 13
Instruction manual references ..... 13

**2 Specifications ..... 15**

Torch specifications ..... 15
Lead specifications ..... 17
Bend radius ..... 17
Bend angles for cutting ..... 17

**3 Installation ..... 19**

Overview ..... 20
Installation steps ..... 21
Prepare the cutting system for XPR short torch installation ..... 21
Connect the torch lead to the TorchConnect console ..... 21
Interchange the coolant-hose connections in the plasma power supply ..... 22
Install the torch in the torch mounting bracket ..... 25
Install the consumables ..... 27
Use the cut charts ..... 27

**4 Part Replacement Procedure ..... 29**

Replace the solenoid valve in the torch ..... 30

**5 Parts List ..... 33**

XPR short torch with integrated lead ..... 33
Torch mounting bracket ..... 34
Solenoid valve ..... 34
Solenoid-valve installation tool ..... 34

## Attention

Genuine Hypertherm parts are the factory-recommended replacement parts for your Hypertherm system. Any damage or injury caused by the use of other than genuine Hypertherm parts may not be covered by the Hypertherm warranty, and will constitute misuse of the Hypertherm Product.

You are solely responsible for the safe use of the Product. Hypertherm does not and cannot make any guarantee or warranty regarding the safe use of the product in your environment.

## General

Hypertherm, Inc. warrants that its Products shall be free from defects in materials and workmanship for the specific periods of time set forth herein and as follows: if Hypertherm is notified of a defect (i) with respect to the plasma power supply within a period of two (2) years from the date of its delivery to you, with the exception of Powermax brand power supplies, which shall be within a period of three (3) years from the date of delivery to you, and (ii) with respect to the torch and leads within a period of one (1) year from its date of delivery to you, with the exception of the HPRXD short torch with integrated lead, which shall be within a period of six (6) months from the date of delivery to you, and with respect to torch lifter assemblies within a period of one (1) year from its date of delivery to you, and with respect to Automation products one (1) year from its date of delivery to you, with the exception of the EDGE Connect CNC, EDGE Connect T CNC, EDGE Connect TC CNC, EDGE Pro CNC, EDGE Pro Ti CNC, MicroEDGE Pro CNC, and ArcGlide THC, which shall be within a period of two (2) years from the date of delivery to you, and (iii) with respect to HyIntensity fiber laser components within a period of two (2) years from the date of its delivery to you, with the exception of laser heads and beam delivery cables, which shall be within a period of one (1) year from its date of delivery to you.

All third-party engines, engine accessories, alternators, and alternator accessories are covered by the respective manufacturers' warranties and not covered by this warranty.

This warranty shall not apply to any Powermax brand power supplies that have been used with phase converters. In addition, Hypertherm does not warranty systems that have been damaged as a result of poor power quality, whether from phase converters or incoming line power. This warranty shall not apply to any product which has been incorrectly installed, modified, or otherwise damaged.

Hypertherm provides repair, replacement or adjustment of the Product as the sole and exclusive remedy, if and only if the warranty set forth herein properly is invoked and applies. Hypertherm, at its sole option, shall repair, replace, or adjust, free of charge, any defective Products covered by this warranty which shall be returned with Hypertherm's prior authorization (which shall not be unreasonably withheld), properly packed, to Hypertherm's place of business in Hanover, New Hampshire, or to an authorized Hypertherm repair facility, all costs, insurance and freight pre paid by the customer. Hypertherm shall not be liable for any repairs, replacement, or adjustments of Products covered by this warranty, except those made pursuant to this paragraph and with Hypertherm's prior written consent.

The warranty set forth above is exclusive and is in lieu of all other warranties, express, implied, statutory, or otherwise with respect to the Products or as to the results which may be obtained therefrom, and all implied warranties or conditions of quality or of merchantability or fitness for a particular purpose or against infringement. The foregoing shall constitute the sole and exclusive remedy for any breach by Hypertherm of its warranty.

Distributors/OEMs may offer different or additional warranties, but Distributors/OEMs are not authorized to give any additional warranty protection to you or make any representation to you purporting to be binding upon Hypertherm.

## Patent indemnity

Except only in cases of products not manufactured by Hypertherm or manufactured by a person other than Hypertherm not in strict conformity with Hypertherm's specifications and in cases of designs, processes, formulae, or combinations not developed or purported to be developed by Hypertherm, Hypertherm will have the right to defend or settle, at its own expense, any suit or proceeding brought against you alleging that the use of the Hypertherm product, alone and not in combination with any other product not supplied by Hypertherm, infringes any patent of any third party. You shall notify Hypertherm promptly upon learning of any action or threatened action in connection with any such alleged infringement (and in any event no longer than fourteen (14) days after learning of any action or threat of action), and Hypertherm's obligation to defend shall be conditioned upon Hypertherm's sole control of, and the indemnified party's cooperation and assistance in, the defense of the claim.

## Limitation of liability

**In no event shall Hypertherm be liable to any person or entity for any incidental, consequential direct, indirect, punitive or exemplary damages (including but not limited to lost profits) regardless of whether such liability is based on breach of contract, tort, strict liability, breach of warranty, failure of essential purpose, or otherwise, and even if advised of the possibility of such damages. Hypertherm shall not be liable for any losses to Distributor based on down time, lost production or lost profits. It is the intention of the Distributor and Hypertherm that this provision be construed by a court as being the broadest limitation of liability consistent with applicable law.**

## National and local codes

National and local codes governing plumbing and electrical installation shall take precedence over any instructions contained in this manual. In no event shall Hypertherm be liable for injury to persons or property damage by reason of any code violation or poor work practices.

## Liability cap

**In no event shall Hypertherm's liability, if any, whether such liability is based on breach of contract, tort, strict liability, breach of warranties, failure of essential purpose or otherwise, for any claim, action, suit or proceeding (whether in court, arbitration, regulatory proceeding or otherwise) arising out of or relating to the use of the Products exceed in the aggregate the amount paid for the Products that gave rise to such claim.**

## Insurance

At all times you will have and maintain insurance in such quantities and types, and with coverage sufficient and appropriate to defend and to hold Hypertherm harmless in the event of any cause of action arising from the use of the products.

## Transfer of rights

You may transfer any remaining rights you may have hereunder only in connection with the sale of all or substantially all of your assets or capital stock to a successor in interest who agrees to be bound by all of the terms and conditions of this Warranty. Within thirty (30) days before any such transfer occurs, you agree to notify in writing Hypertherm, which reserves the right of approval. Should you fail timely to notify Hypertherm and seek its approval as set forth herein, the Warranty set forth herein shall be null and void and you will have no further recourse against Hypertherm under the Warranty or otherwise.

## Waterjet product warranty coverage

| Product | Parts coverage |
|---|---|
| HyPrecision pumps | 27 months from the ship date, or 24 months from the date of proven installation, or 4,000 hours, whichever occurs first |
| PowerDredge abrasive removal system | 15 months from the ship date or 12 months from the date of proven installation, whichever occurs first |
| EcoSift abrasive recycling system | 15 months from the ship date or 12 months from the date of proven installation, whichever occurs first |
| Abrasive metering devices | 15 months from the ship date or 12 months from the date of proven installation, whichever occurs first |
| On/off valve air actuators | 15 months from the ship date or 12 months from the date of proven installation, whichever occurs first |
| Diamond orifices | 600 hours of use with the use of a thimble filter and compliance with Hypertherm's water quality requirements |


Consumable parts are not covered by this warranty. Consumable parts include, but are not limited to, high-pressure water seals, check valves, cylinders, bleed-down valves, low-pressure seals, high-pressure tubing, low- and high-pressure water filters and abrasive collection bags. All third-party pumps, pump accessories, hoppers, hopper accessories, dryer boxes, dryer box accessories and plumbing accessories are covered by the respective manufacturers' warranties and not covered by this warranty.

# 1 Introduction

## Overview

The XPR short torch with integrated lead (Figure 1) is for bevel cutting pipes and beams with XPR cutting systems. It has the same functionality as the standard XPR torch and is compatible with all XPR consumables and cutting processes.

**Figure 1** – XPR short torch with integrated lead

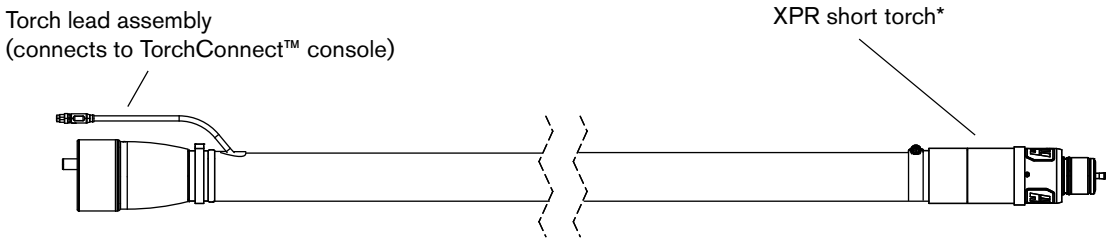


* Consumables are not included with the XPR short torch.

## Instruction manual references

This document refers to the instruction manual that came with your cutting system. If you do not have the instruction manual, technical documentation is available at www.hypertherm.com/docs.

- *XPR170 Instruction Manual* (810060)
- *XPR300 Instruction Manual* (809480)

# 2 Specifications

## Torch specifications


| Part number | Description | Lead length | Weight* |
|---|---|---|---|
| 420750 | XPR short torch with integrated lead | 4.0 m (13.1 ft) | 7.7 kg (17 lb) |

* Combined weight of the torch and lead. For information about torch-only weight, contact your cutting machine supplier or regional Hypertherm Technical Service team.


Figure 2 shows an XPR short torch with 300 A mild steel consumables. This drawing is an example. The length of your torch can be different, based on the consumables that you use.

Consumables are not included with the XPR short torch.

**Figure 2**

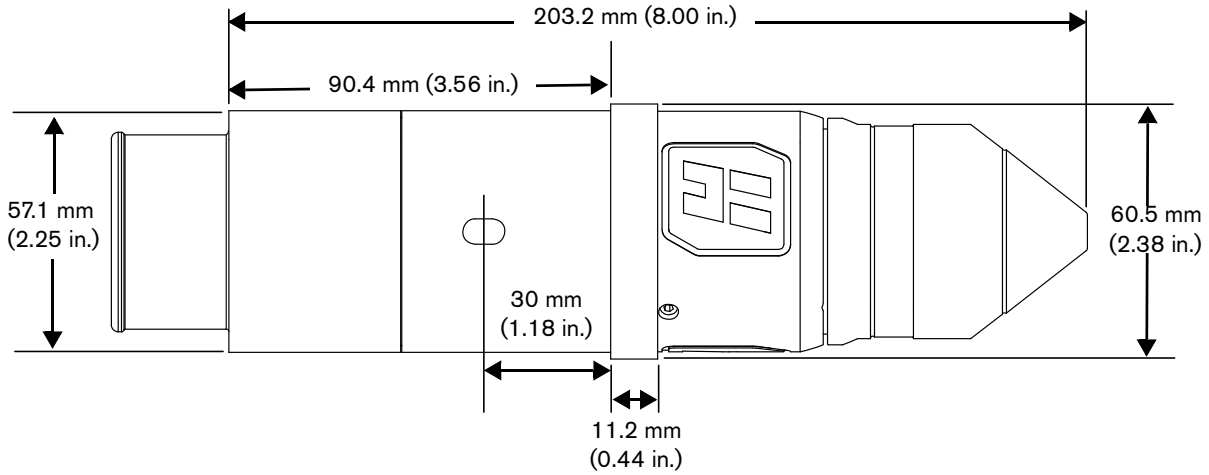


The XPR short torch has a small oval-shaped opening on one side of the torch body ❶. This opening is a keyway. It can be used to keep the torch and integrated lead rotationally aligned to optimize torch-to-lead flexibility for bevel cutting. This opening does not have an effect on how you install consumables or install the torch in the torch-mounting bracket.

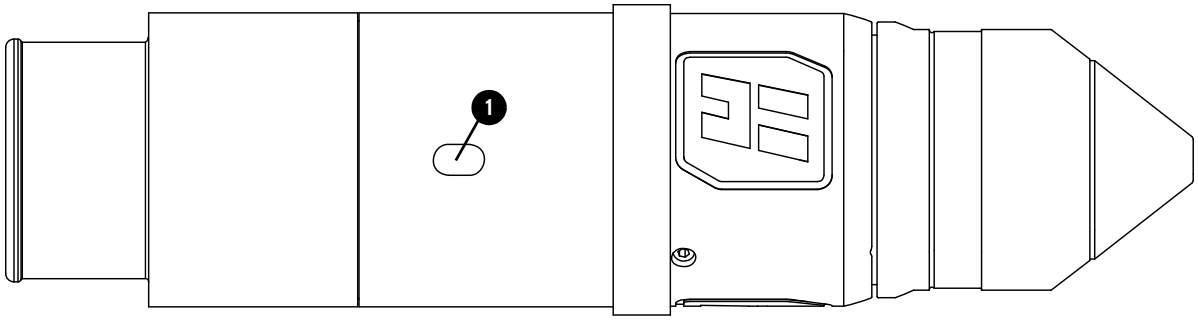

# Lead specifications


## Bend radius

The recommended minimum bend radius for the integrated lead is 101.6 mm (4 inches).

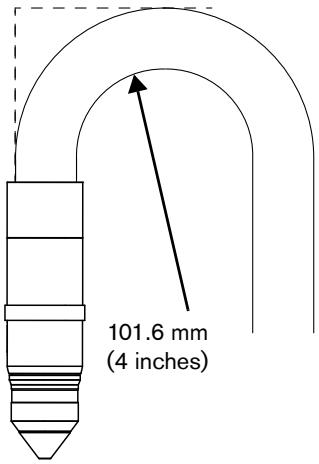



## Bend angles for cutting

Bend angles from 0° to 90° are recommended for cutting. Frequent bending at angles more than 90° can cause damage to the integrated lead.

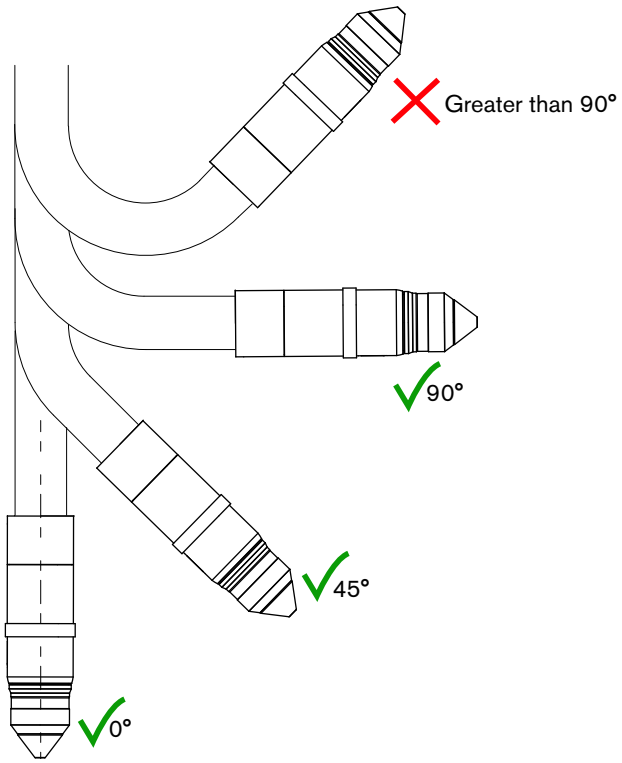

# 3 Installation

## ⚠ WARNING

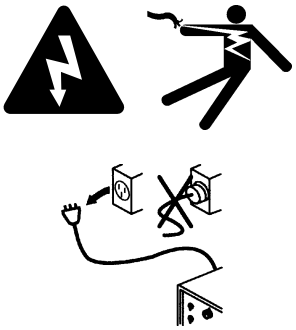

**ELECTRIC SHOCK CAN KILL**

Disconnect electrical power before doing installation or maintenance.

All work requiring removal of the plasma power supply outer cover or panels must be done by a qualified technician.


Refer to the *Safety and Compliance Manual* (80669C) for more safety precautions.

# Overview

1. Remove the power and supply-gas pressure from the cutting system.
2. Connect the torch lead to the TorchConnect console.
3. Interchange the coolant-hose connections in the plasma power supply.
4. Install the torch in the torch mounting bracket.
5. Select and install the consumables.

Figure 3 shows the installation location of the XPR short torch with integrated lead.

**Figure 3**

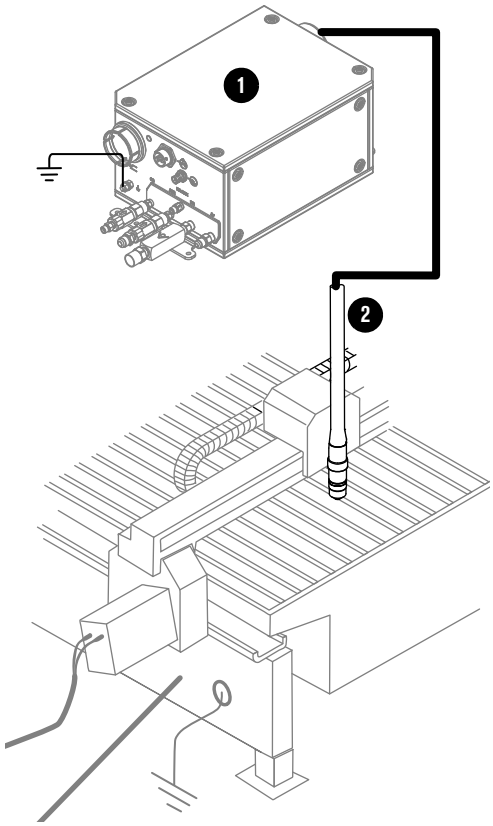


**1** TorchConnect console
**2** XPR short torch with integrated lead


# Installation steps

## Prepare the cutting system for XPR short torch installation

1. Follow these steps to remove the power from the cutting system:
   a. Set the line-disconnect switch to the OFF position.
   b. Make sure that the power-indicator LED on the plasma power supply, gas connect console, and TorchConnect console is **not** illuminated.
2. Remove the supply-gas pressure from the cutting system.


## Connect the torch lead to the TorchConnect console

1. Align the connectors in the torch-lead assembly with the corresponding receptacles in the TorchConnect console.

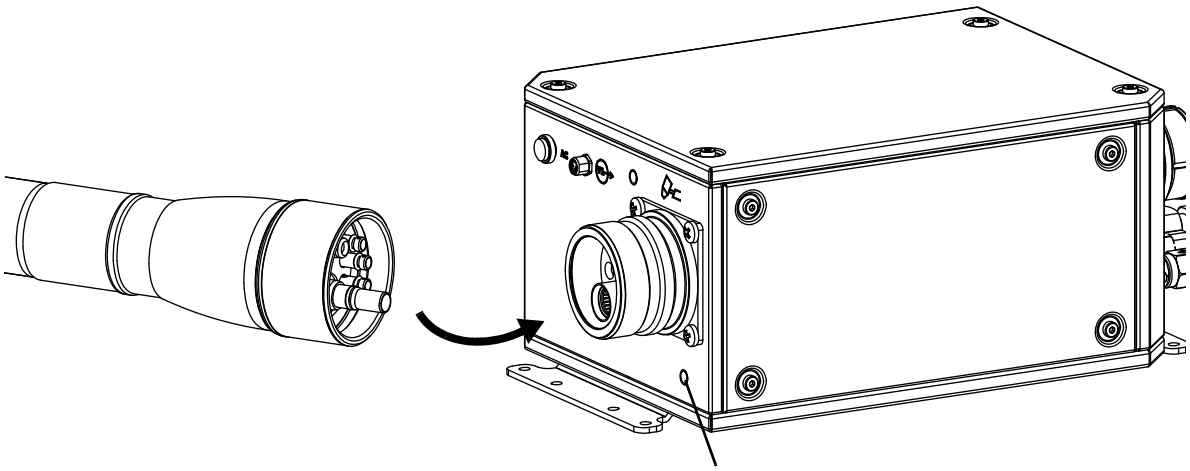


Remove the plug to access the ohmic wire if you use a third-party ohmic circuit.

2. Connect the torch-lead assembly to the TorchConnect console. Use your fingers to tighten the coupler on the torch-lead assembly. Do **not** use tools.

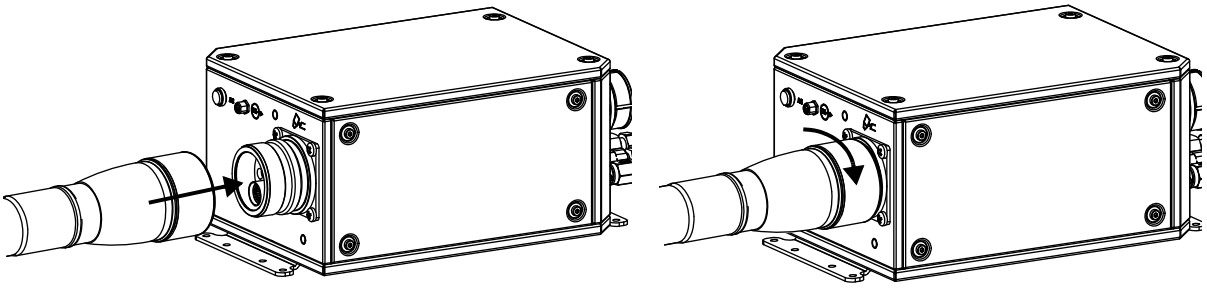

3. Connect the plasma valve cable to its connector. Use your fingers to tighten the connection. Do **not** use tools.

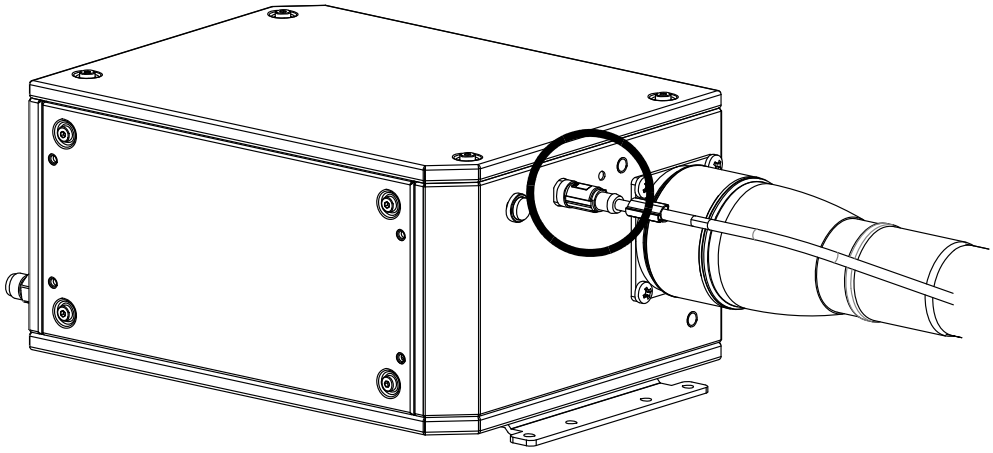

## Interchange the coolant-hose connections in the plasma power supply


The coolant-hose connections in the plasma power supply must be changed prior to XPR short torch operation. To do this, interchange the coolant-hose connections so that the color-coded bands between the hoses and fittings are red-to-green. Red-to-green connections are the opposite of the standard coolant-hose configuration.

If you do not interchange these connections, performance and consumable life during XPR short torch operation can be reduced.

A label (210750) (Figure 4) that comes with the XPR short torch shows how to interchange the coolant-hose connections. Hypertherm recommends that you bond the label to the outer surface of the rear panel of the plasma power supply.

Make sure to change to standard coolant-hose configuration prior to standard-torch operation.

**Figure 4**

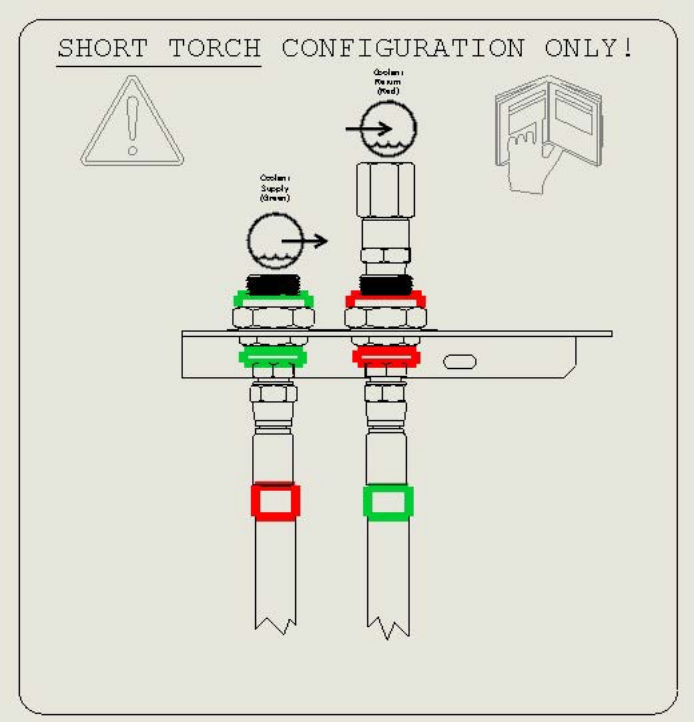


Follow these steps to interchange the coolant-hose connections in the plasma power supply:

1. Follow these steps to remove the power from the cutting system:
   a. Set the line-disconnect switch to the OFF position.
   b. Make sure that the power-indicator LED is **not** illuminated on the plasma power supply, gas connect console, and TorchConnect console.
2. Make sure that the supply-gas pressure is removed from the cutting system.
3. Remove the rear panel from the plasma power supply.

   If you have not done so already, bond the interchange label that comes with your XPR short torch to the outer surface of the rear panel of the plasma power supply.

4. Connect the coolant return hose (red) ❶ to the coolant supply fitting (green) ❷.
5. Connect the coolant supply hose (green) ❸ to the coolant return fitting (red) ❹.

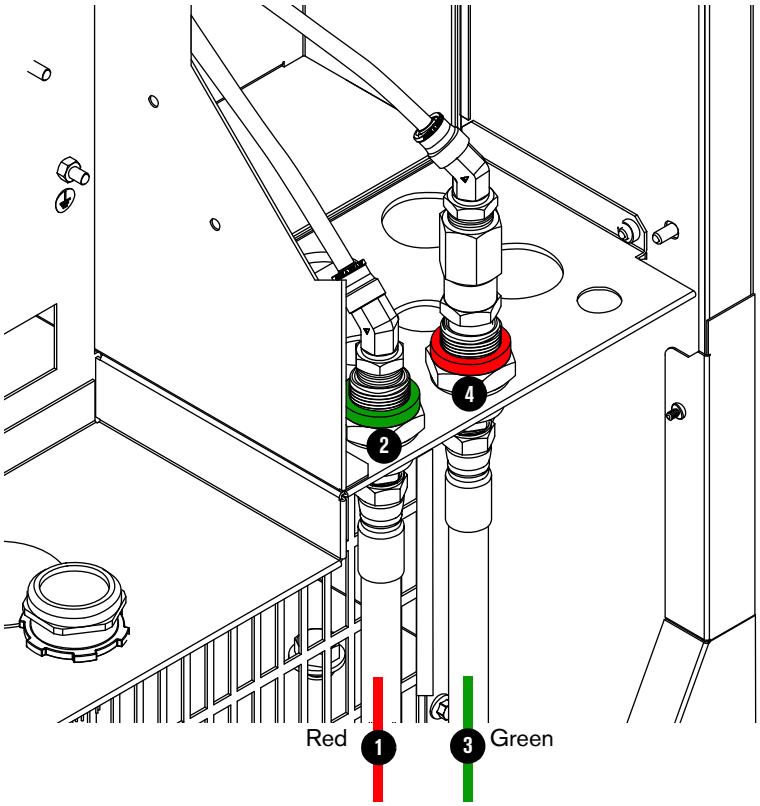


**6.** If the coolant hoses are already connected to the gas connect console, the cutting system is ready for XPR short torch operation. If they are not connected, follow these steps to make standard gas connect console connections:

**a.** Connect the coolant return hose (red) ❶ to the coolant return fitting (red, bottom) ❷.

**b.** Connect the coolant supply hose (green) ❸ to the coolant supply fitting (green, top) ❹.

Red-to-red and green-to-green are standard connections.

Never position the gas connect console at an angle or on its sides

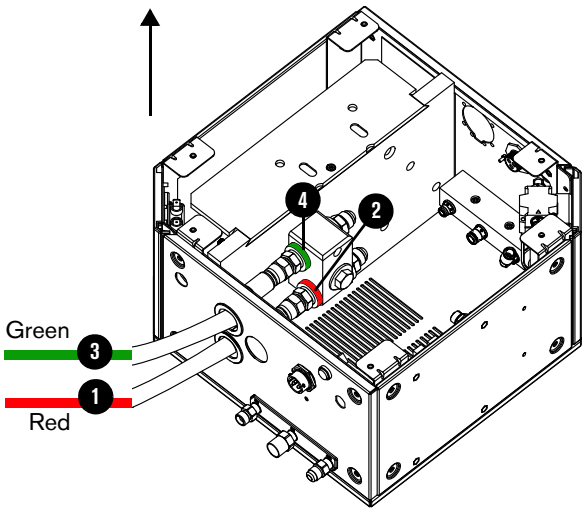


## Install the torch in the torch mounting bracket

Prior to installing the XPR short torch in the torch mounting bracket, you must attach the torch-lead assembly to the TorchConnect console. Refer to Prepare the cutting system for XPR short torch installation on page 21.

As the installer or user, you must supply the torch mounting bracket for your cutting system. Torch mounting brackets are available from Hypertherm. Refer to Parts List on page 33.


1. Follow these steps to remove the power from the cutting system:
   a. Set the line-disconnect switch to the OFF position.
   b. Make sure that the power-indicator LED is **not** illuminated on the plasma power supply, gas connect console, and TorchConnect console.
2. Make sure that the supply-gas pressure is removed from the cutting system.
3. Install the torch mounting bracket onto the torch lifter. Refer to the instruction manual that came with the torch lifter for information about how to do this.
4. Insert the XPR short torch with integrated lead into the torch mounting bracket.
5. Adjust the torch in the torch mounting bracket until the bracket is in the correct position around the torch collar ❶ and torch sleeve ❷, as shown in Figure 3. Make sure that the torch mounting bracket is not touching the torch head.

**Figure 3**

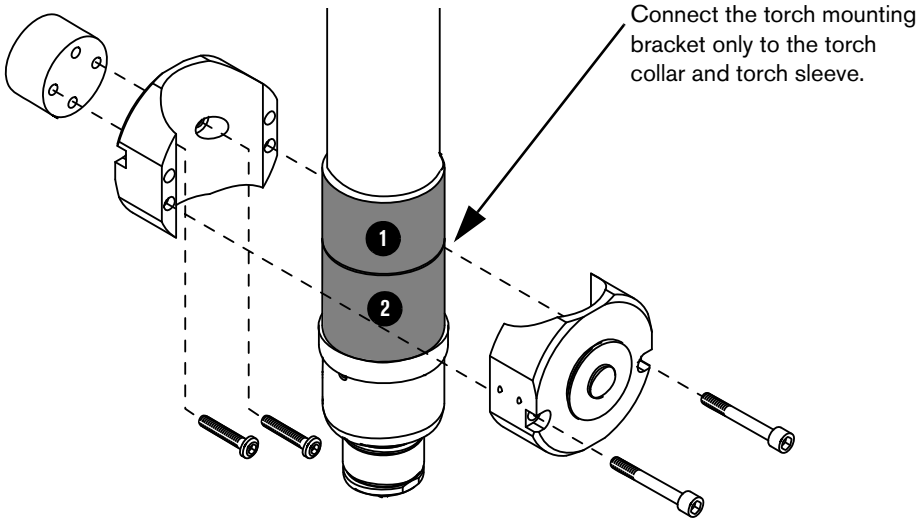

6. For standard-position (perpendicular) cutting, marking, and piercing, make sure that the torch is level (at a 0° angle) in all directions as shown in Figure 6:
   a. Remove the consumables, including the water tube, from the torch.
   b. Use a digital level to measure alignment.

**Figure 6**

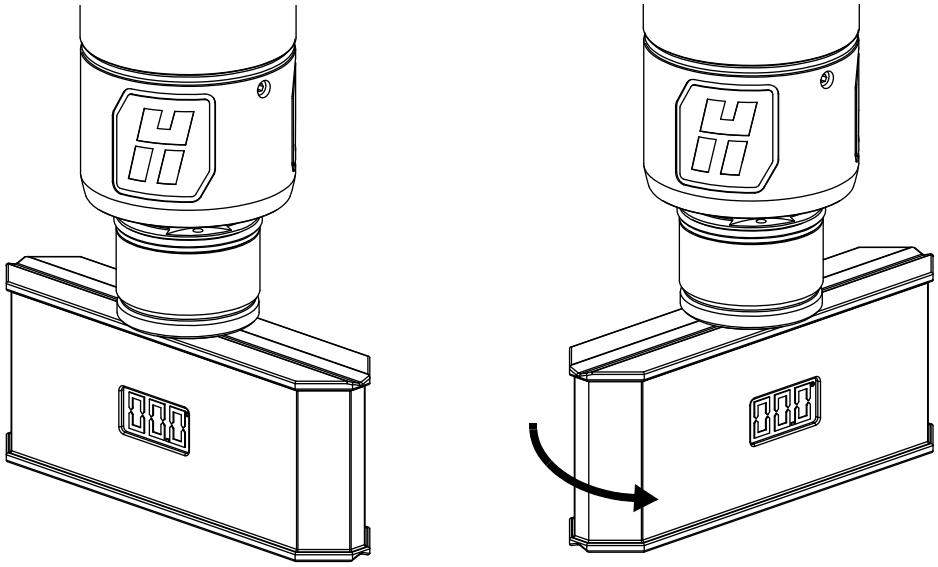


For bevel operation, the torch is at an angle (not perpendicular) to the workpiece. Torch angles from 0° to 52° are possible with the XPR short torch. For information about bevel cutting, refer to *Bevel cutting* in the instruction manual that came with your XPR cutting system.

7. Tighten the screws on the torch mounting bracket.

## Install the consumables

**⚠ WARNING**

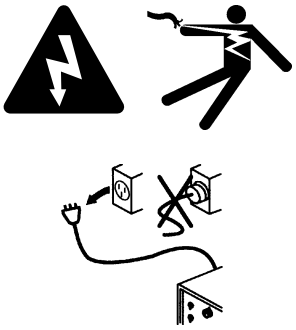

**ELECTRIC SHOCK CAN KILL**

Disconnect electrical power before doing installation or maintenance.

The line-disconnect switch must REMAIN in the OFF position until all installation or maintenance steps are complete.

In the United States, use a “lock out/tag out” procedure until installation or maintenance is complete. In other countries, follow the appropriate national and local safety procedures.

Refer to the *Safety and Compliance Manual* (80669C) for more safety precautions.

Prior to using the XPR short torch with integrated lead, you must install a complete set of consumables. Consumables are not included with the XPR short torch. For information about how to select and install consumables, refer to the instruction manual that came with your XPR cutting system.


The XPR short torch does **not** have a quick-disconnect feature.

## Use the cut charts

XPR cut charts are available in the *XPR Cut Charts Instruction Manual* (809810). The USB memory stick that came with your plasma power supply includes the *XPR Cut Charts Instruction Manual*. Technical documentation is also available at www.hypertherm.com/docs.

# 4 Part Replacement Procedure

**⚠ WARNING**

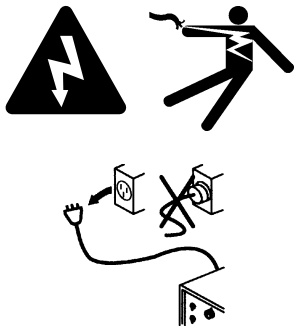

**ELECTRIC SHOCK CAN KILL**

Disconnect electrical power before doing installation or maintenance.

The line-disconnect switch must REMAIN in the OFF position until all installation or maintenance steps are complete.

In the United States, use a “lock out/tag out” procedure until installation or maintenance is complete. In other countries, follow the appropriate national and local safety procedures.


Refer to the *Safety and Compliance Manual* (80669C) for more safety precautions.

# Replace the solenoid valve in the torch


The solenoid valve is the only user-replaceable component in the XPR short torch. Replacement can be necessary to troubleshoot a leaky valve.

The solenoid valve (006155) and solenoid-valve tool (229918) are available from Hypertherm. Refer to Parts List on page 33.


1. Follow these steps to remove power from the cutting system:
   a. Set the line-disconnect switch to the OFF position.
   b. Make sure that the power-indicator LED on the plasma power supply, gas connect console, and TorchConnect console is **not** illuminated.
2. Remove the supply-gas pressure from the cutting system.
3. Remove the torch-lead collar:
   a. Loosen the hose clamp that holds the torch-lead collar in position. Move the clamp away from the torch.

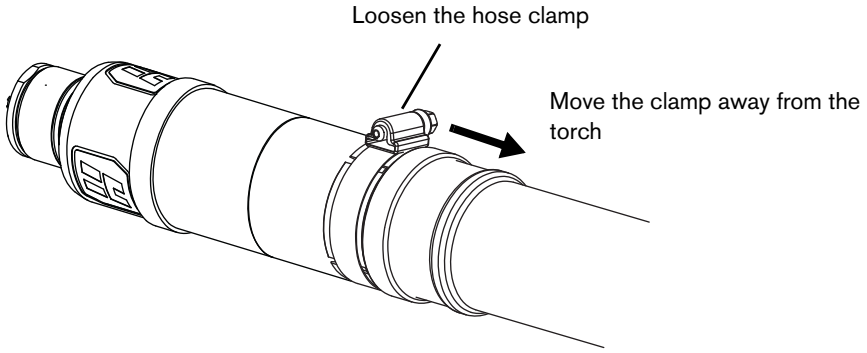



   b. Loosen the torch-lead collar. Move it away from the torch.

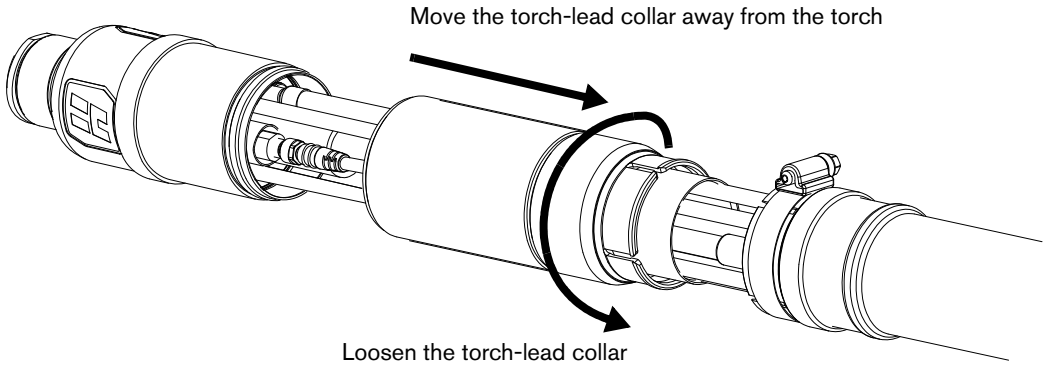


4. Disconnect the plasma valve connector.

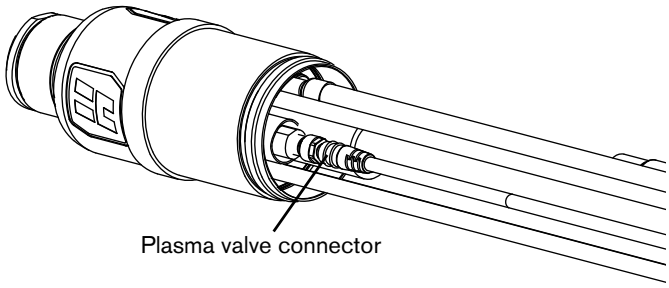



5. Use the tool (229918) to remove the solenoid valve.
6. Use the tool (229918) to install the solenoid valve.
7. Connect the plasma valve connector.

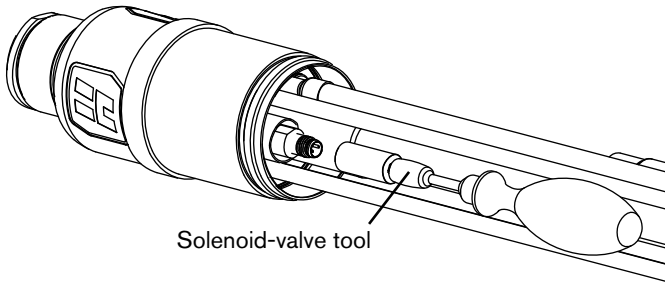


8. Install the torch-lead collar:
   a. Move the torch-lead collar back in position on the torch end of the torch-lead assembly.

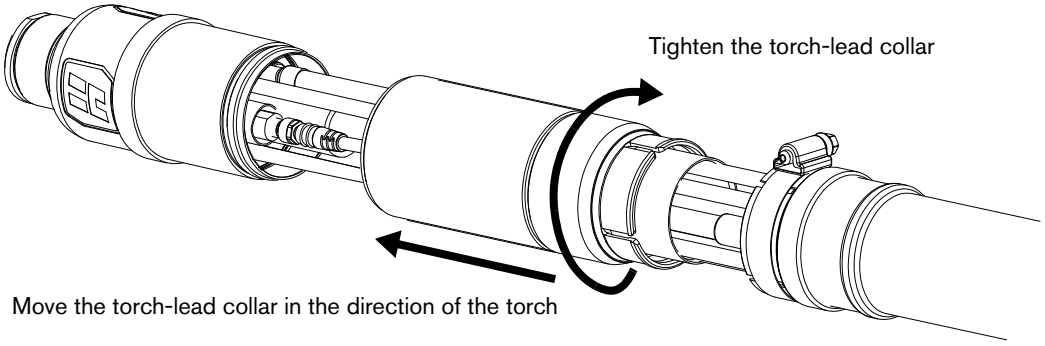



   b. Move the hose clamp back in position on the torch-lead collar. Tighten the hose clamp.

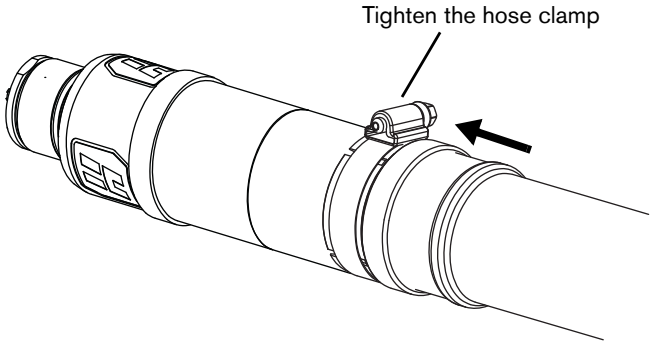


# 5 Parts List

## XPR short torch with integrated lead

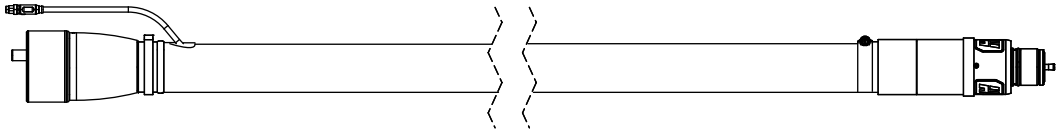

| Part number | Description | Quantity |
|---|---|---|
| 420750 | XPR short torch with integrated lead | 1 |

## Torch mounting bracket

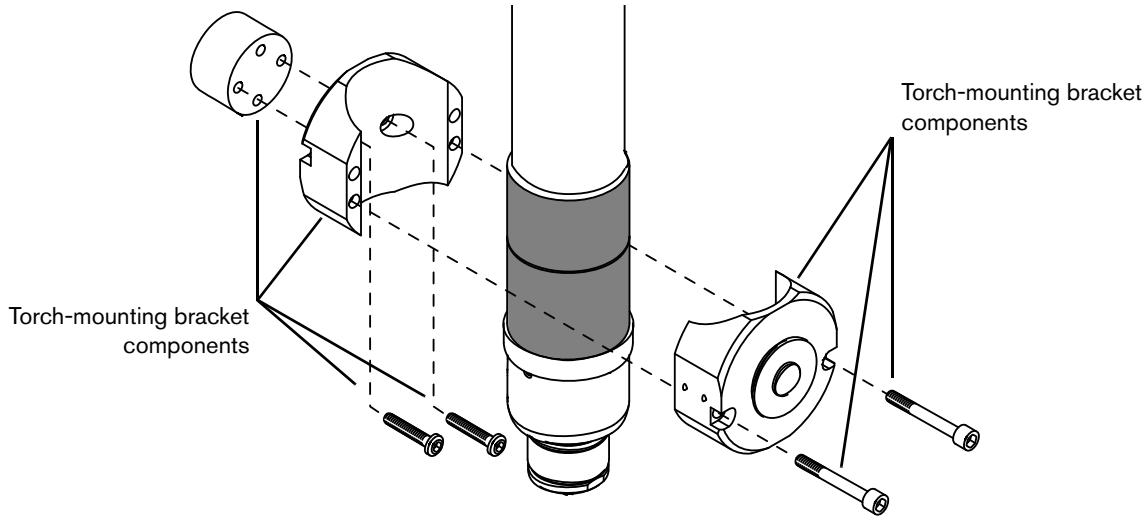



| Part number | Description | Quantity |
|---|---|---|
| 420744 | Torch mounting bracket: 57.15 mm (2.25 in.) diameter | 1 |

## Solenoid valve

| Part number | Description | Quantity |
|---|---|---|
| 006155 | Solenoid valve (V1) | 1 |

## Solenoid-valve tool

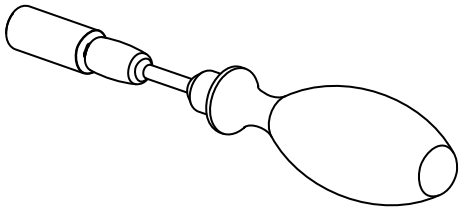

| Part number | Description | Quantity |
|---|---|---|
| 229918 | Solenoid-valve tool | 1 |