HYPERTHERM®
A Hypertherm Associates Brand


HPR® cartridge torch kit





HPR® cartridge torch kit

1. Select cartridge, lubricate o-rings
2. Install cartridge and retaining cap
3. Set process and cut

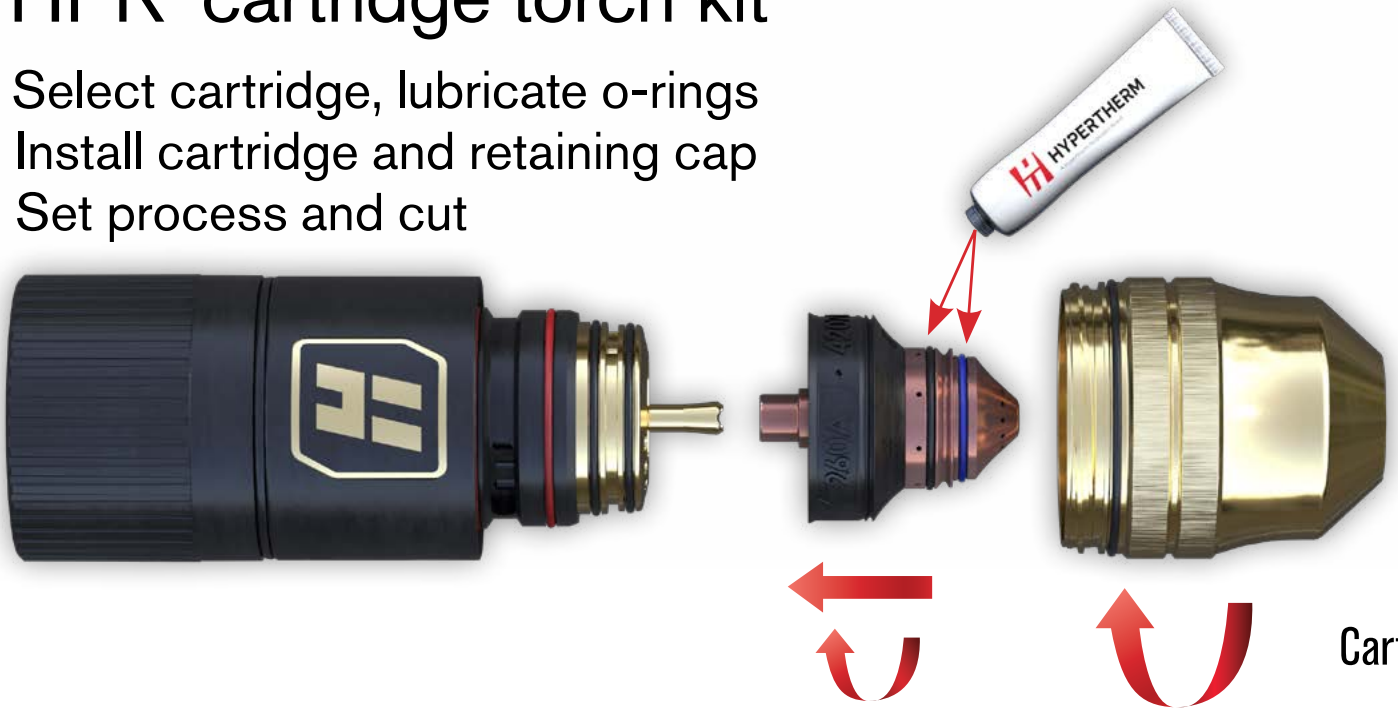

Cartridges sold separately

Scan bar code to get started or go to www.hypertherm.com/HPRcartridge-quickstart

© 8/2022 Hypertherm, Inc. Revision 3
10079145

HYPERTHERM®
A Hypertherm Associates Brand