



# EtherCAT® Devices Supported by EDGE® Connect CNCs

Application Note

809660 | Revision 12 | July 2018

**Hypertherm, Inc.**

Etna Road, P.O. Box 5010  
Hanover, NH 03755 USA  
603-643-3441 Tel (Main Office)  
603-643-5352 Fax (All Departments)  
info@hypertherm.com (Main Office Email)

**800-643-9878 Tel (Technical Service)**

technical.service@hypertherm.com (Technical Service Email)

**800-737-2978 Tel (Customer Service)**

customer.service@hypertherm.com (Customer Service Email)

**866-643-7711 Tel (Return Materials Authorization)****877-371-2876 Fax (Return Materials Authorization)**

return.materials@hypertherm.com (RMA email)

**Hypertherm México, S.A. de C.V.**

Avenida Toluca No. 444, Anexo 1,  
Colonia Olivar de los Padres  
Delegación Álvaro Obregón  
México, D.F. C.P. 01780  
52 55 5681 8109 Tel  
52 55 5683 2127 Fax  
Soporte.Tecnico@hypertherm.com (Technical Service Email)

**Hypertherm Plasmatechnik GmbH**

Sophie-Scholl-Platz 5  
63452 Hanau  
Germany  
00 800 33 24 97 37 Tel  
00 800 49 73 73 29 Fax

**31 (0) 165 596900 Tel (Technical Service)****00 800 4973 7843 Tel (Technical Service)**

technicalservice.emea@hypertherm.com (Technical Service Email)

**Hypertherm (Singapore) Pte Ltd.**

82 Genting Lane  
Media Centre  
Annexe Block #A01-01  
Singapore 349567, Republic of Singapore  
65 6841 2489 Tel  
65 6841 2490 Fax  
Marketing.asia@hypertherm.com (Marketing Email)  
TechSupportAPAC@hypertherm.com (Technical Service Email)

**Hypertherm Japan Ltd.**

Level 9, Edobori Center Building  
2-1-1 Edobori, Nishi-ku  
Osaka 550-0002 Japan  
81 6 6225 1183 Tel  
81 6 6225 1184 Fax  
HTJapan.info@hypertherm.com (Main Office Email)  
TechSupportAPAC@hypertherm.com (Technical Service Email)

**Hypertherm Europe B.V.**

Vaartveld 9, 4704 SE  
Roosendaal, Nederland  
31 165 596907 Tel  
31 165 596901 Fax  
31 165 596908 Tel (Marketing)  
**31 (0) 165 596900 Tel (Technical Service)**  
**00 800 4973 7843 Tel (Technical Service)**  
technicalservice.emea@hypertherm.com  
(Technical Service Email)

**Hypertherm (Shanghai) Trading Co., Ltd.**

B301, 495 ShangZhong Road  
Shanghai, 200231  
PR China  
86-21-80231122 Tel  
86-21-80231120 Fax  
**86-21-80231128 Tel (Technical Service)**  
techsupport.china@hypertherm.com  
(Technical Service Email)

**South America & Central America: Hypertherm Brasil Ltda.**

Rua Bras Cubas, 231 – Jardim Maia  
Guarulhos, SP – Brasil  
CEP 07115-030  
55 11 2409 2636 Tel  
tecnico.sa@hypertherm.com (Technical Service Email)

**Hypertherm Korea Branch**

#3904. APEC-ro 17. Heaundae-gu. Busan.  
Korea 48060  
82 (0)51 747 0358 Tel  
82 (0)51 701 0358 Fax  
Marketing.korea@hypertherm.com (Marketing Email)  
TechSupportAPAC@hypertherm.com  
(Technical Service Email)

**Hypertherm Pty Limited**

GPO Box 4836  
Sydney NSW 2001, Australia  
61 (0) 437 606 995 Tel  
61 7 3219 9010 Fax  
au.sales@Hypertherm.com (Main Office Email)  
TechSupportAPAC@hypertherm.com  
(Technical Service Email)

**Hypertherm (India) Thermal Cutting Pvt. Ltd**

A-18 / B-1 Extension,  
Mohan Co-Operative Industrial Estate,  
Mathura Road, New Delhi 110044, India  
91-11-40521201/ 2/ 3 Tel  
91-11 40521204 Fax  
HTIndia.info@hypertherm.com (Main Office Email)  
TechSupportAPAC@hypertherm.com  
(Technical Service Email)

© 2018 Hypertherm, Inc. All rights reserved.

EDGE, EDGE Connect, Phoenix, and Hypertherm are trademarks of Hypertherm Inc. and may be registered in the United States and/or other countries. EtherCAT is a trademark of Beckhoff Automation. All other trademarks are the property of their respective holders.

One of Hypertherm's long-standing core values is a focus on minimizing our impact on the environment. Doing so is critical to our, and our customers', success. We are always striving to become better environmental stewards; it is a process we care deeply about.

# Contents

<b>Introduction .....</b>	<b>4</b>
<b>Supported I/O modules.....</b>	<b>5</b>
Beckhoff .....	5
Wago.....	7
<b>Supported drives.....</b>	<b>9</b>
Bosch Rexroth .....	10
Delta .....	11
Kollmorgen.....	12
Mitsubishi.....	13
Panasonic .....	14
Supported A5B drives listed alphabetically.....	15
Yaskawa.....	16

# ***Introduction***

The following information is provided to Hypertherm channel partners for reference only, to help you select an EtherCAT component that is supported by EDGE Connect/T/TC CNCs.

The information represents what Hypertherm has tested in our labs and can verify is compatible with EDGE Connect CNCs. Other equipment may work, but we do not support equipment that we have not tested and verified.



This document is updated regularly. If you do not see a supplier or component of interest, please contact your Hypertherm sales representative or Hypertherm application engineer.



Work in partnership with your drive manufacturer to select and configure the drives for your cutting system. Refer to your drive manufacturer's drive documentation for technical information about the drives.

# ***Supported I/O modules***

## **Beckhoff**

---



Make sure you can remove power, including control (logic) power, from all I/O modules. Refer to your I/O module manufacturer's documentation for more information.

### **Supported I/O modules**

Many drive amplifiers have I/O available for use. The need for additional I/O modules depends on the total number of I/O and the I/O style required.

<b>Series</b>	<b>Model</b>	<b>Description</b>
E Series	EL1014	4 – channel digital input
	EL1809	16 – channel digital input
	EL2004	4 – channel digital output
	EL2008	8 – channel digital output
	EL2809	16 – channel digital output
	EL3001	1 – channel analog input
	EL3002	2 – channel analog input
	EL3004	4 – channel analog input
	EL3008	8 – channel analog input
	EL4004	4 – channel analog output
	EK1100	EtherCAT coupler
	EK1110	EtherCAT extension
	EK1814	4 – channel digital input and 4 – channel digital output

# Wago

---



For proper data transfer, a bus end module is required at the end of the field bus node.

Series	Model	Description
750	750-400	2-channel digital input
	750-430	8-channel digital input
	750-1405	16-channel digital input
	750-501	2-channel digital output
	750-530	8-channel digital output
	750-1504	16-channel digital output
	750-459	4-channel analog input
	750-559	4-channel analog output
	750-600	Bus end module
	750-627	Bus extension module
	750-628	Bus extension coupler module
	750-354	Fieldbus coupler

## **Supported I/O modules**



## ***Supported drives***

### **NOTICE**



- Make sure you can remove power, including control (logic) power, from all drives. Refer to your drive manufacturer's drive documentation for more information.
- Mixing of different brands of drives in one system is not supported.
- All drives must support and be configured for a 1 ms update rate.
- All drives must be set up as linear axes.
- Many drive amplifiers have I/O available for use. The need for additional I/O depends on the total number of I/O and the I/O style required. For a list of supported I/O modules, see Supported I/O modules on page 6.

## Bosch Rexroth

---

Series	Model	Firmware	Notes
IndraDrive C	HCS02.1E-W0XXX	MPB-18v20 — MPB-20v16	<ul style="list-style-type: none"> <li>■ Requires Generation 2 control section and optional ET card.</li> <li>■ One analog input per drive amplifier is supported.</li> </ul>
IndraDrive Cs	HCS01.1E-W00XXX	MPB-18v20 — MPB-20v16	<ul style="list-style-type: none"> <li>■ Basic version is supported.</li> <li>■ One analog input per drive amplifier is supported.</li> </ul>
IndraDrive C Economy	HCS01.1E-W00XXX	MPE-20V13 — MPB-20v16	<ul style="list-style-type: none"> <li>■ Basic version is supported.</li> <li>■ One analog input per drive amplifier is supported.</li> </ul>


For more information about Bosch drive setup and parameters, see the *Bosch Rexroth EtherCAT® Drives Supported by EDGE® Connect/T/TC CNCs* Application Note (809600).

## Delta

Series	Model	Firmware	Notes
ASDA-A2	ASDA-A2-E	1.643.366 and newer. Required for using parameters to change motor direction.	<ul style="list-style-type: none"> <li>■ Use firmware for ASDA drives only.</li> <li>■ 7 digital inputs per drive amplifier are supported.</li> <li>■ CNC control of the drive's digital outputs is not supported.</li> <li>■ Only use drives manufactured after April 20, 2018 with cutting systems in environments with potential high frequency. See the example below for information about the date code.</li> </ul>



Delta has made improvements to drives manufactured after April 20, 2018 to make newer drives more robust to EMI and RF. The manufacture date can be identified by the date code on the drive. The date code should be greater than 1816 (18 is the code for 2018 and 16 is the code for week 16). See the example below.

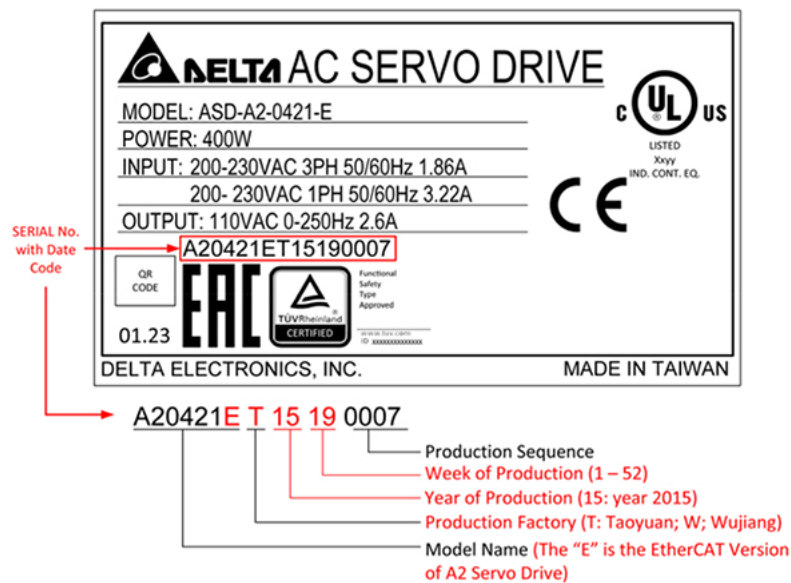

For more information about Delta drive setup and parameters, see the *Delta EtherCAT® Drives Supported by EDGE® Connect/T/TTC CNCs Application Note (809770)*.

## Kollmorgen

Series	Model	Firmware	Notes
AKD®	AKD-PXXXXX-NBEC-XXXX	V_01-14-00-002 and newer	<ul style="list-style-type: none"> <li>■ Use firmware for NBEC drives only.</li> <li>■ Inputs and outputs supported for each drive amplifier               <ul style="list-style-type: none"> <li>□ Digital - 7 inputs, 2 outputs</li> <li>□ Analog - 1 input, 1 output</li> </ul> </li> </ul>
	AKD-PXXXXX-NBCC-XXXX	V_01-14-00-002 and newer	<ul style="list-style-type: none"> <li>■ Use firmware for NBCC drives only.</li> <li>■ Inputs and outputs supported for each drive amplifier               <ul style="list-style-type: none"> <li>□ Digital - 7 inputs, 2 outputs</li> <li>□ Analog - 1 input, 1 output</li> </ul> </li> </ul>

For more information about Kollmorgen drive setup and parameters, see the *Kollmorgen EtherCAT® Drives Supported by EDGE® Connect/T/TC CNCs Application Note (809590)*.

## Mitsubishi

Series	Model	Firmware	Notes
MR-J4	All MR-J4 models	Amplifier: BCD-B46W500 B1H EtherCAT module: 1.10.01	<ul style="list-style-type: none"> <li>■ J3 motors <b>ONLY</b>.</li> <li>■ P06 (electronic gear numerator) is not supported.</li> <li>■ No I/O is supported on the drive amplifier. An I/O module on the EtherCAT network is required.</li> </ul>
MR-J4	All MR-J4 models	Amplifier: BCD-B46W500 B1H EtherCAT module: 2.00.03	<ul style="list-style-type: none"> <li>■ J4 and J3 motors.</li> <li>■ P06 (electronic gear numerator) is not supported.</li> <li>■ No I/O is supported on the drive amplifier. An I/O module on the EtherCAT network is required.</li> </ul>

For a list of supported I/O modules, see Supported I/O modules on page 6.

For more information about Mitsubishi drives and motors, setup, and parameters, see the *Mitsubishi EtherCAT® Drives Supported by EDGE® Connect/IT/TC CNCs* Application Note (809750).

## Panasonic

---

Series	Model	Firmware	Notes
Minas-A5B	See <i>Supported A5B drives listed alphabetically</i> on page 15 for a list of supported drives.	1.01	5 digital inputs and 1 Digital Output are supported.
Minas-A6B	MADLN01BE MADLN11BE MADLN05BE MADLN15BE MBDLN21BE MBDLN25BE MCDLN31BE MCDLN35BE MDDLN45BE MDDLN55BE MEDLN83BE MEDLN93BE MFDLNA3BE MFDLNB3BE	1.01	5 digital inputs and 1 Digital Output are supported.

For more information about Panasonic drive setup and parameters, see the *Panasonic EtherCAT® Drives Supported by EDGE® Connect/T/TC CNCs* Application Note (809760).

## Supported A5B drives listed alphabetically

MADHT1105B01	MBDHT2110BA1	MDDHT2412B91	MEDHT7364B91	MGDHTB4A2B01
MADHT1105B91	MBDHT2110BL1	MDDHT2412BA1	MEDHT7364BA1	MGDHTB4A2B91
MADHT1105BA1	MBDHT2510B01	MDDHT2412BL1	MEDHT7364BL1	MGDHTB4A2BA1
MADHT1105BD1	MBDHT2510B91	MDDHT3420B01	MFDHT5440B01	MGDHTB4A2BL1
MADHT1105BL1	MBDHT2510BA1	MDDHT3420B91	MFDHT5440B91	MGDHTC3B4B01
MADHT1107B01	MBDHT2510BL1	MDDHT3420BA1	MFDHT5440BA1	MGDHTC3B4B91
MADHT1107B91	MCDHT3120B01	MDDHT3420BL1	MFDHT5440BL1	MGDHTC3B4BA1
MADHT1107BA1	MCDHT3120B91	MDDHT3530B01	MFDHTA390B01	MGDHTC3B4BL1
MADHT1107BL1	MCDHT3120BA1	MDDHT3530B91	MFDHTA390B91	MHDHTB4A2B01
MADHT1505B01	MCDHT3120BL1	MDDHT3530BA1	MFDHTA390BA1	MHDHTB4A2B91
MADHT1505B91	MCDHT3520B01	MDDHT3530BL1	MFDHTA390BL1	MHDHTB4A2BA1
MADHT1505BA1	MCDHT3520B91	MDDHT5540B91	MFDHTA464B01	MHDHTB4A2BL1
MADHT1505BL1	MCDHT3520BA1	MDDHT5540BA1	MFDHTA464B91	MHDHTC3B4B01
MADHT1507B01	MCDHT3520BL1	MDDHT5540BL1	MFDHTA464BA1	MHDHTC3B4B91
MADHT1507B91	MDDHT2407B01	MEDHT4430B01	MFDHTA464BL1	MHDHTC3B4BL1
MADHT1507BA1	MDDHT2407B91	MEDHT4430B91	MFDHTB3A2B01	
MADHT1507BL1	MDDHT2407BA1	MEDHT4430BA1	MFDHTB3A2B91	
MBDHT2110B01	MDDHT2407BL1	MEDHT4430BL1	MFDHTB3A2BA1	
MBDHT2110B91	MDDHT2412B01	MEDHT7364B01	MFDHTB3A2BL1	

## Yaskawa

---

Series	Model	Firmware	Notes
Sigma-5	SGDV	<ul style="list-style-type: none"> <li>■ 5.0</li> <li>■ 5.04</li> <li>■ 6.00</li> </ul>	<ul style="list-style-type: none"> <li>■ Analog input is not supported on the drive. An I/O module on the EtherCAT network is required.</li> </ul>
Sigma-7	SGD7s	<ul style="list-style-type: none"> <li>■ 0023</li> </ul>	<ul style="list-style-type: none"> <li>■ 12 Digital Inputs and 3 Digital Outputs are supported.</li> </ul>

For more information about Yaskawa drive setup and parameters, see the *Yaskawa EtherCAT® Drives Supported by EDGE® Connect/T/TC CNCs* Application Note (809580).



For a list of supported I/O modules, see *Supported I/O modules* on page 5.